

MLI QUICK REFERENCE

Avery Dennison's MONARCH LANGUAGE INTERPRETER™ (MLI™) and this *Quick Reference* are intended to help you use the MONARCH® ADTP1 printer or MONARCH® ADTP2 printer, which were set up for use with ZIH Corp.'s ZPL II®. If you have any questions about using a MONARCH® printer with these data streams, please contact your Monarch representative.

This *Quick Reference* lists the ZPL II® commands (with any applicable notes) that the ADTP1/ADTP2 printers can interpret.

Note: Information in this document supercedes information in previous versions. Check our Web site (<http://printers.averydennison.com>) for the latest release and documentation information.

Selecting the Interpreter

When you turn on the printer, you must set the interpreter to MLI or MPCL to print non-MLI data streams.



To change this setting from the **Main Menu**, select **Setup**, **Interpreter**, **MLI**.

- ◆ The printer reboots automatically after selecting an interpreter. This process may take several seconds.
- ◆ When you print test labels with MLI set as the interpreter, the model number appears as **ADTP1 (MLI)** or **ADTP2 (MLI)**.

Overview of Differences

- ◆ ZPL II® formats have a reference point at the upper left-hand corner of the printed label. These printer's reference point is at the lower left-hand corner of the printed label.
- ◆ These MONARCH printers are center justified, maximum supply width is 4.2 inches wide, and the maximum image size is 4.09 inches.
- ◆ The MONARCH printers calibrate when it receives the first byte of data from the host or whenever the printhead is closed.
- ◆ The MONARCH printers, using the MLI™ interpreter, only report the following errors: 409-426; 497, 499, and 703-793. Refer to your printer's *Packet Reference Manual* for descriptions of these errors.

Setting MLI Options

The MLI options are listed in the table below.



Option	Choices	Default
Print Mode	Tear Off/Cutter	Tear Off
Supply Width	203 to 832	832
Supply Length	100 to 3900	1218

ZPL II is a registered trademark of ZIH Corp. ZIH Corp. and Avery Dennison are not related in any way, and ZIH Corp. has not licensed or otherwise sponsored the MONARCH® printers or the MONARCH LANGUAGE INTERPRETER™.

MONARCH®, MONARCH LANGUAGE INTERPRETER, EcoCut, and MLI are trademarks of Avery Dennison Corp.

TCADTP1MLIQR Rev. AF 12/20 ©2015 Avery Dennison Corp. All rights reserved. Classification: Avery Dennison - Public



Setting the Print Mode

The printer must be set for the correct print mode for your application: Tear Off or Cutter.



Select	To
---------------	-----------

Tear Off	Print tags or labels without using a cutter.
----------	--

Cutter	Prints tags or label with a cutter.
--------	-------------------------------------

Entering the Supply Width

The printer must be set for the width of the loaded supply. Follow these instructions any time you load supplies with a different supply width. Entered in 203 dots.



After you load supplies, select **Supply Width** from the MLI Menu.

Select	To
---------------	-----------


←	Decrease the supply width.
---	----------------------------

→	Increases the supply width.
---	-----------------------------

Note: Press the left function button to change the amount (by 1, 10, or 100).

Entering the Supply Length

Set the printer for a custom supply length, if necessary. Entered in 203 dots. This option sets the cut length with non-indexed supply for an Avery Dennison® Monarch® EcoCut™ Tabletop Printer 2.

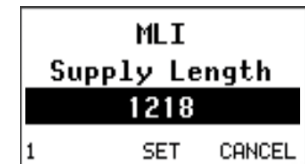

After you load supplies, select **Supply Length** from the MLI menu.

Select	To
---------------	-----------

←	Decrease the supply width.
---	----------------------------

→	Increases the supply width.
---	-----------------------------

Note: Press the left function button to change the amount (by 1, 10, or 100).

Interpreted ZPL II® Commands

The following lists the ZPL II® commands interpreted by the MONARCH® ADTP1/ADTP2 printer's MLI™ interpreter.

Imaging

ZPL II® Cnds	Notes:
^A	
^A@	
^B2	
^B3	
^B7	If the number of rows or columns is not specified, the bar code size is different.
^B8	No interpretation line (human readable char.) when narrow element is wider than 4 dots.
^B9	No interpretation line (human readable char.) when narrow element is wider than 4 dots.
^BA	
^BB	Supports CODABLOCK F
^BC	
^BD	Supports modes 2, 3, and 4.
^BE	No interpretation line (human readable char.) when narrow element is wider than 4 dots.
^BK	
^BL	
^BM	The printer only uses one mod-10 check digit.
^BO	Aztec bar codes are supported with Version 3.4 or greater firmware.
^BQ	QR Code bar codes are supported with Version 3.1 or greater firmware.
^BU	No interpretation line (human readable char.) when narrow element is wider than 4 dots.
^BX	The bar code size is different. Only use the value of 200 for the error correction level, no rectangular symbols or custom formats.
^BY	
^CF	
^CI	Only supports changing the character set to 28 (UTF-8) or 13 (Page 850).
~DB	No support for double-wide char. fonts.
^DF	We only support downloading to RAM.
~DG	Rotation of PNG type only
~DY	Rotation of PNG type only
~EF	
~EG	Graphics cannot be erased from within a format.
^FB	Use only for text justification.
^FC	
^FD	%m 2 digit month 01-12, %d 2 digit day of month 01-31, %Y 4 digit year 20xx, %y 2 digit year xx, %H 2 digit military hour 00-23, %l 2 digit hour 1-12, %M 2 digit minute 0-59, %S 2 digit second 0-59, %p 2 character AM\PM
^FH	

ZPL II is a registered trademark of ZIH Corp.

ZIH Corp. and Avery Dennison are not related in any way, and ZIH Corp. has not licensed or otherwise sponsored the MONARCH® printers or the MONARCH LANGUAGE INTERPRETER™.

Imaging (Continued)

ZPL II® Cmds	Notes:
^FN	
^FO	
^FR	
^FS	
^FT	The X and Y coordinates must be specified.
^FV	This command works the same as the ^FD command.
^FW	
^FX	
^GB	No support for rounded corners.
^GF	Rotation of PNG type only
^ID	
^IL	
^IS	
~JA	
^LH	
^LL	
^LR	
^LS	
^LT	
^MM	We support t and c. Command is ignored when the printer is set to ignore configuration packets.
^MU	
^PO	
^RF	No support for ^RFr or ^RFe.
^RT	Does not read an RFID tag, but is required if an ^HV command is used.
^SF	
^WT	Number of retries, etc. is not used.
^XA	
^XF	
^XG	No magnification.
^XZ	

ZPL II is a registered trademark of ZIH Corp.

ZIH Corp. and Avery Dennison are not related in any way, and ZIH Corp. has not licensed or otherwise sponsored the MONARCH® printers or the MONARCH LANGUAGE INTERPRETER™.

Parser

ZPL II® Cmds	Notes:
^CC ~CC	
^CD ~CD	Does not change delimiter to a period (.) character.
^CM	
^CT ~CT	
^CW	

Printer Setup

ZPL II® Cmds	Notes:
^MT	Command is ignored when the printer is set to ignore configuration packets.
^PQ	No support for the pause and serial number replication options.
^PR	Each unsupported speed is mapped to the printer's next lower speed. No support for backfeed speed or blank-label feeding speeds.
^PW	
^SC	
~SD	Command is ignored when the printer is set to ignore configuration packets.
~TA	Adjustment applies to the next label printed. Use 0 to turn off backfeed.
^XB	

Host

ZPL II® Cmds	Notes:
~HS	Fixed status response only.
^HV	Only used in conjunction with an RFID tag that uses the ^WT command followed by the ^RT command.

ZPL II is a registered trademark of ZIH Corp.

ZIH Corp. and Avery Dennison are not related in any way, and ZIH Corp. has not licensed or otherwise sponsored the MONARCH® printers or the MONARCH LANGUAGE INTERPRETER™.