
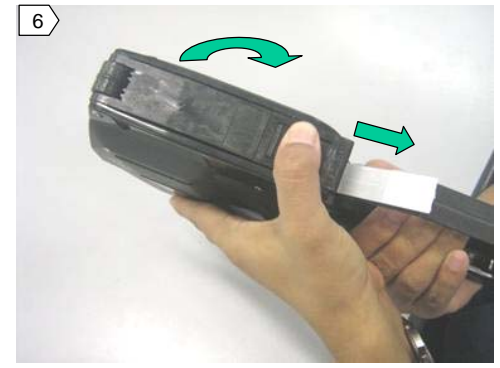
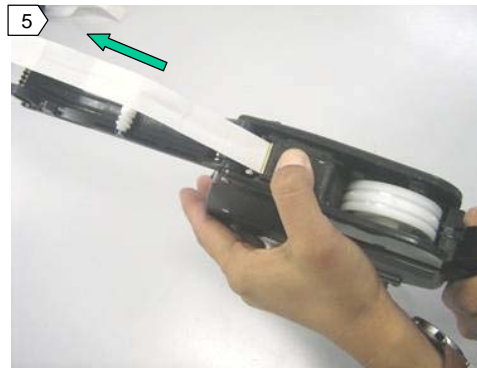
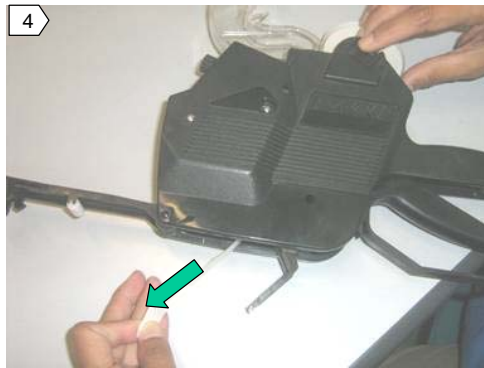
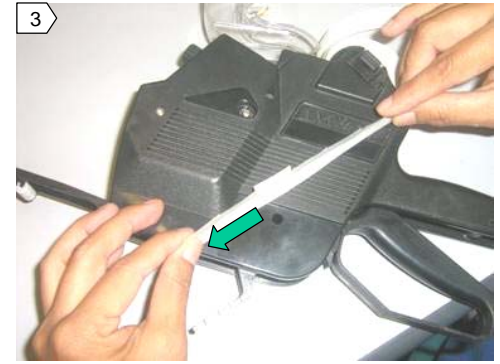
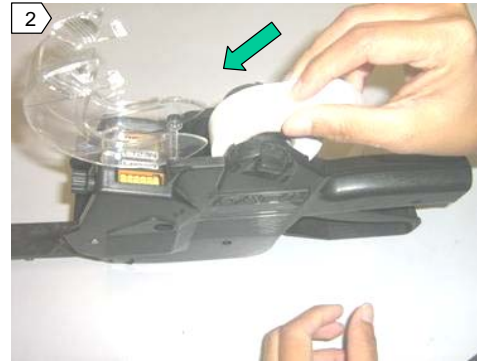


BP-2 Loading Instructions

Loading Instructions




- 1- Open the Bottom Cover, Label cover and pull out the Platen.
- 2- Place the Label in-side and beware the direction of label.
- 3- Fold the label for easy to push inside the hand labeler body.
- 4- Push the fold label inside the body and label will come out from platen and pull out the label from bottom.
- 5- Close back the Platen and make few punch to make sure label feeding.
- 6- Close the bottom cover until the you hear 'click' sound.
- 7 - Click the handle for testing

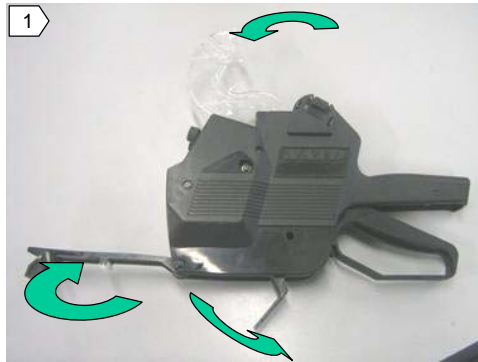

Changing the Ink Roller on the Model BP-2

Changing the Ink Roller

- 1- Pull out the ink roller holder
- 2- Hold the holder and take out the ink roller
- 3- Take the New ink roller and replace to the ink roller holder
- 4- Make sure the new ink roller assembly is at the correct position.
- 5- Press the ink roller until the same level with holder
- 6 - Place the Ink roller holder to the body.

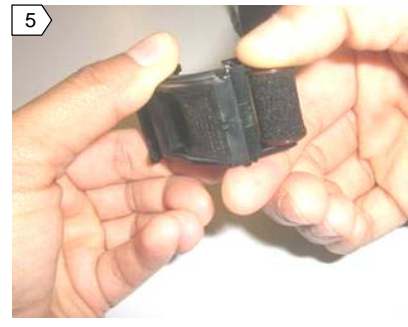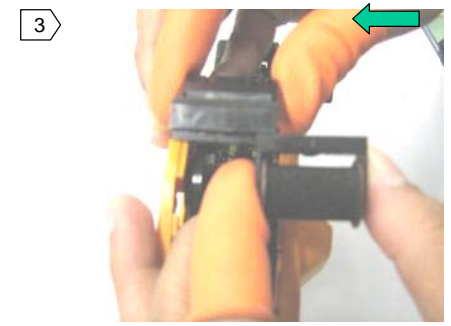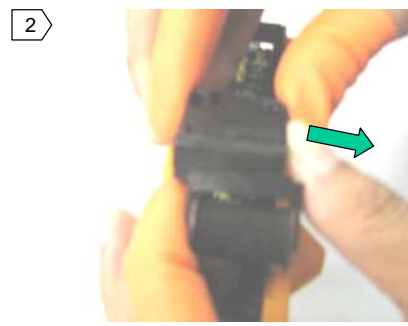

Avery Dennison Printer Systems Division
170 Monarch Lane Miamisburg, OH 45342
1-800-214-0872 Monday-Friday, 8 AM-5:00 PM EDT
www.monarch.averydennison.com
©2008 Avery Dennison. All rights reserved. Printed in U.S.A.