

Pathfinder® 6057 Printer Instructions

Weights and Measures

Overview

- ◆ Transfer files to the printer
- ◆ Calibrate supplies
- ◆ Log on, enter/store information, and select retail or supermarket pricing
- ◆ Set system processing parameters
- ◆ Scan bar code and enter price with optional description
- ◆ Print list of scanned items with bar codes and prices
- ◆ Scan list at Point of Sale (POS) to compare prices and enter discrepancies on the printer
- ◆ Print list of discrepancies or summary reports
- ◆ Clear data to start next audit
- ◆ Check the battery charge level



Transferring Files to the Printer

To transfer files between the printer and a computer, use Microsoft® ActiveSync® Synchronization Software on your computer. See the *USB Driver Installation Guide* for more information.

Startup

From the Windows® **Start Menu** select **Programs**, then **WeightsMeasures**.

Logging On

Note: Refer to the *Operator's Handbook* for information about data entry modes.

1. **Change County:** (enter 1–13 characters). Select **Enter**.

Note: Only available at initial prompt.

2. **Enter I.D.:** (1–10 characters). Select **Enter**.
 - ◆ The software remembers the last ID and store name input. Select **Skip** to keep them the same and open the main menu.
3. **Enter Name:** (Store Name, 0–25 characters). Select **Enter**.
4. **Enter Address:** (0–17 characters). Select **Enter**.
5. **Enter City:** (0–17 characters). Select **Enter**.
6. Select **Retail** to allow percent off for discounted prices –OR– select **Supermarket** for non-discounted prices. Select **Enter**.

Processing Merchandise

Note: When prompted for price, do not use decimal points. For example, enter 169 for \$1.69.

1. Select **Collect Data**.
2. Set up Aisle Options.

Aisle Set Up Options

1. Select **Aisle** from the toolbar (Repeat steps 2-4 before each new scan).
2. Enter aisle number and select **Enter**.
3. Select **Description** from the tool bar if you do not use the optional database.
4. Enter aisle description and select **Enter**.

Scanning Items

1. At the Scan Item prompt, scan or enter a bar code.
2. Supermarket only.
 - a. Enter Price and select **Enter**.
 - b. Enter Bonus Price and select **Enter** OR select **Enter** for no bonus price.
- Retail only.
 - a. Enter Price and select **Enter**.
 - b. Enter Discount (1–2 digits) –OR– select **Enter** for no discount.

3. **Enter Total Qty** (only if the Prompt for Quantity parameter is set). Enter the quantity of the current item (1–3 digits).
4. Select **Enter** and repeat steps 1-3.
5. When finished, select **Done**.

Deleting Items

1. Select **Collect Data**.
2. Select **Delete Item** from the tool bar.
3. Scan or enter a bar code. Select **Enter**.
4. Select **Yes** from the Delete Item menu.

Printing Data

1. Select **Print Data** to print collected data.
2. Select the items to print.
 - c. Select the **All** radio button to print all items in the list then select **Yes**.
 - d. Select the **Single Item** radio button to pick an item to print then select **Enter**.
 - e. Select the **Range** radio button to print a range of items. Enter the beginning and ending number of the range then select **Enter**.

Recording Errors

1. Select **Record Errors**. (Supermarket only)
Select 1 to test against regular shelf price
–OR– 2 to test against bonus card price.

Note: **Supermarket only.** If errors exist for both shelf prices and bonus card prices, perform the **Record Errors** function twice.

2. **Scan** item bar code.
3. Enter **Scanner Price** (1–6 digits). Select **Enter**.
4. Repeat steps 2–4 until finished.
5. Select **Done** to return to Main Menu.

Printing Errors

Select **Print Errors** (if necessary). Select **Enter**.

Printing a Summary

Select **Print Summary** to print the summary report.

Setting System Parameters

Select **Options** from the tool bar, then select an option from the Options Menu. A checkmark appears next to the enabled option.

Selecting Enable Quantity

To enter a quantity for each item, select **Enable Qty** from the Options Menu. The count, items correct, incorrect, over, and under print when you print a summary report.

System Administrators Only.

1. Select **UPC/EAN** to enable printing UPC or EAN bar codes, depending on the data –OR– if not enabled, prints with the default bar code.

2. Select **Default Barcode** to enable **Set Code 128** (22 characters maximum) as the default bar code –OR– select **Set Code 39** (16 characters maximum) as the default bar code.
3. Select **Clear all Data** then select **Yes** to clear all collected data from memory.
4. Select **Set Supply Type** to enable either **Paper**, **Fax**, or **Synthetic** supply type.
5. Select **Print Item(s)**.
 - a. Select the **All** radio button to print all items in the list then select **Yes**.
 - b. Select the **Single Item** radio button to pick an item to print then select **Enter**.
 - c. Select the **Range** radio button to print a range of items. Enter the beginning and ending number of the range then select **Enter**.

Note: Select **Clear** to delete an error.

Using the Help Menu


1. Select **Help** from the tool bar.
2. Select **Battery** to display battery levels. Check the backup, main, and remaining print battery levels.
3. Select **X** to exit.

Note: Refer to the *Operator's Handbook* for more information about checking the battery levels.

4. Select **Feed** to advance the supply one label.
5. Select **Calibrate** to calibrate the supply.

6. Select **Instructions** to display descriptions available for each of the following commands: Start Up, UPC File, Collect Data, Print Data, Record Errors, Print Errors, Print Summary, and Options.
7. Select **About** to view the printer's software version and other information.

Checking the Battery

1. From the status bar of the display select the **Battery Icon**  -OR- select **Help**, then **Battery**.
2. The **Battery Levels** window is displayed. Check main and backup battery levels as well as remaining power for the system and printing.
3. Select **OK** to exit.

Note: Refer to the *Operator's Handbook* for more information about checking the battery status, and onboard flash backup.

Pathfinder® is a trademark of Avery Dennison Corporation.

Microsoft, Windows, and ActiveSync are trademarks of Microsoft Corporation in the United States and/or other countries.

Visit www.monarch.averydennison.com for sales, service, supplies, information, and telephone numbers of our International locations.

1-800-543-6650 (In the USA)

1-800-387-4740 (In Canada)