

6059 PRINTER UPDATE GUIDE

Use the Avery Dennison® Pathfinder® 6059 printer's **Update Tools** Application to install/load applications, update the printer's firmware, and update the printer's core (system).

Make sure the battery is fully charged before performing any updates.


Updating the Printer's Core (System)

Use a USB thumb drive, formatted to FAT32, to transfer the .ZIP file to your printer.


The printer's core system (including Print Engine, Display Board, and RFID firmware) is updated. Customer-installed applications remain when the core is updated.

Updates must be processed in sequential order. *For example*, a printer at Version 1.1 must update to V1.2, then to V1.3 (latest). You cannot update from V1.1 to V1.3.

1. Open the **Update Tools** application.
2. Insert the thumb drive into the printer.
3. Tap **System** and **Browse**.
4. Select your thumb drive.

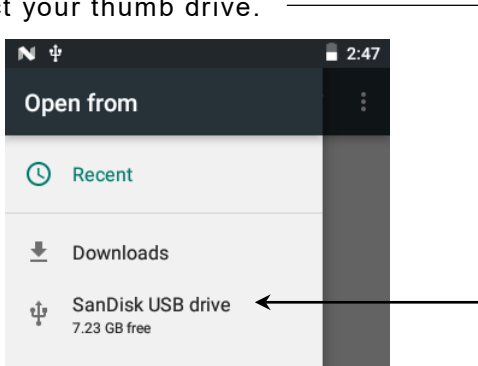

5. Navigate to the saved ZIP file on the thumb drive.

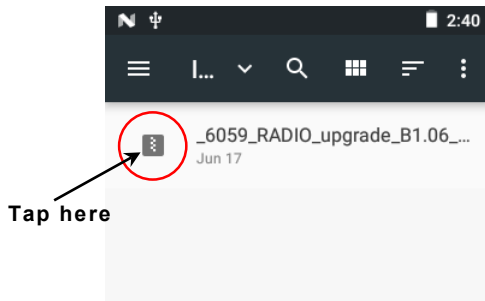

6. Tap the .ZIP file's icon. You see a checkmark and **OPEN** appears in the top right corner. If you do not see the checkmark, press ⏪ (Back) and tap the file's icon again. Tap **OPEN**.

