


ETHERNET INFORMATION

Connectivity solutions are becoming increasingly important – even critical in some business situations. Monarch® now offers our internal Ethernet connectivity solution. This state of the art connectivity solution makes it easy to set up, manage, and monitor a Monarch® 9840™ printer linked to an Ethernet connection. You must use version 6.5 or greater of the 9840 printer. The Ethernet print server is an internal option and should be ordered at the time the printer is ordered.

Setting Up the Print Server

The Monarch® Print Server (Ethernet) is extremely easy to set up. To use the Ethernet print server, upper DIP switch 8 must be turned ON. This enables the bi-directional communication.

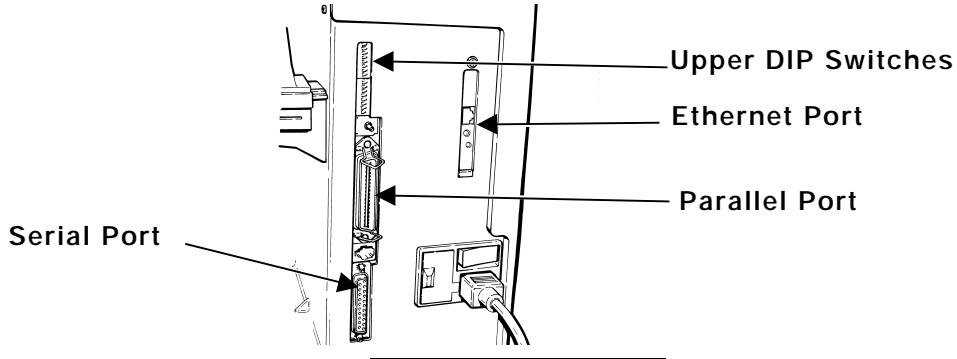

Do not plug any cables into the parallel port when using the Ethernet port.

A printer with an Ethernet port cannot use the parallel port. However, the serial port is still active.

Configuring the Print Server

Once hooked up with the printer, the print server is configured with the commonly used HP Jet Admin™ or HP Web JetAdmin™. The print server is designed for compatibility with third party administration software. Check with your System Administrator for details about configuring the Ethernet print server.