

Packet Reference Manual

Monarch® Pathfinder® Ultra®
Platinum Printer

```
{F,1,A,R,E,200,200,"FMT1" ;  
T,1,10,V,22,55,1,1,1,1,B,L,0,0 ;  
C,140,40,0,1,2,1,B,L,0,0,"SALE!",1 ;  
B,2,12,F,85,40,1,2,40,5,L,0 ; }
```

```
{B,1,N,1 ;  
1,"$29.95" ;  
2,"02802811111" ; }
```



SALE!
\$29.95



SALE!
\$29.95



SALE!
\$29.95



Each product and program carries a respective written warranty, the only warranty on which the customer can rely. Avery Dennison Corp. reserves the right to make changes in the product, the programs, and their availability at any time and without notice. Although Avery Dennison Corp. has made every effort to provide complete and accurate information in this manual, Avery Dennison Corp. shall not be liable for any omissions or inaccuracies. Any update will be incorporated in a later edition of this manual.

©2005 Avery Dennison Corp. All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form by any means, without the prior written permission of Avery Dennison Corp.

WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CANADIAN D.O.C. WARNING

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicte par le ministère des Communications du Canada.

Trademarks

Monarch®, Pathfinder®, Ultra®, and 6039 are trademarks of Avery Dennison Retail Information Services LLC.

Avery Dennison® is a trademark of Avery Dennison Corporation.

Microsoft, Windows, and NT are trademarks of Microsoft Corporation.

Hewlett-Packard is a trademark of Hewlett-Packard Company.

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

UFST, Monotype, the Monotype logo, and CG Triumvirate are trademarks of Monotype Imaging, Inc.

LITHIUM - ION RECHARGEABLE BATTERY.
FOR PROPER RECYCLING OR DISPOSAL, CALL
YOUR LOCAL SERVICE OFFICE.

Avery Dennison Printer Systems Division
170 Monarch Lane
Miamisburg, OH 45342



Li-Ion



TABLE OF CONTENTS

GETTING STARTED	1-1
Creating an MPCLII Format Packet	1-2
Using MPCLII Conventions	1-3
MPCLII Punctuation	1-3
Standard Syntax Guidelines	1-3
Starting with a Design	1-4
Determining Format Contents	1-4
Determining the Print Area	1-4
Drawing Rough Sketches	1-5
Using Supply Layout Grids	1-5
Considering Field Types	1-6
Considering Fonts	1-6
Using the Format Worksheet	1-6
Filling in the Format Worksheet	1-6
DEFINING FIELDS	2-1
Defining the Format Header	2-2
Defining Text Fields	2-3
Defining Bar Code Fields	2-7
Defining Constant Text Fields	2-14
Defining Line Fields	2-17
Line Types	2-17
Defining Box Fields	2-19
DEFINING FIELD OPTIONS	3-1
Applying Field Options	3-2
Combining Field Options	3-2
Option 1 (Fixed Data)	3-2
Option 4 (Copy Data)	3-3
Merging Fields	3-3
Sub-Fields	3-4
Option 30 (Pad Data)	3-4
Sample Use for Padding	3-4
Option 31 (Calculate Check Digit)	3-4
Option 42 (Price Field)	3-5
Option 50 (Bar Code Density)	3-5
Option 51 (PDF417 Security/Truncation)	3-6
Option 52 (PDF417 Width/Length)	3-6
Option 60 (Incrementing/Decrementing Fields)	3-7
Fixing the First Number in the Incrementing Sequence	3-7
Option 61 (Re-image Field)	3-8

Using Check Digits	3-9
Sum of Products Calculation	3-9
Sum of Digits Calculation	3-10
CREATING GRAPHICS	4-1
Overview of Bitmapped Images	4-2
Determining a Method	4-2
Designing Bitmapped Images	4-2
Special Considerations	4-3
Using the Hex Method	4-3
Using the Run Length Encoding Method	4-5
Determining How to Store the Image	4-6
Using RAM	4-6
Using Temporary Storage	4-6
Using Flash	4-6
Creating a Graphic Packet	4-7
Positioning the Graphic Image	4-7
Defining the Graphic Header	4-8
Creating Bitmap Fields	4-9
Creating Next-Bitmap Fields	4-9
Creating Duplicate Fields	4-10
Sample Hex Graphic Packet	4-10
Sample Run Length Graphic Packet	4-11
Placing the Graphic in a Format	4-12
Defining the Graphic Field	4-13
Sample Bitmap Graphic Image	4-13
CONFIGURING THE PRINTER	5-1
Using Online Configuration Packets	5-2
Configuration Syntax Guidelines	5-3
Defining the System Setup Packet	5-3
Defining the Supply Setup Packet	5-4
Defining the Print Control Packet	5-5
Defining the Monetary Formatting Packet	5-6
Defining the Control Characters Packet	5-7
Using Immediate Commands	5-7
Enabling Immediate Commands	5-7
Sending Immediate Commands	5-8
Defining the Communication Settings Packet	5-10
Defining the Memory Configuration Packet	5-10
Checking Current Buffer Sizes	5-11
About Memory Buffers	5-11
Buffer Worksheet	5-13
Buffer Allocation Considerations	5-13
Memory Considerations with Downloaded TrueType Fonts	5-14

Clearing Packets from Memory	5-14
Using the Font Packet.	5-15
Uploading Format Header Information	5-17
PRINTING	6-1
Defining the Batch Control Field	6-2
Defining Batch Data Fields	6-2
Using Special Characters in Batch Data	6-3
Merged or Sub-Fields	6-3
Incrementing Fields.	6-3
Downloading Methods	6-3
Sequential Method	6-3
Batch Method	6-4
Batch Quantity Zero Method	6-4
Modifying Formats	6-4
Optional Entry Method	6-4
TROUBLESHOOTING	7-1
Printing Diagnostics Labels.	7-2
Reading Diagnostics Labels	7-2
If You Receive an Error Message	7-2
Calling Technical Support	7-2
Data Errors	7-3
Format Errors	7-3
Batch Errors	7-5
Option Errors.	7-5
Online Configuration Errors.	7-6
Check Digit Errors.	7-8
Graphic Errors.	7-8
Communication Errors	7-9
Data Formatting Failures	7-9
Machine Faults	7-10
Flash Memory Errors.	7-11
Memory Expansion Errors.	7-12
Hard Printer Failure Errors	7-12
PRINTER OPTIMIZATION	8-1
Adjusting the Print Quality.	8-2
Reducing Imaging Time	8-2
General Format Tips and Hints	8-3
SAMPLES	A-1
Sample UPCA Format Packet	A-2
HangTag Example	A-2
Tag Example.	A-2
Label Example	A-2

Receipt Format Example	A-3
Label Sample 2.....	A-3
Label Sample 3.....	A-3
Sample MaxiCode Packets	A-4
Mode 0 (Obsolete) Sample.....	A-5
Mode 2 Sample.....	A-5
Mode 3 Sample.....	A-6
Sample Data Matrix Packets	A-7
Square Data Matrix Packet.....	A-7
Rectangular Data Matrix Packet.....	A-7
Sample Data Matrix with Function 1.....	A-7
Sample Quick Response Packets	A-8
Entering Batch Data for QR Code.....	A-8
QR Code Packet.....	A-9
Structured Append Mode	A-9
Structured Append QR Code Packet	A-10
Sample GS1 DataBar Packets	A-10
GS1 DataBar with Function 1	A-10
GS1 DataBar EAN13 with Composite	A-10
GS1 DataBar 14 Stacked Omni Directional	A-10
GS1 DataBar Expanded	A-10
GS1 DataBar Expanded (no composite).....	A-10
 FONTS	 B-1
Bitmap Font Information	B-4
Monospaced Font Magnification.....	B-4
Proportional Font Magnification	B-5
Scalable Font Information.....	B-14
TrueType Font Information	B-15
Downloading TrueType Fonts.....	B-15
Using International Fonts	B-15
Selecting a Symbol Set.....	B-16
International Font Sample.....	B-17
Licensing Your Fonts	B-17
Locating the Font Number in a Font Packet.....	B-17
 SYMBOL SETS/CODE PAGES	 C-1
Entering Extended Characters	C-2
Using International Character Sets/Code Pages	C-2
Internal Symbol Set	C-2
ANSI Symbol Set	C-3
Bold Character Set	C-3
OCRA Character Set	C-4
Code Page 100 (Macintosh).....	C-4
Code Page 101 (Wingdings)	C-5

Code Page 437 (Latin U.S.)	C-5
Code Page 850 (Latin 1)	C-6
Code Page 852 (Latin 2)	C-6
Code Page 855 (Russian)	C-7
Code Page 857 (IBM Turkish)	C-7
Code Page 860 (MS-DOS Portuguese))	C-8
Code Page 1250 (Latin 2)	C-8
Code Page 1251 (Cyrillic)	C-9
Code Page 1252 (Latin 1)	C-9
Code Page 1253 (Greek)	C-10
Code Page 1254 (Turkish)	C-10
Code Page 1255 (Hebrew)	C-11
Code Page 1256 (Arabic)	C-11
Code Page 1257 (Baltic)	C-12
Code Page 1258 (Vietnamese)	C-12
ASCII to Hexadecimal Conversion Chart	C-13
Binary to Hex Conversion Chart	C-16
Dot to Run Length Encoding Chart	C-20
ON (Black) Dots	C-20
OFF (White Dots)	C-20
FORMAT DESIGN TOOLS	D-1
Batch Worksheet	D-2
Check Digit Worksheet	D-3
Supply Layout Grid - English	D-4
Supply Layout Grid - Metric	D-5
Supply Layout Grid - Graphic (Dots)	D-6
Format Worksheet	D-7
GLOSSARY	G-1

GETTING STARTED



Before you read this manual, review the printer information in the Operator's Handbook.

About This Manual

This manual is for the developer who is creating and designing custom formats for the Monarch® Pathfinder® Ultra® Platinum 6039™ printer. The printer operates on a Microsoft® Windows-based CE platform.

Note: You must develop an application that uses the packets you create. Refer to the Programmer's Manual for information about developing an application.

This chapter creates a sample Monarch® Printer Control Language II (MPCLII) packet.

Standard Features

The following features are standard on the printer:

Feature	6039
DPI	203
Max. Print Image	1.89" x 3.65"
Print Speed	Up to 4" per second
LCD	Touch screen display
Number of Keys	16
Application Memory (Windows CE)	32 MB RAM 64 MB Flash
Printer Memory	4 MB RAM 4 MB Flash
Prints 2D Bar Codes	Yes
On-Demand Sensor	Yes
Supports International fonts	Yes

Creating an MPCLII Format Packet

A format defines which fields appear and where the fields are printed on the label. The printer requires this information in a special form. This section describes how to create a sample MPCLII format packet.

Make sure supplies are loaded, you have a fully charged battery, the printer is connected to a host and ready to receive data, and you have software in the printer. Refer to your *Operator's Handbook* for more information.

1. Type the following format header in any text editor:

```
{F,25,A,R,E,200,200,"FMT-25" |
```

2. Type the following constant text field:

```
C,140,40,0,1,2,1,W,C,0,0,"SAMPLE FORMAT",1 |
```

3. Type the following bar code field:

```
B,1,12,F,85,40,1,2,40,5,L,0 |
```

4. Type the following text field:

```
T,2,18,V,50,50,1,1,1,1,B,L,0,0,1 | }
```

For detailed information about the format header, text, constant text, and bar code fields, see Chapter 2, "Defining Fields." For information about batch packets, see Chapter 6, "Printing."

You have created a format packet for your MPCLII printer. Now, a batch packet must be created before you can print the format.

5. Type the following batch header, after the text field line:

```
{B,25,N,1 |
```

6. Type the following bar code data:

```
1,"02802811111" |
```

7. Type the following text field data:

```
2,"TEXT FIELD" | }
```

8. Save your file as SAMPLE.FMT.

9. For your application to use the format, use the Ultra.Net library functions in the *Programmer Manual*.

SAMPLE FORMAT



TEXT FIELD

Using MPCLII Conventions

Here are some guidelines to follow when using MPCLII.

MPCLII Punctuation

Use the following symbols when creating MPCLII packets:

Character	Decimal Value	Description
{ (left bracket)	123	start of header
} (right bracket)	125	end of header
(vertical bar)	124	field separator*
, (comma)	044	parameter separator
"ABC" (quotation marks)	034	Quotation marks enclose character strings. Empty quotes (") identify null strings or unused fields.
'comment' (single quotation marks)	039	Grave accents enclose comments. Any data enclosed in grave accents is ignored. Do not embed comments within a quoted string. Grave accents are also used to reject mainframe data.

Note: These MPCL characters are the default.

* The field separator is the split vertical bar, which we are representing as | in this manual. The decimal value is 124. To enter this character, use the Shift key plus the Split Vertical Bar key on your computer's keyboard. Depending on your text editor, it may appear as a solid vertical bar or as a split vertical bar.

Standard Syntax Guidelines

When creating MPCLII packets:

Begin each packet with a **start of header** ({}).

End each packet with an **end of header** ({}).

Define no more than **200** fields in a format. Each | indicates one field. However, options are not counted as fields.

The field number (**0 - 999**) must be unique. We recommend starting at 1, instead of 0.

Do not use a field number more than once per format.

Define all fields in the order you want to image/print them.

Separate all parameters with a **Parameter Separator** (,).

End each field with a **Field Separator** (|).

Enter all information in CAPITAL letters, except words or phrases within quotation marks.

Include all parameters for a field unless documented as optional.

Define non-printable text fields before the field to which they apply.

Define options immediately after the field to which they apply.

Multiple options can be used with most fields. Options can be used in any combination except as noted with each definition.

Keep in mind that proportionally spaced fonts need wider fields than monospaced fonts. For variable field data, use a letter "W" to determine the maximum field size.

Do not place a new line (return) or any other non-printing character within a field definition. However, a carriage return or line break after each | makes your formats easier to read.

```
T,1,20,V,30,30,1,1,1,1,B,C,0,0,0 |  
T,2,10,V,50,30,1,1,1,1,B,C,0,0,0 |
```

Spaces are ignored, except within character strings.

Starting with a Design

Before you create a format packet, you must design your label. To design a custom label:

1. Decide which fields should appear on your label. See “Determining Format Contents” for more information.
2. Determine your label size. Labels are available from us in a wide variety of sizes. Your application and the amount of data you need to print determines the supply size. Contact your sales representative for more information.
3. Draw a rough sketch of your label. You may want to draw several variations to see what works best. See “Drawing Rough Sketches” for more information.
4. Identify the field types that appear on your label. See “Considering Field Types” for more information.
5. Decide which fonts you want to use. See “Considering Fonts” for more information.
6. Fill out your Format Worksheet. See “Using the Format Worksheet” for more information.

At this point, you are ready to use your design.

7. Create a format packet, based on how you filled out your worksheet. See Chapter 2, “Defining Fields,” for more information.
8. For your application to use the format, use the Ultra.Net library functions in the *Programmer Manual*.
9. Execute your application.

Determining Format Contents

Before you lay out your format, you need to answer these questions. How large is your supply? Which fonts do you want to use? Do you want to include a bar code? Do you want to include graphics?

Determining the Print Area

The print area varies, depending on the size of your supply. Below are the maximum and minimum print areas. Notice that the top edge of the supply exits the printer first. There is a non-print zone on the edges and top (0.235") and bottom (0.115") of the supply. For exact print area measurements of your supply, see the supply layout grids in Appendix D.

Unit of Measure	Maximum Supply Size	Maximum Print Area	Minimum Supply Size	Minimum Print Area
English (1/100")	205 x 400	189 x 365	120 x 55	109 x 20
Metric (1/10mm)	521 x 1016	480 x 927	305 x 140	277 x 51
Dots (1/203 dots)	416 x 812	384 x 741	244 x 112	221 x 41

The minimum supply length for peel mode is 0.785 inches with a printable area of 0.435 inches (11 mm or 88 dots). An image up to 11.65 inches (296 mm or 2365 dots) can be created by increasing the image buffer. See Chapter 5, "Configuring the Printer," for more information.


Use the following formulas to convert inches to dots and metric:

- Dots = inches x 203
- Metric (1/10mm) = inches x 254
- English (1/100 inch) = 100 x (dots/203)
- Dots = Metric (1/10 mm) x .797

Drawing Rough Sketches

After you decide what information you want to print, sketch how you want the information to appear on the label. Note any areas that are preprinted on the label, such as a logo.

As soon as you know what information to include on the label, and you have a rough sketch, you can use a supply layout grid to help you layout and size your label. If you do not want to use a grid, go to "Considering Field Types" to choose what information you want on your label.

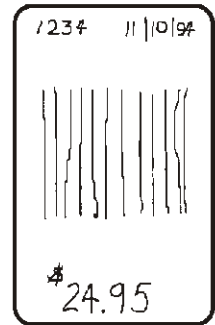

Using Supply Layout Grids

A supply layout grid contains measurement markers. These markers help you accurately position information on your label.

Decide whether you want to design formats using English, Metric, or Dot measurements. Choose from the following grids:

English

The English grid is measured in 1/100 inches.


Metric

The Metric grid is measured in 1/10 millimeters (mm).

Graphic

The printer uses dots to print images on a label. The printhead has 203 dots per inch (DPI).

If you want to use the supply layout grids, a copy of each is in Appendix D, "Format Design Tools."

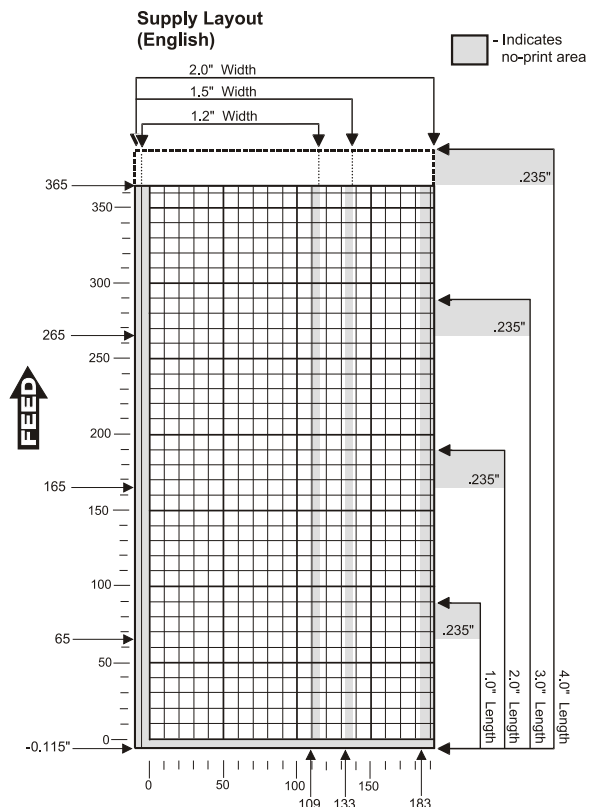

Considering Field Types

After you select a supply size, the next step in designing a format is to decide what information you want to print on the label. For example, you may want to print your company name, price of an item, and a bar code that combines information from other places. Everything you want to print falls into one of the following categories.

Field Type	Description	Examples
Text	Contains letters, numbers, or symbols you want to print.	item number, item description, department number, price, date
Bar Code	Used for printing bar codes that can be scanned.	item or serial numbers, zip codes, information you don't want to have visible to customers
Constant Text	Prints fixed characters that print without changing.	company name, company address
Line or Box	Highlights or separates items.	line marking out the regular price, border around the supply
Graphic	Contains a bitmap image or a compliance label overlay.	logos

Note: All of the above field types except graphics are discussed in Chapter 2. See Chapter 4, "Creating Graphics" for information on including graphics in your format.

Considering Fonts

When working with fonts, you have three considerations:

- font appearance
- font size (bitmapped)
- font spacing (monospaced or proportional)

See Appendix B, "Fonts," for samples of each font.

Using the Format Worksheet

The Format Worksheet is divided into sections that list the field types. Each section has boxes to fill in with parameters that define your format. A format worksheet is included in Appendix D, "Format Design Tools."

Filling in the Format Worksheet

Decide what type of field to use on your label.

1. Make a copy of the Format Worksheet.
2. Define the Format Header.
3. Define options as you require them. See Chapter 3, "Defining Field Options" for more information.

DEFINING FIELDS

This chapter provides a reference for defining

- the format header
- text and constant text
- bar code fields
- line and box fields.

Defining the Format Header

A Format Header begins a format file.

Syntax {F, format#, action, device, measure, length, width, "name" |

F1. F Format Header.

F2. format# Unique number from **0 - 999** to identify the format.

F3. action Action. Enter **A** to add the format to the printer.

F4. device Format storage device. Options:

R RAM (default) When you turn off the printer, items saved in RAM are lost.

F Flash Memory. When you turn off the printer, items saved in Flash memory are saved.

F5. measure Unit of measure. Options:

E English, measured in 1/100 inches

M Metric, measured in 1/10 mm

G Graphic, measured in dots

F6. length Supply length, top to bottom, in selected units.

English **55 - 400**

Metric **140 - 1016**

Dots **112 - 812**

Note: An image up to 11.65 inches (296 mm or 2365 dots) can be created by increasing the image buffer. See Chapter 5, "Configuring the Printer," for more information.

F7. width Supply width, from left to right, in selected units.

English **120 - 205**

Metric **305 - 480**

Dots **244 - 416**

F8. "name" Format name (optional), 0 - 8 characters, enclose within quotation marks.

Example {F, 1, A, R, E, 300, 100, "TEXTILES" |


Format 1 ("TEXTILES") uses a three inch long by one inch wide label.

Defining Text Fields

Create a separate definition for each text field. If text falls on two lines, each line of text requires a separate definition.

Syntax T, field#, # of char, fix/var, row, column, gap, font, hgt mag, wid mag, color, alignment, char rot, field rot, sym set |

- T1. T Text Field.
- T2. field# Unique number from **0 - 999** to identify this field.
- T3. # of char Maximum number of printed characters (**0 - 2710**) in the field.
- T4. fix/var Fixed or variable length field. Options:
 - F** Fixed length
 - V** Variable length
- T5. row For monospaced fonts, distance from bottom of print area to the pivot point. The pivot point varies depending on how text is justified.

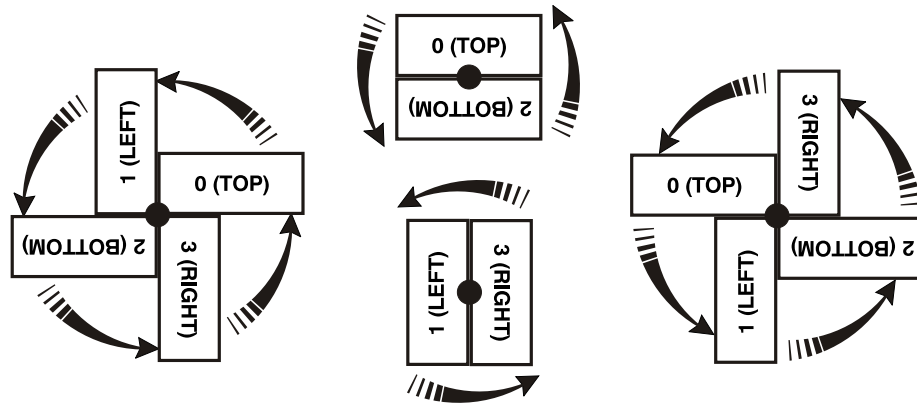

Left/Center/Right-Justified Balanced End-Justified

For proportionally spaced fonts, distance from bottom of print area to baseline of characters in field.

English **0 - 365**
 Metric **0 - 927**
 Dot **0 741**

Note: If you reallocated memory for an 11.65-inch image, the row maximum is 1164 (English), 295 (metric), or 2364 (dots). The minimum printable length for peel mode is 0.435 inches (11 mm or 88 dots).



T6. column Distance from the left edge of the print area to the pivot point to find the column location.

English **0 - 189**
 Metric **0 - 480**
 Dots **0 - 383**



T7. gap

Number of dots between characters (203 dots per inch). Range: **0 - 99**.

Note: For monospaced fonts, the additional spacing is added to the existing inter-character gap. This is also true for proportionally spaced fonts, but remember that the inter-character gap varies with character combinations.

Any number other than **0** or the default number affects your field width. Default spacing:

Reduced and Letter Gothic Bold 6 pt. **1 dot**
HR2 and Letter Gothic Bold 9 pt. **2 dots**
Standard, Bold, OCRA-like, and HR1 **3 dots**
All other fonts **varies with each letter**
HR1 and HR2 are only used with the UPC bar code family and must be numeric.

T8. font

Style of font. Options:

- 1** Standard **5** HR1
- 2** Reduced **6** HR2
- 3** Bold **10** CG Triumvirate™ Typeface Bold 9 pt
- 4** OCRA-like **11** CG Triumvirate™ Typeface 6 pt
- 50** EFF Swiss Bold (scalable)

CG Triumvirate™ Typeface Bold	CG Triumvirate™ Typeface Bold Cond
1000 6.5 pt	1006 6.5 pt
1001 8 pt	1007 8 pt
1002 10 pt	1008 10 pt
1003 12 pt	1009 12 pt
1004 18 pt	1010 18 pt
1005 22 pt	1011 22 pt

Letter Gothic Bold

1012 6 pt **1013** 9 pt

Or a valid downloaded font selector number. Make sure the downloaded font is installed in the printer. Fonts 5 and 6 are for numeric data only.

Point sizes greater than 12 include only the following special characters:

0123456789#\$\$%&(),./@DFKLMPS\kprøç£¥. All other point sizes use the whole symbol set. This information may not apply to downloaded fonts.

T9. hgt mag

Height magnifier, **1 - 7** (times- for bitmapped fonts). With TrueType/Scalable fonts, use **4 - 250**, for the font's point size.

T10. wid mag

Width magnifier, **1 - 7** (times). With TrueType/Scalable fonts, use **4 - 250**, for the font's point size. Proportionally spaced fonts do not have a set width. To estimate the size of your field, use the letter "W" for the widest field or an "L" for an average width field. Find your selected font and the desired width in Appendix B, "Fonts."


T11. color

Options for standard printer fonts:

- B** Opaque, Normal, Black, Normal
- D/R/W** Opaque, Normal, White, Normal
- O** Transparent, Normal, Black, Normal

Options for scalable fonts:

- A/N** Opaque, Normal, Black, Bold
- B/O** Opaque, Normal, Black, Normal
- E/S** Opaque, Italics, Black, Bold
- F/T** Opaque, Italics, Black, Normal

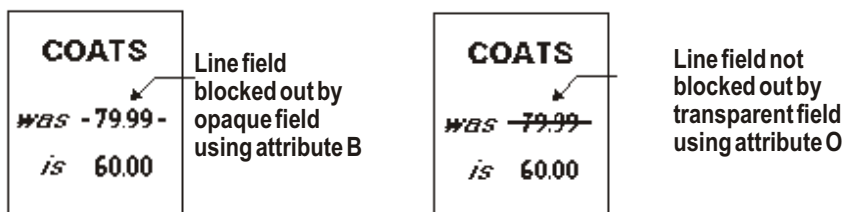

Note: Solid black print should not exceed 30% on a given square inch of the label, or the printhead life may be decreased.

There are two types of field color overlay attributes:

Transparent The overlay field (text or constant text) does not block out (or “erase”) existing fields.

Opaque The overlay field blocks out (or “erases”) existing fields.


Field placement in the packet is an important consideration when using field color attributes. If a line field is defined before the overlay (text or constant text) field, the line field is blocked out by the overlay field, depending on the overlay field’s color attribute. If a line field is defined after the overlay field, the line field is not blocked out by the overlay field, regardless of the overlay field’s color attribute.

T12. alignment Alignment of text in the field. Options:

- L** Align on left side of field.
 - C** Center text within field (monospaced fonts only)
 - R** Align on right side of field (monospaced fonts only)
 - B** Align at midpoint of field
 - E** Align at endpoint of the field
- Use L, B, or E for any font.


T13. char rot Character rotation. The field or supply does not rotate, only the characters do. Options:

- 0** Top of character points to top of field
- 1** Top of character points to left of field
- 2** Top of character points to bottom of field
- 3** Top of character points to right of field

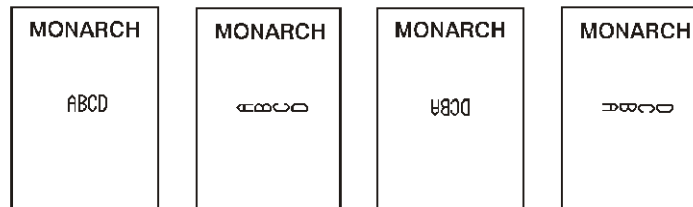

T14. field rot Field rotation. Field rotation rotates the whole field, not just the characters. Rotation is affected by the pivot point, which varies depending on how text is justified. Lower left corner of field is the pivot point. Options:

- 0** Top of field points to top of supply
- 1** Top of field points to left of supply
- 2** Top of field points to bottom of supply
- 3** Top of field points to right of supply

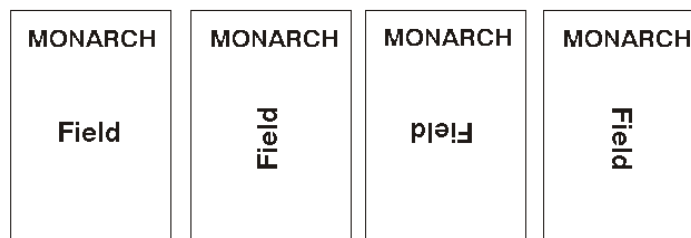

T15. *sym set* Symbol set. Use **0** for the Internal Symbol Set. For scalable or TrueType® fonts, use:

1	ANSI Symbol Set
100	Macintosh
101	Wingdings
102	Unicode (user input) for particular mapping
103	BIG5 (user input) for Unicode mapping
104	GB2312 (user input) for Unicode mapping
105	SJIS (user input) for Unicode mapping - Code Page 932 (Japanese Shift-JIS)
106	GB2312 (user input) for GB2312 mapping - Code Page 936 (Simplified Chinese)
107	BIG5 (user input) for BIG5 mapping - Code Page 950 (Traditional Chinese)
437	DOS Code Page 437 (Domestic)
850	DOS Code Page 850 (International)
852	DOS Code Page 852 (Latin 2)
855	DOS Code Page 855 (Russian)
857	DOS Code Page 857 (IBM Turkish)
860	DOS Code Page 860 (MS-DOS Portuguese)
1250	Code Page 1250 (Latin 2)
1251	Code Page 1251 (Cyrillic)
1252	Code Page 1252 (Latin 1)
1253	Code Page 1253 (Greek)
1254	Code Page 1254 (Turkish)
1255	Code Page 1255 (Hebrew)
1256	Code Page 1256 (Arabic)
1257	Code Page 1257 (Baltic)
1258	Code Page 1258 (Vietnam)

The Standard, Reduced, Bold, OCRA and HR fonts only support the Internal Symbol Set (0). The CG Triumvirate™ typefaces support only the ANSI and DOS Code Page 437 and 850 Symbol Sets. The scalable font (font#50) does not support Code Page 1256 (Arabic). Code pages 852-860 and 1250-1258 are for downloaded TrueType fonts or the scalable font. Code pages 102-107 require the print engine memory expansion option and a downloaded International TrueType font. TrueType fonts are designed to be regionally specific; therefore, all code pages may not be supported in a given font. See Appendix C, "Symbol Sets/ Code Pages" for more information.

Example T, 2, 10, V, 250, 80, 0, 1, 1, 1, B, C, 0, 0, 0 |

Defines a text field (field #2) with a variable length of up to 10 characters. The field begins at row 250, column 80. There is no additional gap between characters, and the Standard font is used without any additional magnification. The printing is black on white and centered. No field or character rotation is used. The internal symbol set is used.

Defining Bar Code Fields

Each bar code field requires a separate definition.

Syntax B, field#, # of char, fix/var, row, column, font, density, height, text, alignment, field rot, type, sep_height, segment |

B1. B Bar Code Field.

B2. field# Unique number from **0 - 999** to identify this field.

B3. # of char Maximum number of characters. If the bar code uses a check digit, allow an extra character for the check digit. The actual maximum number of characters is limited by the size of the label and bar code density. Range: **0 - 2710**.

For Quick Response bar codes, this number includes header information. The maximum depends on the type of characters entered for the batch data and differs for the two models of the bar code.

Data Type	Model 1	Model 2
Numeric Data	1167	2710
Alphanumeric data	707	2710
8-byte data	486	2710
Kanji data	299	1817

Note: The maximum number of characters depends on the selected level of error correction. As you increase the error correction level, the maximum number of characters decreases.

For the GS1 DataBar bar code, the maximum number of characters varies based on the specific GS1 DataBar type.

Bar Code Type (B13)	Maximum Number of Characters
1 - GS1 DataBar 14	13 - no check digit input
2 - GS1 DataBar 14 Truncated	13 - no check digit input
3 - GS1 DataBar 14 Stacked	13 - no check digit input
4 - GS1 DataBar 14 Stacked Omni directional	13 - no check digit input
5 - GS1 DataBar Limited	13 - no check digit input
6 - GS1 DataBar Expanded	*
7 - UPCA	11 - no check digit input
8 - UPCE	10 - no check digit input
9 - EAN13	12 - no check digit input
10 - EAN8	7 - no check digit input
11 - UCC/EAN128 and CC A/B	*
12 - UCC/EAN128 and CC C	*

* For more information, refer to the *GS1 General Specification*.

Note: If not enough characters are entered, the bar code pads to the left with zeros. If too many characters are entered, unpredictable results may occur. If FNC1 (function 1) is supported, use the pound sign (#) in the batch data to invoke it.

B4. *fix/var* Fixed (F) or variable (V) length field.

Bar Code	Number of Characters	Fixed or Variable
UPCA	12	F
UPCA+2	14	F
UPCA+5	17	F
UPCA+Price CD	12	F
UPCE	7	F
UPCE+2	9	F
UPCE+5	12	F
EAN8	8	F
EAN8+2	10	F
EAN8+5	13	F
EAN13	13	F
EAN13+2	15	F
EAN13+5	18	F
EAN13+Price CD	13	F
POSTNET	9 or 11	F
Interleaved 2 of 5 or Interleaved 1 2 of 5 with Barrier Bar	0 - 2710	F or V
Code 39 (w/ or w/o CD) or MOD43	0 - 2710	F or V
Codabar	0 - 2710	F or V
Code 16K	0 - 2710	V
Code 128	0 - 2710	F or V
Code 93	0 - 2710	V
MSI	0 - 14	F or V
PDF 417	0 - 2710	F or V
Maxicode*	15 - 99	F or V
Data Matrix*	0 to 2335 (alphanumeric) 0 to 2710 (numeric)	V
Quick Response*	1167 - 2710 (numeric) 707 - 2710 (alphanumeric)	V
GS1 DataBar*	0 - 13	V

* For more information about MaxiCode, Data Matrix, Quick Response, and GS1Data Bar, see Appendix A, "Samples." To print certain bar codes, you need the following versions of software:

Bar Code	Version*
QR Code	2.0 or greater
Data Matrix	2.8 or greater
GS1 DataBar	3.0 or greater

* Printers with version 1.x software cannot be upgraded. Contact Service for more information.

B5. row

Distance from bottom of the print area to the pivot point of the field. The pivot point varies, depending on how the field is justified. Pivot points:



Left/Center/Right-Justified Fields



Balanced Fields

End-Justified Fields

Remember to include text or numbers that may appear with the bar code for the row measurement.

English 0 - 365
Metric 0 - 927
Dot 0 741

B6. column

Distance from the lower left edge of the print area to the pivot point.

English 0 - 189
Metric 0 - 480
Dots 0 - 383

Note: Allow a minimum of 1/10 inch between the scan edge of bar code and label edges or other data.



B7. font

Bar code. Options:

- | | |
|----------------------------|------------------------------------|
| 1 UPCA | 16 EAN13 +2 |
| 2 UPCE | 17 EAN13 +5 |
| 3 Interleaved 2 of 5 | 22 Postnet |
| 4 Code 39 (no check digit) | 23 Code 93 |
| 5 Codabar | 31 Code 16K |
| 6 EAN8 | 32 PDF417 |
| 7 EAN13 | 33 MaxiCode |
| 8 Code 128 | 35 Data Matrix (ECC-200) |
| 9 MSI | 36 Quick Response |
| 10 UPCA +2 | 38 GS1 DataBar |
| 11 UPCA +5 | 40 Code 39 (MOD 43 check digit) |
| 12 UPCE +2 | 41 UPCA & Price CD |
| 13 UPCE +5 | 44 EAN13 & Price CD |
| 14 EAN8 +2 | 50 Interleaved 2of5 w/ Barrier Bar |
| 15 EAN8 +5 | |

B8. density

Bar code density. Use the following table for other bar codes.

Note: If the field contains an 11-digit UPC bar code, the printer automatically zero-suppresses it into a 6-digit UPCE bar code.

Bar Code Type	Density Selector	Density (% or cpi)	Narrow Element (dots/mils)	Narrow to Wide Ratio	Data Length	Appearance Codes Available	Char Set
UPCA +2/+5 Price CD	2 4	76% 114%	2/9.9 3/14.8	N/A	11 or 12 14/17	1, 5, 6, 7 or 8	0 to 9
UPCE +2/+5	2 4	76% 114%	2/9.9 3/14.8	N/A	6 or 7 9/12	1, 5, 6, 7 or 8	0 to 9
EAN8 +2/+5	2 4	76% 114%	2/9.9 3/14.8	N/A	7 or 8 10/13	1, 5, 6, 7 or 8	0 to 9
EAN13+2/+5 Price CD	2 4	76% 114%	2/9.9 3/14.8	N/A	12 or 13 15/18	1, 5, 6, 7 or 8	0 to 9
Interleaved 2 of 5 or I2of5 with Barrier Bar	1	1.1	21/103.4	1:3.0	0 to 2710	8	0 to 9
	2	2.1	12/59.1	1:2.5			
	3	3.2	7/34.5	1:3.0			
	4	4.2	6/29.6	1:2.5			
	5	5.6	4/19.7	1:3.0			
	6	6.3	4/19.7	1:2.5			
	7	7.5	3/14.8	1:3.0			
	8	8.8	3/14.8	1:2.3			
	9	9.6	3/14.8	1:2.0			
	10	11.2	2/9.9	1:3.0			
	11	11.0	2/9.9	1:3.0			
	12	12.7	2/9.9	1:2.5			
	13	14.5	2/9.9	1:2.0			
(Code 39 or MOD43 (Extended Code 39)	1	1.4	10/49.3	1:2.5	0 to 2710	8	SPACE \$%*+-./ 0 to 9 A to Z
	2	1.7	8/39.4	1:2.5			
	3	3.5	4/19.7	1:2.5			
	4	4.2	3/14.8	1:3.0			
	6	6.3	2/9.9	1:3.0			
	7	7.0	2/9.9	1:2.5			
	11	3.9	4/19.7	1:2.0			
	12	12.7	1/4.9	1:3.0			
	20	3.0	5/24.6	1:2.2			
	Codabar (NW7)	2	2.1	8/39.4			
3		3.0	6/29.6	1:2.5			
4		4.6	4/19.7	1:2.5			
5		5.1	4/19.7	1:2.0			
7		8.4	2/9.9	1:3.0			
8		9.2	2/9.9	1:2.5			
9		10.1	2/9.9	1:2.0			
Code 128 or Code 16K		4	3.5/7.0	5/24.6	N/A	0 to 2710	8
	6	4.4/8.7	4/19.7				
	8	5.8/11.7	3/14.8				
	20	8.7/11.5	2/9.9				

Note: For I 2of5 bar codes, pad field data to the left with a zero when an odd number of characters are used. Codabar uses "A" as the start and stop characters if not included with the data. All bar codes with

Note: Values in bold indicate the default.

Bar Code Type	Density Selector	Density (% or cpi)	Narrow Element (dots/mils)	Narrow to Wide Ratio	Data Length	Appearance Codes Available	Char Set
CODE 93	3	3.7	6/29.6	N/A	0 to 2710	8	00H to 7FH
	4	4.5	5/24.6				
	5	5.6	4/19.7				
	7	7.5	3/14.8				
	10	11.2	2/9.9				
MSI	4	4.2	4/19.7	1:2.0	0 to 14	8	0 to 9
	5	5.6	3/14.8	1:2.0			
	7	7.2	2/9.9	1:2.5			
POSTNET	0 (fixed at 4.3 cpi)	24/118.2	10/49.3	4/19.7 (5 dot gap)	0,5,6,9 or 11	8	0 to 9
MaxiCode	7	N/A	N/A	N/A	99	8	00H to FFH

Bar Code Type	Density Selector	Element Width (dot/mils)	Row Height (dots/mils)	Aspect Ratio	Data Length	Appearance Codes Available	Char Set
PDF417	1	2/9.8	2/9.8	1:1	0 to 2709	8	00H to FFH
	2	2/9.8	4/19.7	1:2			
	3	2/9.8	6/29.6	1:3			
	4	3/14.8	3/14.8	1:1			
	5	3/14.8	6/29.6	1:2			
	6	3/14.8	9/44.3	1:3			
	7	4/19.7	4/19.7	1:1			
	8	4/19.7	8/39.4	1:2			
	9	4/19.7	12/59.1	1:3			

Note: Values in bold indicate the default.

Bar Code Type	Density Selector	Data Length
Quick Response Models 1 and 2	0	Model 1: 0 - 1167 Numeric; 0 - 707 Alphanumeric 0 - 486 (8-bit); 0 - 299 (Kanji) Model 2: 0 - 2710 Numeric; Alphanumeric and 8-bit; 0 - 1817 Kanji

Bar Code Type	Density Selector	Narrow Element (dots/mils)	Data Length	Char Set
GS1 DataBar	2	2/9.9	0 to 2710	00H to FFH
	3	3/14.8		
	4	4/19.7		
	5	5/24.6		
	6	6/29.6		
	7	7/34.5		
	8	8/39.4		

Bar Code	Size Row x Col.	Density Selector	Max. Data Length Num. X Alphanum.	App Code	Char Set
Data Matrix Square symbols	10 x 10	1	6 x 3	8	00H to FFH
	12 x 12	2	10 x 6		
	14 x 14	3	16 x 10		
	16 x 16	4	24 x 16		
	18 x 18	5	36 x 25		
	20 x 20	6	44 x 31		
	22 x 22	7	60 x 43		
	24 x 24	8	72 x 52		
	26 x 26	9	88 x 64		
	32 x 32	10	124 x 91		
	36 x 36	11	172 x 127		
	40 x 40	12	228 x 169		
	44 x 44	13	288 x 214		
	48 x 48	14	348 x 259		
	52 x 52	15	408 x 304		
	64 x 64	16	560 x 418		
	72 x 72	17	736 x 550		
	80 x 80	18	912 x 682		
	88 x 88	19	1152 x 862		
	96 x 96	20	1392 x 1042		
	104 x 104	21	1632 x 1222		
	120 x 120	22	2100 x 1573		
	132 x 132	23	2608 x 1954		
	144 x 144	24	2710 x 2335		
0 default (bar code size automatically determined by data)					

Bar Code	Size Row x Col.	Density Selector	Max. Data Length Num. X Alphanum.	App Code	Char Set
Data Matrix Rectangular symbols	8 x 18	25	10 x 6	8	00H to FFH
	8 x 32	26	20 x 13		
	12 x 26	27	32 x 22		
	12 x 36	28	44 x 31		
	16 x 36	29	64 x 46		
	16 x 48	30	98 x 72		
0 default (bar code size automatically determined by data)					

Note: The printers support printing a Data Matrix symbol with an X-dimension of 13 mils or greater. If you use a denser bar code, make sure the bar code scans in your particular application. Our "premium" supplies and increasing the print contrast are recommended for denser bar codes. Depending on your application, additional densities are available.

B9. height

Bar code height, in 1/100 inches, 1/10 mm, or dots. Minimum values:

English **20**
Metric **51**
Dots **41**

POSTNET, PDF417, and MaxiCode bar codes have a fixed height. Always use **0** for these bar codes.

Small Data Matrix and QR Codes may not be scannable. The Data Matrix and QR Code's height depends on the number entered for this parameter. For example, if you select 80, the symbol could be smaller than 0.80," but it will not be greater than the amount specified in this parameter. The symbol arranges the data according to rows and columns within the specified height.

For the GS1 DataBar bar code, use the *height* only for UCC/EAN family *types* listed in B13.

For Quick Response bar codes, the value you enter is the symbol's maximum height. Small bar codes may not be scannable.

B10. text Appearance of text with bar code. For UPC and EAN, use **1** or **5 - 8**. For all others, use **8**. Options:

- 0** Default
MaxiCode Mode 0 (obsolete)
QR Code Model 2
- 1** No check digit or number system
QR Code Model 1
- 2** MaxiCode Mode 2 (Numeric Postal Code)
QR Code Model 2
- 3** MaxiCode Mode 3 (Alphanumeric Postal Code)
- 5** Number system at bottom, no check digit
- 6** Check digit at bottom, no number system
- 7** Check digit and number system at bottom
- 8** No text, bar code only
MaxiCode (autodetect modes 0, 2, or 3)
Data Matrix

B11. alignment Choose **L**, **R**, **C**, **B** or **E** to align the bar code data correctly in the field. **B** centers variable width bar codes, which may not allow pad-character centering (Code 128, Code 39, etc.) **E** right justifies variable width bar codes. MaxiCode, Data Matrix, QR Code, and GS1 DataBar must use **L**.

B12. field rot Field rotation. Field rotation rotates the whole field, not just the characters. Rotation is affected by the pivot point, which varies depending on how text is justified. Lower left corner of field is the pivot point. Options:

- 0** Top of field points to top of supply
- 1** Top of field points to left of supply
- 2** Top of field points to bottom of supply
- 3** Top of field points to right of supply

Note: Serial bar codes printed at speeds greater than 1.5 IPS may not scan properly.

B13. type Select from the bar code family. This parameter only applies to the GS1 DataBar bar code. For other bar codes, do not include this parameter. Options:

- 1** GS1 DataBar 14 (default)
- 2** GS1 DataBar 14 Truncated
- 3** GS1 DataBar 14 Stacked
- 4** GS1 DataBar 14 Stacked Omni directional
- 5** GS1 DataBar Limited
- 6** GS1 DataBar Expanded
- 7** UPCA
- 8** UPCE
- 9** EAN13
- 10** EAN8
- 11** UCC/EAN128 and CC A/B
- 12** UCC/EAN128 and CC C

B14. sep_height Height of the separator between the linear bar code and 2D bar code. The value is **1** or **2**. The default is 1. This parameter only applies to the GS1 DataBar bar code. For other bar codes, do not include this parameter.

B15. segment Width of the segment – only for use with GS1 DataBar family *types* listed in **B13**. The range is even numbers from **2** to **22**. The default is 22. For other bar codes, do not include this parameter.

Example B, 3, 12, V, 50, 40, 1, 2, 80, 7, L, 0 |

Defines a bar code field (field #3) with 12 characters of variable length starting at row 150, column 40. A UPCA bar code with a density of 2 and a height of 80 is used. The check digit and number system are shown at the bottom. The bar code is left aligned without any field rotation.

Example B, 1, 30, V, 5, 5, 38, 4, 0, 0, L, 0, 1, 2, 22 |

Defines a bar code field (field #3) with up to 30 characters of variable length starting at row 5, column 5. The GS1 DataBar uses a density of 4. No text is shown with the bar code. The bar code is left-aligned with no field rotation.

Defining Constant Text Fields

A constant text field is a set of fixed characters that prints on all labels. Define each constant text field separately. This field is not assigned a field number, but is counted as a field (keep this in mind, as the printer allows a maximum of 200 fields per format). The characters in this field cannot be changed by batch data. Field options do not apply to constant text fields.

Determine the height and the maximum width of the characters, using the tables in Appendix B, "Fonts." If you're using proportionally spaced fonts, use the average size of the characters. Mark the pivot point of your field. This varies depending on how your field is justified.

Syntax *C, row, column, gap, font, hgt mag, wid mag, color, alignment, char rot, field rot, "fixed char", sym set |*

C1. C Constant Text Field.

C2. row For monospaced fonts, distance from bottom of print area to the pivot point. For proportionally spaced fonts, distance from bottom of print area to baseline of characters in the field. (Bottom exits the printer first.)

English **0 - 365**
Metric **0 - 927**
Dot **0 741**



C3. column Distance from the lower left edge of the print area to the pivot point.

English **0 - 189**
Metric **0 - 480**
Dots **0 - 383**



C4. gap Number of dots between characters (203 dots per inch). Range: **0 - 99**.

Any number other than **0** or the default number affects your field width. Default spacing:

Reduced and Letter Gothic Bold 6 pt. **1 dot**
HR2 and Letter Gothic Bold 9 pt. **2 dots**
Standard, Bold, OCRA-like, and HR1 **3 dots**
All other fonts **varies with each letter**

C5. font Style of font. Options:

1 Standard	5	HR1
2 Reduced	6	HR2
3 Bold	10	CG Triumvirate™ Typeface Bold 9 pt
4 OCRA-like	11	CG Triumvirate™ Typeface 6 pt
50 EFF Swiss Bold (scalable)		

CG Triumvirate™ Typeface Bold	CG Triumvirate™ Typeface Bold Cond
1000 6.5 pt	1006 6.5 pt
1001 8 pt	1007 8 pt
1002 10 pt	1008 10 pt
1003 12 pt	1009 12 pt
1004 18 pt	1010 18 pt
1005 22 pt	1011 22 pt

Letter Gothic Bold
1012 6 pt **1013** 9 pt

Or a valid downloaded font selector number. Make sure the downloaded font is installed in the printer. Fonts 5 and 6 are for numeric data only.

Point sizes greater than 12 include only the following special characters:

0123456789#\$\$%&(),./@DFKLMPS\kprøç£¥.

All other point sizes use the whole symbol set. This information may not apply to optional fonts.

C6. hgt mag Height magnifier, **1 - 7** (times). With TrueType/scalable fonts, use **4 - 250** for the font's point size.

C7. wid mag Width magnifier, **1 - 7** (times). With TrueType/scalable fonts, use **4 - 250** for the font's point size.

C8. color

Options for standard printer fonts:

- B** Opaque, Normal, Black, Normal
- D/R/W** Opaque, Normal, White, Normal
- O** Transparent, Normal, Black, Normal

Options for scalable fonts:

- A/N** Opaque, Normal, Black, Bold
- B/O** Opaque, Normal, Black, Normal
- E/S** Opaque, Italics, Black, Bold
- F/T** Opaque, Italics, Black, Normal

Note: Solid black print should not exceed 30% on a given square inch of the label, or the printhead life may be decreased.

There are two types of field color overlay attributes:

Transparent The overlay field (text or constant text) does not block out (or “erase”) existing fields.

Opaque The overlay field blocks out (or “erases”) existing fields.

Field placement in the packet is an important consideration when using field color attributes. If a line field is defined before the overlay (text or constant text) field, the line field is blocked out by the overlay field, depending on the overlay field’s color attribute. If a line field is defined after the overlay field, the line field is not blocked out by the overlay field, regardless of the overlay field’s color attribute.

C9. alignment

Alignment of constant text in the field. Options:


- L** Align on left side of field.
- C** Center text within field (for monospaced fonts only)
- R** Align on right side of field (for monospaced fonts only)
- B** Align at midpoint of field
- E** Align at end of field.

Use **L**, **B**, or **E** for any font.

C10. char rot

Character rotation. Options:


- 0** Top of character points to top of field
- 1** Top of character points to left of field
- 2** Top of character points to bottom of field
- 3** Top of character points to right of field

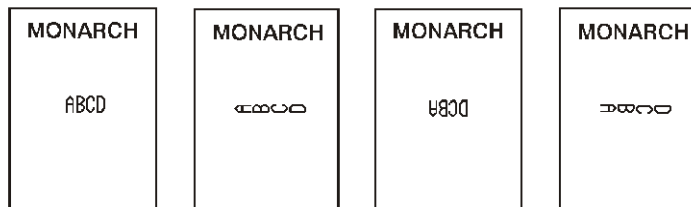

C11. field rot Field rotation. Lower left corner of field is the pivot point. Options:

- 0** Top of overlay points to top of supply
- 1** Top of overlay points to left of supply
- 2** Top of overlay points to bottom of supply
- 3** Top of overlay points to right of supply

Note: Rotation is affected by the pivot point, which varies depending on how text is justified.

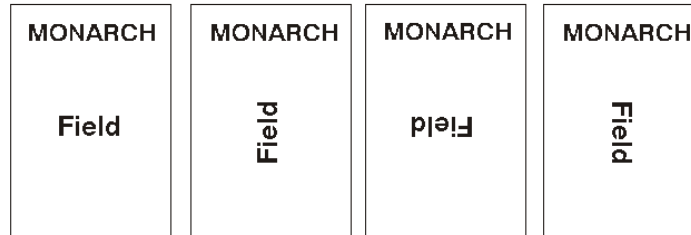

C12. "fixed char" Fixed characters to appear in the field. Maximum **2710** characters. Enclose in quotation marks.

C13. sym set Symbol set. Use **0** for the Internal Symbol Set. For scalable or TrueType® fonts, use:

- 1** ANSI Symbol Set
- 100** Macintosh
- 101** Wingdings
- 102** Unicode (user input) for particular mapping
- 103** BIG5 (user input) for Unicode mapping
- 104** GB2312 (user input) for Unicode mapping
- 105** SJIS (user input) for Unicode mapping - Code Page 932 (Japanese Shift-JIS)
- 106** GB2312 (user input) for GB2312 mapping - Code Page 936 (Simplified Chinese)
- 107** BIG5 (user input) for BIG5 mapping - Code Page 950 (Traditional Chinese)
- 437** DOS Code Page 437 (Domestic)
- 850** DOS Code Page 850 (International)
- 852** DOS Code Page 852 (Latin 2)
- 855** DOS Code Page 855 (Russian)
- 857** DOS Code Page 857 (IBM Turkish)
- 860** DOS Code Page 860 (MS-DOS Portuguese)
- 1250** Code Page 1250 (Latin 2)
- 1251** Code Page 1251 (Cyrillic)
- 1252** Code Page 1252 (Latin 1)
- 1253** Code Page 1253 (Greek)
- 1254** Code Page 1254 (Turkish)
- 1255** Code Page 1255 (Hebrew)
- 1256** Code Page 1256 (Arabic)
- 1257** Code Page 1257 (Baltic)
- 1258** Code Page 1258 (Vietnam)

The Standard, Reduced, Bold, OCRA and HR fonts only support the Internal Symbol Set (0). The CG Triumvirate™ typefaces support only the ANSI and DOS Code Page 437 and 850 Symbol Sets. The scalable font (font#50) does not support Code Page 1256 (Arabic). Code pages 852-860 and 1250-1258 are for downloaded TrueType fonts or the scalable font. Code pages 102-107 require the print engine memory expansion option and a downloaded International TrueType font. TrueType fonts are designed to be regionally specific; therefore, all code pages may not be supported in a given font. See Appendix C, "Symbol Sets/ Code Pages" for more information.

Example `C,100,80,0,1,1,1,B,L,0,0,"MADE IN USA",0 |`

Defines a constant text field starting at row 100, column 80. It does not have any additional inter-character gap. The Standard font is used without any additional magnification. The printing is black on white and left justified. No field or character rotation is used. "MADE IN USA" is printed in this field. The internal symbol set is used.

Defining Line Fields

Use lines to form borders and mark out original prices. Define each line separately. This field is not assigned a field number, but is counted as a field (keep this in mind, as the printer allows a maximum of **200** fields per format). You can define any line length and a thickness up to 99 dots, as long as the solid black print does not exceed 30 percent of any given square inch of the label.

Line Types

You can create horizontal and vertical lines. There are two ways to define lines.

Segments You choose the starting point and ending point.

Vectors You choose the starting point, the angle, and the length of the line.

Syntax `L, type, row, column, angle/end row, length/end col, thickness, "pattern" |`

L1. L Line Field.

L2. type Type of line. Only vertical and horizontal lines are supported. Options:

S Segment. You choose the starting point and ending point.

V Vector. You choose the starting point, angle, and length.

L3. row Distance from bottom of print area to the starting point.

English **0 - 365**
Metric **0 - 927**
Dot **0 741**



L4. column Distance from left edge of the print area to line origin.

English **0 - 189**
Metric **0 - 480**
Dots **0 - 383**



L5. angle If Using Segments:
/end row

Row location of ending point. Measure from bottom of print area. Ranges same as row above. On horizontal lines, this value must match item L3.

If Using Vectors:
Angle of line. Options: **0, 90, 180, or 270.**



L6. *length/*
end col

If Using Segments:

Column location of end point. Measure from left edge of print area. Ranges same as column above. On vertical lines, this value must match parameter L4.

If Using Vectors:

Length of the line in selected units.

Ranges for horizontal lines:

English 0 - 189

Metric 0 - 480

Dots 0 - 383

Ranges for vertical lines:

English 0 - 365

Metric 0 - 927

Dot 0 - 741



L7. *thickness*

Using the chart below for reference, write the line thickness (1 - 99) in box L7. Measured in dots.

Dots	Thickness
1	
10	
24	
48	
96	

Note: Line thickness fills upward on horizontal lines, or to the right on vertical lines.

L8. *"pattern"*

Line pattern. Enter "".

Example

L,S,110,70,110,350,10,"" |

Defines a horizontal line field as a segment starting at row 110, column 70 and ending at row 110, column 350. The line thickness is 10 dots.

Defining Box Fields

Use boxes to form borders or highlight items of interest. Define each box field separately. This field is not assigned a field number, but is counted as a field (keep this in mind, as the printer allows a maximum of **200** fields per format). You can define any line length and a thickness up to 99 dots, as long as the solid black print does not exceed 30 percent of any given square inch of the label.

Syntax *Q, row, column, end row, end col, thickness, "pattern" |*

Q1. Q Box (**Q**uadrilateral) Field.


Q2. row Distance from bottom of print area to lower left corner of box.
 English **0 - 365**
 Metric **0 - 927**
 Dot **0 741**



Q3. column Distance from left edge of print area to lower left corner of box.
 English **0 - 189**
 Metric **0 - 480**
 Dots **0 - 383**




Q4. end row Distance from bottom of print area to upper right corner of box.
 Ranges same as row.

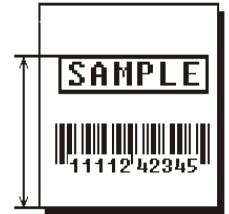

Q5. end col Distance from left edge of print area to upper right corner of box.
 Ranges same as column.



Q6. *thickness* Using the chart below for reference, write the desired line thickness (1 - 99) in box Q6. Measure in dots.

Dots	Thickness
1	
10	
24	
48	
96	

Note: Line thickness fills upward on horizontal lines, or to the right on vertical lines.

Q7. *pattern* Line pattern. Enter "".

Example Q, 240, 80, 270, 130, 3, "" |

Defines a box field starting at row 240, column 80. It ends at row 270, column 130. It has a thickness of 3 dots.

DEFINING FIELD OPTIONS

3

This chapter provides a reference for defining

field options in formats
check digit packets.

Applying Field Options

Field options further define text and bar code fields. The text, constant text, or bar code field must be previously defined before you can apply any field option to it. Define options immediately after the field to which they apply.

Combining Field Options

You can use more than one option with most fields. When you use multiple options for the same field, you must place the options in the order you want to apply them to your format.

Restrictions

Some options cannot be used together. See the following sections addressing individual options for specific combinations to avoid.

Example `R,1,3,1,3,1,1 |`

Syntax `R,option#,parameter...parameter |`

R1. R Indicates field option header.

R2. option# Option number:
1 Define Fixed Characters
4 Copy Data
30 Pad Characters
31 Calculate Check Digit
42 Format as a Price Field
50 Define Bar Code Densities
51 Define Security and Truncation of PDF417 Bar Codes
52 Define Width or Length of PDF417 Bar Codes
60 Define Incrementing/Decrementing Fields
61 Re-Image Fields

R3. parameter(s) Varies per option. See the following option descriptions.

Option 1 (Fixed Data)

Fixed data is information (a company name or store number) you want to print on all labels. You can define fixed characters for an entire field or for part of a field.

Syntax `R,1,"fixed char" |`

R1. R Option Header.

R2. 1 Option 1.

R3. fixed char Characters to insert. Enclose in quotation marks. If you are defining fixed characters for part of a field, place underscores(_) in non-fixed positions. Any spaces in the phrase are fixed characters. Range: **0 - 2710**.

Note: Underscore characters are stripped out and the data is compressed if no data is supplied by the batch and the field length is variable.

Example `R,1,"_ _ _%$_ _ _ _" |`

Uses fixed characters (%\$) in positions 4 and 5. The other positions are variable.

Example `R,1,"MONARCH" |`

“MONARCH” appears as a fixed field in this example.

To fill in the non-fixed portion of the field, see “Defining Batch Data Fields” in Chapter 6. As an alternative, you can apply Option 4 to copy data into the non-fixed character positions.

Option 4 (Copy Data)

You can create a field that uses data from another field. This is useful for creating merged fields or sub-fields. You can copy the information from multiple fields into one field by applying the copy procedure more than once. Copy data is the only option you can apply to a field more than once.

The maximum number of characters defined in box **T3** or **B3** must allow for the number of characters you will place in the field, including any price, check digit, or fixed characters inserted by the printer. The maximum number of characters in the field into which data is copied cannot exceed **2710** or the maximum number of characters permitted by the bar code.

Note: When copying from more than one field, copy into the destination field from left to right.

Syntax `R,4,src fld,src start,# to copy,dest start,copy code |`

R1. R Field Option Header.

R2. 4 Option **4**.

R3. src fld Field number from which data is copied. Range: **0 - 999**.

R4. src start Position number in the source field of the first character to be copied. Character positions are numbered **1 - 2710**, starting from the left.

R5. # to copy Number of characters to copy. Range: **1 - 2710**.

R6. dest start Position number where copied characters are to begin printing in the destination field. Range: **1 - 2710**.

R7. copy code Copy Method.

- 1** Copy field as is (including price symbols, pad characters, check digits, etc.).
- 2** Copy unformatted data (without price characters, pad characters, etc.).

Example `R,4,3,1,3,1,1 |`

Copies data from field #3, starting at the first position and copying three characters. In the destination field, the information is placed in position 1 and copied as formatted data.

Merging Fields

You can copy data to merge the contents of fields. Use the copy data option as many times as necessary to copy all the appropriate fields into the merged field.

In the following example, two text and two non-printable fields are shown. Data from these fields is merged to form field 5, and is then printed as a bar code.

Field	Data	Field Type
1	203	Non-printable
2	339	Non-printable
3	8	Text
4	BLUE	Text
5	2033398BLUE	Bar Code

To create this sequence:

1. Define fields 1, 2, 3, and 4.
2. Define field 5 as a bar code. Allow enough characters in the bar code field to hold all the copied characters.
3. Apply Option 4 to field 5 once for every source field.

Sub-Fields

You can copy a segment of data from one field into a new location, called a sub-field. For example, extract part of the data in a bar code and display it in text form in a sub-field. Then, use the copy data option.

Option 30 (Pad Data)

You can add characters to one side of a field to “pad” the field. Padding allows you to fill in the remaining spaces when the entered data does not fill an entire field.

If a variable length field is not completely filled with batch data, this option fills the remaining positions in the field with the character designated by Option 30.

Syntax `R,30,L/R,"character" |`

R1. R Option Header.

R2. 30 Option **30**.

R3. L/R Indicates type of padding

L Pad field on left side

R Pad field on right side

R4. "character" Pad character must be within the **0 - 255** decimal range and enclosed inside quotation marks.

Note: Do not use on fixed length fields.

Example `R,30,L,"X" |`

Pads data with an “X” on the left side of the field.

Sample Use for Padding

If you have a variable length bar code that you want to occupy a fixed amount of space on the supply, use pad characters. If the maximum number of characters in the bar code is 15, but the batch record only has 10 characters, the padding option fills the remainder of the field with pad characters.

Option 31 (Calculate Check Digit)

The printer generates a check digit if you apply Option 31 to the field. You cannot use this option if the field contains a UPC, EAN, or Code 39 (with the MOD43 check digit) bar code.

Syntax `R,31,gen/ver,check digit # |`

R1. R Option Header.

R2. 31 Option **31**.

R3. gen/ver Enter **G** to generate a check digit.

R4. check digit # Specifies a check digit scheme. Enter a number that identifies a check digit scheme that has been defined. For more information, see “Using Check Digits.” Range: **1 - 10**.

Example `R,31,G,5 |`

Generates a check digit using the previously defined check digit scheme 5.

Option 42 (Price Field)

You can apply options that will insert monetary symbols automatically. Do not use this option with Option 31 (define a check digit) or Option 60 (increment or decrement a field). This option is not recommended for bar codes. When determining the maximum number of characters, add the maximum number of digits and the monetary symbols.

Syntax `R,42,appearance code |`

R1. R Option Header.

R2. 42 Option **42**.

R3. appearance code Enter **1** to print price field in standard notation, as defined by country setting.

Use the monetary formatting packet to select monetary notations and symbols by country setting. See "Defining the Monetary Formatting Packet" for more information. See Appendix C, "Symbol Sets/Code Pages," to make sure the monetary symbol you want to use is printable in the font selected for this field. For monetary symbols other than the dollar sign, use the internal symbol set.

Example `R,42,1 |`

Uses a price field that prints the monetary symbol and notations as defined in the monetary formatting packet.

Option 50 (Bar Code Density)

You can apply this option to bar code fields when you want to create custom densities. When you apply this option, it overrides the density value in the bar code field.

Do not use Option 50 with UPC or EAN bar codes. When using this option, set the density parameter in your bar code field to the default value. You can only use this option once for each bar code field. This option overrides the density selected in the bar code field.

Bar codes produced using Option 50 may not be scannable. The additional character gap, narrow space, and wide space parameters are valid **only** with Code 39 and Codabar. If these parameters are specified for any other bar codes, they will be ignored by the printer.

Syntax `R,50,narrow,wide,gap,nar_space,wide_space |`

R1. R Field Option Header.

R2. 50 Option **50**.

R3. narrow Dot width of the narrow element. Range: **1 - 99**.

R4. wide Dot width of the wide element. Range: **1 - 99**.

R5. gap Additional dot space between characters. Enter a value of **1 - 99**. (Code 39 and Codabar only.)

R6. nar_space Additional dot width of the narrow bar code space. (Code 39 and Codabar only). Range: **1 - 99**.

R7. wide_space Additional dot width of the wide bar code space. (Code 39 and Codabar only). Range: **1 - 99**.

Example `R,50,4,8,4,4,8 |`

Creates a custom bar code density with a narrow element of 4 dots, a wide element of 8 dots, a gap of 4 dots, 4 additional dot widths for the narrow bar code space, and 8 additional dot widths for the wide bar code space (if this is a Code 39 or Codabar bar code).

Option 51 (PDF417 Security/Truncation)

You can define a security level and choose whether or not to truncate a PDF417 bar code. Higher security levels add data to a bar code, improving scan reliability. Some damaged bar codes may still be scannable if the security level is high enough. You can use this option to create standard PDF417 bar codes or use the truncated option to create a narrower bar code. This option can appear only once per PDF417 field, in any order, following the bar code field.

As the security level is increased, so is the size of your PDF417 bar code. For each level increased, the bar code will double in size.

Syntax `R, 51, security, stand/default |`

R1. R Option Header.

R2. 51 Indicates Option **51**.

R3. security Security level ranges from **0-8** (**0** is the default).

Higher security levels add data to a bar code, improving scan reliability. Some damaged bar codes may still be scannable if the security level is high enough.

R4. stand/def Truncation selector. Valid values:

S (default) a standard PDF417 bar code
T truncated

Example `R, 51, 2, S |`

Defines a security level of 2 for a standard PDF417 bar code.

Option 52 (PDF417 Width/Length)

This option defines the image width or length of a PDF417 bar code. If you define a fixed number of columns (width), the bar code expands in length. If you define a fixed number of rows (length), the bar code expands in width.

Column value does not include start/stop or left/right indicator columns.

If this option does not immediately follow the PDF417 bar code field, the default settings are used. You can only use this option once per PDF417 bar code field.

Syntax `R, 52, row/column, dimension |`

R1. R Option Header.

R2. 52 Indicates Option **52**.

R3. row/column Indicates if you are defining the number of rows or columns.

R Row
C Column

If you specify rows, the bar code expands in columns, or vice versa.

R4. dimension The number of rows or columns defined for the bar code. The default is **4**. Valid values:

3-90 for rows
1-30 for columns

Example `R, 52, C, 10 |`

Defines the column width of 10, which expands the PDF417 bar code length by 10.

Option 60 (Incrementing/Decrementing Fields)

You may have an application, such as serial numbers, in which you need a numeric field to increment (increase in value) or decrement (decrease in value) on successive tickets within a single batch. Incrementing or decrementing can be applied to **numeric** data only. If you have a field that includes letters and digits, apply incrementing or decrementing to only the portion of the field that contains digits. Do not use with Option 42 (price field).

Syntax `R,60,I/D,amount,l pos,r pos |`

R1. R Option Header.

R2. 60 Option 60.

R3. I/D **I** incrementing field
 D decrementing field

R4. amount Amount to increase or decrease. Range: **0 - 999**.

R5. l pos Leftmost position in inc/dec portion of field. If this value is not entered, the default value 1 is used. Range: **0 - 2710**.

R6. r pos Rightmost position in inc/dec portion of field. If this value is not used, the entire field length is used as the default. Range: **0 - 2710**.

Example `R,60,I,5,1,6 |`

Increments a field by 5 each time the field is printed. The field increments beginning with the first left position and ending with the sixth position.

Fixing the First Number in the Incrementing Sequence

There are two ways to enter the first number in the incrementing sequence. You can use batch data or use Option 1 to define the first number as a fixed character. The first number in the sequence must contain the same amount of digits as the highest number to be counted. For example, to count the numbers **1** to **999**, the first number in the sequence must be entered as **001**.

Option 61 (Re-image Field)

If you have a constant field that appears on top of a non-constant field, apply this option to the constant field. For example, you may create a tag for an item on sale. The tag shows both the old and the new prices, but has a line drawn through the old price.

The constant field can be a line, a box, a graphic, or constant text. This option redraws the constant field when the other field changes. If you do not use this option, the field may appear broken.


Syntax R, 61 |

R1. R Option Header.

R2. 61 Option 61.

Example R, 61

Reimages the constant field that appears next to a variable field.

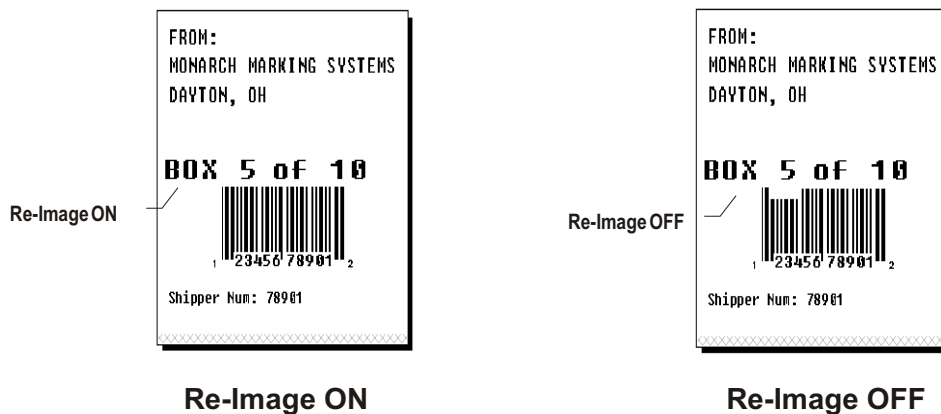

In the above example, Option 61 was applied to the bar code field to keep the incrementing field (Box #) from blocking out the bar code field.

Using Check Digits

Check digits are typically used to ensure that a text or bar code field scans correctly. If you apply Option 31, the printer calculates a check digit. A check digit scheme determines how the printer calculates a check digit. When you define a check digit scheme, you assign a number to identify it. This number is later entered in box **R4** when you apply Option 31 to a field. You can use check digits with text or bar code fields. Check digit calculations are performed on numeric data only. Do not use check digits with price fields. Do not define a check digit scheme for UPC, EAN, Code 39 (with the MOD43 check digit), and Code 93 bar codes, because they have predefined check digits.

Syntax {A,selector,action,device,modulus, fld_length,D/P,"weights" | }

A1. A Check Digit Header.

A2. selector Assign a number from **1 - 10** to this check digit formula.

A3. action The action to perform. Enter **A** to add the check digit scheme.

A4. device Format storage device. Options:
R RAM (default) When you turn off the printer, items saved in RAM are lost.
F Flash Memory. When you turn off the printer, items saved in Flash memory are saved.

A5. modulus Number from **2 - 11**. The modulus is used to divide the sum of products or the sum of digits.

A6. fld_length The maximum number of characters the field will contain.
Range: **0 - 2710**.

A7. D/P Algorithm. The algorithm determines how the check digit is calculated. Options:
D sum of digits
P sum of products

A8. "weights" String of digits used for calculation. A weight string is a group of two or more numbers that is applied to a field. The number of digits in this string should equal the number in fld_length. Enclose in quotation marks. Range: **0 - 2710**.

Example {A,1,A,R,10,5,P,"65432" | }

Adds check digit scheme number 1 to the printer's memory. The modulus is 10, the maximum number of characters in the field is 5. The check digit is calculated by using the Sum of Products and the string of digits used in the calculation is "65432."

Sum of Products Calculation

This is an example of how the printer uses Sum of Products to calculate a check digit for this data:

5 2 3 2 4 5 2 1 9

1. Weights are applied to each digit, starting with the last digit in the weight string. They are applied right to left, beginning at the right-most position of the field. Remember, a weight string must contain at least two different numbers. This example has a weight string of **1,2,3,4**:

field:	5	2	3	2	4	5	2	1	9
weight string:	4	1	2	3	4	1	2	3	4

2. Each digit in the field is multiplied by the weight assigned to it:

field:	5	2	3	2	4	5	2	1	9
weight string:	4	1	2	3	4	1	2	3	4
products:	20	2	6	6	16	5	4	3	36

- Next, the product of each digit is added together. This is the sum of the products.

$$20 + 2 + 6 + 6 + 16 + 5 + 4 + 3 + 36 = 98$$

- Divide the sum of the products by the modulus (10 in this case), only to the whole number. The balance is called the remainder.

$$\begin{array}{r} 9 \\ 10 \overline{)98} \\ \underline{90} \\ 8 \end{array}$$

- Subtract the remainder from the modulus.

The result becomes the check digit. In this case, the check digit is 2.

$$10 - 8 = 2$$

Sum of Digits Calculation

This is an example of how the printer uses Sum of Digits to calculate a check digit for this data:

5 2 3 2 4 5 2 1 9

- Weights are applied to each digit, starting with the last digit in the weight string. They are applied right to left, beginning at the right-most position of the field. Remember, a weight string must contain at least two different numbers. This example has a weight string of **1,2,3,4**:

field:	5	2	3	2	4	5	2	1	9
weight string:	4	1	2	3	4	1	2	3	4

- Each digit in the field is multiplied by the weight assigned to it:

field:	5	2	3	2	4	5	2	1	9
weight string:	4	1	2	3	4	1	2	3	4
products:	20	2	6	6	16	5	4	3	36

- Next, the digits of the products are added together. Two-digit products are treated as two separate digits. This is the sum of the digits.

$$2 + 0 + 2 + 6 + 6 + 1 + 6 + 5 + 4 + 3 + 3 + 6 = 44$$

- Divide the sum of the digits by the modulus (10 in this case), only to the whole number. The balance is called the remainder.

$$\begin{array}{r} 4 \\ 10 \overline{)44} \\ \underline{40} \\ 4 \end{array}$$

- Subtract the remainder from the modulus.

The result becomes the check digit. In this case, the check digit is 6.

$$10 - 4 = 6$$

CREATING GRAPHICS

This chapter provides information on how to

- map out the graphic image using the hexadecimal (hex) or run length method.


- create a graphic packet using a graphic header, bitmap, duplicate, next-bitmap, text, constant text, line, and box fields.

- place a graphic image into a format.

You can use graphic packets to create bitmapped images. To include a graphic packet within your format, your format must contain a graphic field. See “Placing the Graphic in a Format” for more information.

Overview of Bitmapped Images

A printed image is formed through a series of dots. Each square on the grid below represents a dot on the printhead. The graphic image is created by blackening dots in a specific pattern. You can print varying shades of gray according to the concentration of dots on the image. When the dots are printed together, the end result is a graphic image.

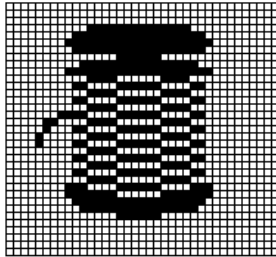

Determining a Method

You can use one of two methods to map out your graphic image:

Hex Method The dot sequences are segmented into binary numbers and then converted to hex numbers.


A graphic using gray-scaling, several slanted lines, or several vertical lines typically translates more efficiently with hex representation.

Run Length Encoding Method The dot sequences are segmented into black and white strings within a row. The total count of each white string is converted to a lower-case letter, corresponding to numeric value. The total count of each black string is converted to an uppercase letter, corresponding to numeric value. This method can reduce imaging time for graphics that contain repetitive rows of dots. A graphic with horizontal lines or very few white-to-black borders typically translates more efficiently with run length encoding.

The most efficient encoding method depends on how complicated your graphic image is and whether or not imaging time is a concern. You may want to experiment with both encoding methods to get optimal performance.

Designing Bitmapped Images

Once you determine the encoding method to use, you can begin mapping out your graphic image.

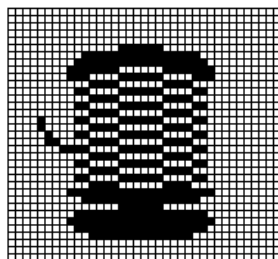

Note: The image that you map must be an upside down mirror image of the final result.

4. Repeat steps 1 through 5 for each row on the grid.
5. Insert the code values in syntax format.

Determining How to Store the Image

Once you have mapped out your graphic image, determine how you want to store it. You have several options:

- RAM
- Temporary Storage
- Flash

Using RAM

You should use RAM when the graphic image is used by several formats, because you only have to send the graphic image once. This eliminates the need to send the graphic image repeatedly. See “Placing the Graphic in a Format,” for more information about using the graphic packet in a format. Graphics smaller than approximately 1/2 inch by 1/2 inch can be stored in printer RAM and referenced by the graphic ID number.

Note: Graphics are stored in the image buffer and remain there until another format is sent or the printer is turned off.

Using Temporary Storage

You should use temporary storage when the graphic image is used only in one format or your graphic image is very large. Graphic data in temporary storage is held in the image buffer until the graphic is printed. Then, it is cleared from memory when you send a new or updated batch. You can use the same graphic image multiple times on a format. Send the graphic image to the printer after the format to which it applies.

If a graphic is stored in temporary storage, do not place a graphic field in the format. This causes an error. Instead, position the graphic image by using the row and column locations in the graphic packet header.

Image memory (temporary storage) accepts a graphic packet 2436 rows long with 384 dots per row.

Using Flash

You can use flash memory when the graphic image is used by several formats, because you only have to send the graphic image once. This eliminates the need to send the graphic image repeatedly. See “Placing the Graphic in a Format,” for more information about using the graphic packet in a format.

Creating a Graphic Packet

Your graphic packet can contain

- bitmapped fields (for bitmapped images)
- constant text fields
- lines
- boxes.

Images using hex representation or run length encoding are bitmapped images. See “Designing Bitmapped Images” to design your bitmapped image.

Once you design your graphic image, you are ready to define a graphic packet. This packet generates the graphic image you use in a format.

Positioning the Graphic Image


This section explains how to position the graphic image within a graphic packet header, a field of a graphic packet, or within a format.

Within the Graphic Packet Header

When you are using RAM, the row and column parameters in the graphic header are usually 0,0, because placement is controlled by the graphic field in your format.


When you are using temporary storage, these parameters control the placement of the graphic image on the supply.

The area enclosed within the dotted lines represents the graphic image starting at **0,0** (as defined in the graphic header).

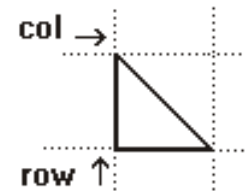

If you want a fixed amount of white space around your graphic image, use something other than 0 for row and/or column.


The area enclosed within the dotted lines represents the graphic image starting at **0,0** with a fixed amount of white space (**10,10**) around the graphic image.

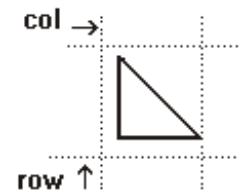

Within the Field

In a bitmap, constant text, line, or box field, the row and column parameters control where an individual field or bitmapped row begins in relation to the coordinates defined in the graphic header.

The bottom of the triangle in this example represents the first field of the graphic packet starting at **10,0**.

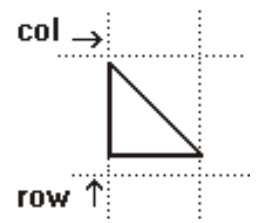

Within a Format

When you define the graphic field within your format, the row and column parameters represent where on the format to place the graphic image.

If you are placing a graphic (a logo, for example) within a certain area on your supply, enter the starting position (bottom left corner) of the graphic image.

This label shows the triangle “logo” beginning (the bottom left corner) at **155, 33** as defined in the graphic field.



Defining the Graphic Header

Every graphic packet must contain a graphic header. This is the first thing you enter. It identifies and provides important measurement and formatting information for the graphic. Bitmap, duplicate, next-bitmap, constant text, line, and box fields follow the graphic header, if they are used.

Syntax {G,graphID,action,device,units,row,col, mode,"name" |

G1. *G* Graphic Header.

G2. *graphID* Unique number from **0 - 999** to identify the graphic image.

G3. *action* The action to perform to the graphic. Options:
A Add the graphic.
C Clear the graphic from the printer.

G4. *device* Graphic storage device:

F Flash Memory (saved when the printer is turned off)
R Volatile RAM (format must contain a graphic field)
T Temporary Storage

Note: If you are using flash memory, send the graphic only once. Then, send only batches to reference it. If you re-send the graphic each time, it creates separate copies, and eventually fills up flash memory.

G5. *units* Unit of measure. Options:

E English, measured in 1/100 inches
M Metric, measured in 1/10 mm
G Graphic, measured in dots. For bitmapped graphics, G is the only valid option.

G6. *row* Distance between the bottom of the graphic image area and the first bitmap line. This is usually 0, unless you want a fixed amount of white space around the graphic image. See “Positioning the Graphic Image,” for more information.

English **0 - 365**
Metric **0 - 927**
Dot **0 741**

G7. *column* Distance between the left edge of the graphic image area and the left edge of first bitmap line. This is usually 0, unless you want a fixed amount of white space around the graphic image. See “Positioning the Graphic Image,” for more information.

English **0 - 189**
Metric **0 - 480**
Dots **0 - 383**

G8. *mode* Imaging mode. Enter **0**.

G9. *“name”* Graphic name (optional), **0-8** characters, enclose in quotation marks.

Example {G,99,A,R,G,0,0,0,"99Wire" |

Adds a graphic image identified by number 99 to volatile RAM. The graphic uses dot measurement. The image will be placed according to the row and column parameters in the graphic field. The imaging mode is 0 and the image is called 99Wire.

Creating Bitmap Fields

This defines one row of dots, starting at a specific row and column within the graphic image. Each unique row of dots requires a bitmap field. A bitmap field can later be repeated by using a duplicate field.

Syntax B, row, column, algorithm, "data" |

B1. B Bitmap Field.

B2. row Distance (in dots) from the graphic image's bottom margin to the bitmap line.

English **0 - 365**
Metric **0 - 927**
Dot **0 741**

B3. column Distance (in dots) from the graphic image's left edge to the bitmap line.

English **0 - 189**
Metric **0 - 480**
Dots **0 - 383**

B4. algorithm Coding method for bitmap data:

H Hex Representation
R Run Length Encoding

B5. data Character string made up of hex or run length encoding. Do not put spaces or any other character between the numbers. Range: **0 - 2710**.

Example {B,39,56,H,"3FFFFFF0" |

Defines a bitmapped graphic field. The image begins 39 dots from the bottom and 56 dots from the left edge of the graphic area. Hex representation is used.

Creating Next-Bitmap Fields

This field uses the previous field's row and column locations. It allows you to use the bitmap or duplicate field data without having to recalculate row and column locations. This field represents one row of dots on the image.

Syntax N, adjdir, adjamt, algorithm, "data" |

N1. N Next-Bitmap Field.

N2. adjdir Increments or decrements the row count. Inserts the duplicate line after or before the current row.

0 Increments (inserts after)
1 Decrements (inserts before)
For example:
B,50,35,R,"GsSsG" |
N,0,1,R,"DpZoD" |
prints a next-bitmap field on row 51 at column 35.

N3. adjamt Amount of row adjustment in dot rows. Using **0** overwrites the same line. Range: **0 - 999**.

N4. algorithm Coding method for bitmap data:

H Hex Representation
R Run Length Encoding

N5. "data" Character string made up of hex or run length encoding. Do not put spaces or any other character between the hex numbers or run length code letters. Range: **0 - 2710**.

Example B,39,56,H,"3FFFFFF0" |
N,0,1,H,"000000E00000" |

Defines a next-bitmap graphic field beginning on row 40. The row count increments by 1. Hex representation is used.

Creating Duplicate Fields

If a line of data is identical to a previous bitmap or next-bitmap field, the duplicate field allows you to repeat the dot sequence without retyping the data. A duplicate field represents one row of dots on the image.

Note: Duplicate fields are useful when you have a graphic with a lot of repetition.

Syntax D,adjdir,adjamt,count |

D1. D Duplicate Field.

D2. adjdir Increments or decrements the row count. Inserts the duplicate line after or before the current row.

- 0** Increments (inserts after)
- 1** Decrements (inserts before)

For example:

B,50,35,R,"GsSsG" |

D,0,20,2 |

inserts row 50 again at row 70 and row 90. Rows 70 and 90 do not have to be defined later.

D3. adjamt Amount of row adjustment in dot rows. Range: **0 - 999**. The above example adjusts the duplicate field to image on row 70 and 90 (adding 20 to the current row count).

D4. count Number of times to duplicate the line. Range: **0 - 999**.

Example B,117,24,H,"03FFFFFFFFFFFFFFFFFFFFFC" |
D,0,1,2 |

Defines a duplicate field that is imaged after the bitmap line. This field duplicates the preceding bitmap line twice (at row 118 and 119).

You can use constant text, line, or box fields in a graphic packet to create a compliance label overlay. See Chapter 2, "Defining Fields," for more information about these fields.

Sample Hex Graphic Packet

```
{G,99,A,R,G,0,0,0,"99WIRE" |  
B,39,48,H,"3FFFFFF0" |  
B,40,32,H,"01FFC0000000FF8" |  
B,41,32,H,"3E0000000000FC0" |  
B,42,24,H,"03C0003FFFFFFF0000F" |  
B,43,24,H,"7C3FFFFFFFFFFFFFFE1F0" |  
B,44,16,H,"0183FFFFFFFFFFFFFFF06" |  
B,45,16,H,"018FFFFFFFFFFFFFFFE" |  
B,46,16,H,"01FFFFFFFFFFFFFFFEE" |  
B,47,16,H,"01FFFFFF80001FFFFFFE" |  
B,48,16,H,"01FFFFF0000000007FFFC" |  
B,49,24,H,"7F800007FFFF00003FF0" |  
B,50,24,H,"1FC00007FFFF00001FC0" |  
D,0,4,4 |  
B,51,24,H,"1C03FFFFFFFFFFFFFFE01C0" |  
D,0,4,4 |  
B,52,32,H,"3FFFFFFFFFFFFFFE1C0" |  
D,0,4,4 |
```



```

B,53,24,H,"03FFF0000000007FFE" |
D,0,4,4 |
B,70,0,H,"0400001FC00007FFFF00001FC0" |
B,71,0,H,"0600001C03FFFFFFFFFFFFFFE01C0" |
B,72,0,H,"030000003FFFFFFFFFFFFFFE1C0" |
B,73,0,H,"01000003FFF0000000007FFE" |
B,74,8,H,"FC001C03FFFFFFFFFFFFFFE00C0" |
B,75,8,H,"FE00003FFFFFFFFFFFFFFE0C0" |
B,76,8,H,"1FF803FFF0000000007FFE" |
B,77,8,H,"0FFCFFC00000000000001C0" |
B,78,16,H,"FFDF000FFFFFFFFFFFF8003C0" |
B,79,16,H,"7FFFC00007FFFF00001FC0" |
B,80,24,H,"1C03FFFFFFFFFFFFFFE01C0" |
D,0,4,4 |
B,81,32,H,"3FFFFFFFFFFFFFFE1C0" |
D,0,4,4 |
B,82,24,H,"03FFF0000000007FFE" |
D,0,4,3 |
B,83,24,H,"1FC00007FFFF00001FC0" |
D,0,4,3 |
B,98,24,H,"03FFFFFFFFFFFFFFF0" |
B,99,24,H,"07FFFFFFFFFFFFFFFC" |
B,100,24,H,"1FF9FFFFFFFFFFFFFFF" |
B,101,24,H,"3FFE0007FFF8000FF80" |
B,102,24,H,"391E0027FFF803FFFC0" |
B,103,24,H,"1C7FFFFFFFFFFFFFFFC0" |
B,104,24,H,"1FC1FFFFFFFFFFFFFF1FC0" |
B,105,24,H,"0FFDFFFFFFFFFFFE0FF" |
B,106,24,H,"FFFFFFFFFFFFFFF8" |
B,107,32,H,"3FFFFFFFFFFFFFFE0" |
B,108,32,H,"03FFFFFFFFFFFFFF" |
B,109,48,H,"07FFF80" |
D,0,1,2 |
B,111,48,H,"FFFFFFFF" |
B,112,32,H,"FFF00000000FFE0" |
B,113,24,H,"078000FFFFFFFF001F" |
B,114,24,H,"78FFFFFFFFFFFFFFE060" |
B,115,16,H,"0187FFFFFFFFFFFFFFFC18" |
B,116,16,H,"027FFFFFFFFFFFFFFF2" |
B,117,16,H,"03FFFFFFFFFFFFFFFC" |
D,0,1,2 |
B,120,16,H,"01FFFFFFFFFFFFFFF8" |
B,121,24,H,"FEFFFFFFFFFFFFFFE0" |
B,122,24,H,"07FFFFFFFFFFFFFFFC" |
B,123,32,H,"FFFFFFFFFFFFFFC0" |
B,124,32,H,"01FFFFFFFFFFFFFF8" | }

```

Sample Run Length Graphic Packet

```

{G,99,A,R,G,0,0,0,"99WIRE" |
B,39,50,R,"Z" |
B,40,39,R,"KzI" |
B,41,34,R,"EzsF" |
B,42,30,R,"DpZoD" |
B,43,25,R,"EdZZEdE" |
B,44,23,R,"BeZZMeB" |
B,45,23,R,"BcZZW" |
B,46,23,R,"ZZZA" |
B,47,23,R,"ZDsZE" |
B,48,24,"TzkU" |
B,49,25,"HtRqJ" |
B,50,27,"GsSsG" |
D,0,4,4 |
B,51,27,"ChZWgC" |
D,0,4,4 |
B,52,34,R,"ZZEdC" |

```



```

D,0,4,4 |
B,53,30,R,"NzkN" |
D,0,4,4 |
B,70,5,R,"AuGsSsG" |
B,71,5,R,"BtChZWgC" |
B,72,6,R,"DxZZEdC" |
B,73,7,R,"CtNzkN" |
B,74,8,R,"FmChZWhC" |
B,75,8,R,"GsZZEdC" |
B,76,11,R,"JiNzkN" |
B,77,12,R,"NbJzZeC" |
B,78,16,R,"JaElZKmD" |
B,79,17,R,"QsSsG" |
B,80,27,R,"ChZWgC" |
D,0,4,4 |
B,81,34,R,"ZZEdC" |
D,0,4,4 |
B,82,30,R,"NzkN" |
D,0,4,4 |
B,83,27,R,"GsSsG" |
D,0,4,4 |
B,98,30,R,"ZZJ" |
B,99,29,R,"ZZM" |
B,100,27,R,"JbZZE" |
B,101,26,R,"MnToI" |
B,102,26,R,"CbHnTiP" |
B,103,27,R,"CcZZC" |
B,104,27,R,"GeZWcG" |
B,105,28,R,"JaZReH" |
B,106,32,R,"ZZI" |
B,107,34,R,"ZZE" |
B,108,38,R,"ZQ" |
B,109,53,R,"T" |
D,0,1,2 |
B,111,48,R,"ZF" |
B,112,33,R,"PzfK" |
B,113,29,R,"CpZBoE" |
B,114,25,R,"DcZZGfB" |
B,115,23,R,"BdZZMeB" |
B,116,22,R,"AbZZVbA" |
B,117,22,R,"ZZZB" |
D,0,1,2 |
B,120,23,R,"ZZZ" |
B,121,25,R,"ZZV" |
B,122,29,R,"ZZM" |
B,123,32,R,"ZZF" |
B,124,39,R,"ZT" | }

```

Placing the Graphic in a Format

To include a graphic within a format:

1. Design the graphic image as shown in “Designing Bitmapped Images.”
2. If you are using RAM, place a graphic field in the format file to reference the graphic. See the following section, “Defining the Graphic Field,” for more information.

Note: If you are using temporary storage, you do not need a graphic field in your format to reference the graphic image.

3. Download all the necessary packets (check digit, format, etc.).
4. Send the graphic file to the printer, if you have not already done so. See “Creating a Graphic Packet” for more information.

Defining the Graphic Field

The graphic field in a format references the graphic image by the graphID in the graphic header. **This field is required only if the graphic will be stored in RAM.**

Syntax `G, graphID, row, col, mode, rotation |`

G1. G Graphic Field.

G2. graphID Unique number from **0 - 999** to identify the graphic image.

G3. row Distance between the bottom of the print area on the supply to the bottom of the graphic image. Measured in selected units.

English **0 - 365**
Metric **0 - 927**
Dot **0 741**

The row specified in the constant text, bitmap, line, or box field is added to the row value above to determine the actual position in the format.

G4. column Distance between the left edge of the print area on the supply and the left edge of the graphic. Measured in selected units.

English **0 - 189**
Metric **0 - 480**
Dots **0 - 383**

The column specified in the constant text, bitmap, line, or box field is added to the col value above to determine the actual position in the format.

G5. mode Imaging mode. Enter **0**.

G6. rotation The orientation of the graphic on the supply. Enter **0**.


Example `G, 57, 0, 0, 0, 0 |`

Defines a graphic field that is identified by the number 57. The image begins at 0,0. The imaging mode is 0 and there is no rotation.

Sample Bitmap Graphic Image

The following format shows the graphic packets (hex and run length) in a sample format.

```
{F,2,A,R,E,200,200,"FMT2" |  
G,99,132,30,0,0 |  
Q,146,30,198,95,5,"" |  
T,1,5,V,175,100,0,1004,1,1,B,L,0,0,0 |  
T,2,5,V,150,100,0,1004,1,1,B,L,0,0,0 |  
T,3,15,V,120,25,0,1003,1,1,B,L,0,0,0 |  
T,4,15,V,95,35,0,1003,1,1,B,L,0,0,0 |  
L,S,84,15,84,195,10,"" |  
B,5,12,F,30,65,1,2,40,1,L,0 | }
```

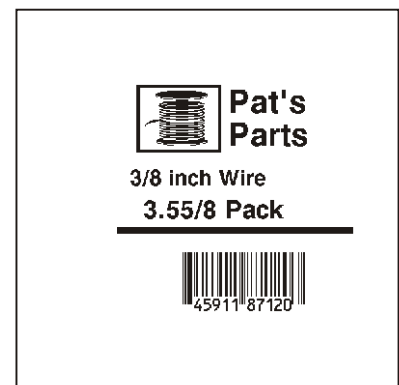

CONFIGURING THE PRINTER

5

This chapter discusses how to

- upload the printer's configuration or font information.
- configure the printer using online configuration packets.
- use immediate commands to control the printer's operation at any time.

Using Online Configuration Packets

Use online configuration packets to change the printer's settings. You can send an individual configuration packet or a single packet containing all the configuration packets. Supply all parameters for each packet.

Make a copy of the online configuration worksheet in Appendix D, "Format Design Tools," and save the original. Packets A - M are listed on the worksheet.

When you turn off the printer, all the information in the online configuration packets is saved and used when the printer is turned back on. After you change printer configurations, you must resend the format, batch, or graphic to the printer before the changes take effect.

Note: Some of these settings can be set offline or in an application.

Always include an **I**, immediately after the left bracket { and before the packet identifier (A, B, C, etc.). The **I** parameter identifies the data stream as a configuration packet.

Note: Include the **I** parameter with each packet if you are sending them individually. Include it only at the beginning of a data stream if you are sending multiple packets.

This is the syntax to use when you create online configuration packets:

Syntax

{	Start of Header
I ,	Configuration Header
1 - 7 optional records	
A, parameter 1...parameter 5	System Setup
B, parameter 1...parameter 5	Supply Setup
C, parameter 1...parameter 5	Print Control
D, parameter 1...parameter 3	Monetary Formatting
E, parameter 1...parameter 9	Control Characters
F, parameter 1...parameter 5	Communication Settings
M, parameter 1...parameter 4	Memory Configuration
}	End of Header

Syntax for single packet

{	Start of Header
I ,	Configuration Header
A, parameter 1...parameter 5	System Setup
}	End of Header

Syntax {**I**,0,U,N | }

Uploads the printer configuration from nonvolatile RAM and returns the following to the host.

```
A,0,0,0,1,0 |
B,0,0,1,0,0 |
C,0,0,0,0,0,0 |
D,1,0,2 |
E,"~123~044~034~124~125~126",",", "~013~010" |
F,3,1,0,0,1 |
M,R,R,160 |
M,T,R,20 |
M,I,R,320 |
M,D,N,1280 |
M,F,N,640 |
M,V,R,1280 |
```

The parameters for each packet (**A - M**) are displayed. Ignore the line beginning with G. In the first line that begins with **M**, 8725 is the total volatile memory available, 1345 is the memory used in volatile RAM. 2535 is the total non-volatile memory available, 615 is the memory used in non-volatile RAM. The remaining lines beginning with **M** list the buffer sizes in 1/10K for the Receive, Transmit, Image, Downloadable Fonts, Formats, and Scalable Fonts Buffers.

Configuration Syntax Guidelines

When creating a printer configuration packet:

Follow the “Standard Syntax Guidelines” listed at the beginning of this manual.

The first character after the **start of header** (**{**) is the **configuration header** (**|**).

Include the first five ANSI codes, at a minimum, in the control characters packet.

If you change any of the online configuration packets, resend the format packet to the printer, so the configuration changes take effect.

Defining the System Setup Packet

Use the system setup packet (A) to select the power up mode, display language, print separators between batches, print a “slashed zero,” and select the symbol set.

Syntax {**I**, A, powup_mode, language, sep_on, slash_zero, symbol_set | }

A1. A System Setup Packet

A2. *powup_mode* Online Mode. Enter **0**.

A3. *language* Display Language. Enter **0** (for English).

A4. *sep_on* Batch Separators. Enter **0**.

A5. *slash_zero* Slash Zero. Options:

- 0** Print a standard zero (default)
- 1** Print a zero with a slash through it

A6. *symbol_set* Symbol Set. Use **0** for the Internal Symbol Set. For scalable or TrueType® fonts, use:

- 1** ANSI
- 2** Code Page 437 (Latin U.S.)
- 3** Code Page 850 (Latin 1)
- 4** Code Page 1250 (Latin 2)
- 5** Code Page 1251 (Cyrillic)
- 6** Code Page 1252 (Latin 1)
- 7** Code Page 1253 (Greek)
- 8** Code Page 1254 (Turkish)
- 9** Code Page 1255 (Hebrew)
- 10** Code Page 1256 (Arabic)
- 11** Code Page 1257 (Baltic)
- 12** Code Page 1258 (Vietnamese)
- 13** DOS Code Page 852 (Latin 2)
- 14** DOS Code Page 855 (Russian)
- 15** DOS Code Page 857 (IBM Turkish)
- 16** DOS Code Page 860 (MS-DOS Portuguese)
- 19** Unicode
- 20** BIG5
- 21** GB2312
- 22** SJIS (Shift JIS) to SJIS (Code Page 932, Japanese)
- 23** GB2312 to GB2312 (Code Page 936, Simplified Chinese)
- 24** BIG5 to BIG5 (Code Page 950, Traditional Chinese)

Note: The Standard, Reduced, Bold, OCRA and HR fonts only support the Internal Symbol Set (0). The CG Triumvirate™ typefaces support only the ANSI and DOS Code Page 437 and 850 Symbol Sets. The scalable font (font#50) does not support Code Page 1256 (Arabic). Code pages 852-860 and 1250-1258 are for downloaded TrueType fonts or the scalable font. Code pages 102-107 require the print engine memory expansion option and a downloaded International TrueType font. TrueType fonts are designed to be regionally specific; therefore, all code pages may not be supported in a given font. See Appendix C, "Symbol Sets/ Code Pages" for more information.

Example {I,A,0,0,0,1,0 | }

Powers up the printer in the online mode, displays prompts in English, does not print a separator after each batch, prints zeros with slashes through them, and uses the internal symbol set.

Defining the Supply Setup Packet

Use the supply setup packet (B) to select supply type, ribbon, feed mode, supply position, and cut position.

Syntax {I,B,supply_type,ph_energy,feed_mode,supply_posn | }

B1. B Supply Setup Packet

B2. supply_type Supply Type. Options:

- 0** Black mark supply (default)
- 2** Continuous (non-indexed) supply

Note: You may need to adjust the print contrast (in the Print Control packet), based on the type of supply you are using.

B3. ph_energy Printhead Energy setting based on the supply loaded. Options:

- 0** Standard Supplies
- 1** Special (fax paper)
- 2** High Energy (synthetic)

B4. feed_mode Feed Mode. Options:

- 0** Continuous operation (default)
- 1** On-demand mode

B5. supply_posn Supply Position. Range: **-99 - 99** in 1/203 inch. **0** is the default. Do not change this setting. If you need to move the printing for a pre-printed area, change the print adjustment.

Example {I,B,0,2,1,0 | }

Indicates black mark synthetic supply has been loaded, causes the printer to operate in on-demand mode, and does not adjust the supply position.

Defining the Print Control Packet

Use the print control packet (c) to set the contrast, print, and margin adjustment, print speed, and printhead width.

Syntax {**I**,**C**,contrast,print_adj,margin_adjust,speed_adj,ph_width | }

C1. C Print Control Packet

C2. contrast Print Contrast. Range: **-28 - 40**. 0 is the default. You may need to adjust this value depending on the type of supplies you are using. For example, synthetic supplies require a higher print contrast, but receipt paper requires less contrast.

C3. print_adj Print Adjustment (position). Range: **-99 - 99** in 1/203 inch. **0** is the default. Adjusts where data prints vertically on the supply. Increase the print position to move print up, decrease to move print down for a pre-printed area.

C4. margin_adj Margin Adjustment (position). Range: **-99 - 99** in 1/203 inch. **0** is the default. Adjusts where data prints horizontally on the supply. Increase the margin position to move print to the right, decrease to move print to the left.

C5. speed_adj Print Speed in inches per second (ips). Options:

0 The printer determines the print speed automatically. This is the default.

40 Formats not containing serial bar codes print at 4.0 ips.

 The printer does not print less than 3.0 ips when this is selected.

Note: Serial bar codes, lines, and graphics print at 2.0 ips. Synthetic supplies and special supplies print at 1.5 ips.

C6. ph_width Width of the printhead in dots. Use **0**.

Example {**I**,**C**,0,0,0,40,0 | }

Uses the default contrast, print adjustment, margin adjustment, prints at 4.0 ips when possible, and uses the default printhead width.

Defining the Monetary Formatting Packet

The monetary formatting packet (D) selects the monetary symbols to print for a price field. Use the monetary formatting packet to select primary and secondary monetary symbols, and designate the number of digits to appear at the right of a decimal.

Syntax {**I**, **D**, *cur_sym*, *secondary*, *decimals* | }

D1. D Monetary Formatting Packet

D2. cur_sym Currency Symbol. Options:

- 0** No symbol
- 1** USA (\$, Dollar- default)
- 2** UK (£, Pound)
- 3** Japan (¥, Yen)
- 4** Germany (₹, Deutsche Mark)
- 5** France (F, Franc)
- 6** Spain (P, Peseta)
- 7** Italy (L., Lira)
- 8** Sweden (Kr, Krona)
- 9** Finland (₯, Markka)
- 10** Austria (₯, Shilling)
- 11** India (Rs, Rupee)
- 12** Russian (₮, Ruble)
- 13** Korean (₩, Won)
- 14** Thai (฿, Baht)
- 15** Chinese (¥, Yuan)
- 16** Euro (€)

Note: To use these symbols, select the internal symbol set.

D3. secondary Secondary Sign. Options:

- 0** No secondary sign (default)
- 1** Print secondary sign

Note: Secondary symbols only print if you designate at least one decimal place.

D4. decimals Number of digits to the right of the decimal. Options:

- 0** No digits
- 1** One digit
- 2** Two digits (default)
- 3** Three digits

Example {**I**, **D**, **1**, **1**, **2** | }

Prints the dollar sign, uses a secondary symbol, and places two digits to the right of the decimal.

Defining the Control Characters Packet

Use the control characters packet (E) to enable and disable the immediate commands. Do not change the MPCL control characters.

Changes take effect with the first character following the end of header character } of the configuration packet. Each control character must be unique and cannot appear anywhere else in your packet, except within quotation marks. You can customize the trailer characters to work with your host.

Use the following syntax for the control characters packet. Notice all but the first parameter are within quotation marks.

Syntax {I,E,"ANSI_cd","string1","string2" |

E1. E Control Characters Packet

E2. "ANSI_cd" ~123 Start of header { (left bracket)
 ~044 Parameter , (comma)
 separator
 ~034 Quoted strings " (quotes)
 ~124 Field separator | (pipe sign)
 ~125 End of header } (right bracket)
 ~126 Data escape ~~ (double tilde)

 character (optional)

def. ch. Immediate command character (optional).

 Up to any 3 characters in the 0 - 255 decimal range. The character must be defined before this command can be used. The caret (~094) is normally used.

Note: "ANSI_cd" includes seven separate parameters. The first five parameters are required. The other parameters are optional.

E3. "string 1" Terminator for status requests and ENQ requests. The default is "013". Sending "" disables this sequence.

E4. "string 2" Terminator for job requests and data uploads. The default is none. Sending "" disables this sequence.

You must send the control characters packet to enable the immediate commands. An immediate command will execute immediately, even if it is embedded within quotation marks, and all data following the command in the string will be ignored.

Example {I,E,"~123~063~034~124~125~126~094" | }

Enables immediate commands by defining the ^ (~094) symbol as the command identifier. The other MPCL control characters do not change.

Using Immediate Commands

Immediate commands affect printer operation as soon as the printer receives them, even if they are included within a packet or used inside quotation marks.

You can use immediate commands to change immediate command or status polling control characters, reset the printer, or cancel and repeat batches.

Enabling Immediate Commands

When the printer is first turned on, these commands are not available. To use these commands, you must first send the control characters packet and define the immediate command control character. The immediate command control character is saved in non-volatile RAM so it is not lost after you turn off the printer. Once the immediate command control character is defined, the immediate commands are enabled.

Sending Immediate Commands

Immediate commands consist of a three- or four-character sequence you can send in a packet or embed in your application. Each command must be sent separately.

Syntax control character_immediate command

The printer can accept only one immediate command at a time. Sending a command before the previous one is completed can result in an error.

Example ^CB

Immediately cancels the batch currently printing unless an error exists in the printer. This example assumes that the defined immediate command control character is the caret (^).

Command	Parameter
^CA	Cancels all the batches in the queue unless an error exists on the printer.
^CB	Cancels only the current batch being printed unless an error exists.
^DD or ^DCd	Disables the MPCL data escape character (the tilde) and inhibits MPCL from acting on ANY data escape sequence from the host. Sets the MPCL data escape character to the ASCII value given by the d parameter. The value can be any ASCII character.
^EA	Aborts an error condition. This command is the same as pressing Escape to clear an error. May need to be sent multiple times. Use ^RB to reprint batch. Caution: This command causes the current batch to stop and the condition that caused the error to remain uncorrected.
^ER	Resets the error. This command is the same as pressing Enter to acknowledge an error. Normal operation resumes.
^FD	Feeds a label when printer is idle. Simulates the operation of pressing the trigger and dispenses the next label if printer is in the on-demand mode. Note: Printer ignores this command if printing.
^ID or ^ICd	Disables the Immediate Command feature by turning off the Immediate Command escape character. Sets the Immediate Command escape character to the ASCII value given by the d parameter. The value can be any ASCII character. Use ^IE to enable immediate commands.
^MC	Returns the customer ID or RPQ version to the host. (00 - 99)
^MD	Returns the printhead dot density to the host. 00 = 203 dpi 01 = 300 dpi
^MF	Uploads the MIF file to the host.
^MI	Returns the customer ID or RPQ revision level to the host. (00 - 99)
^MM	Returns the model number to the host. 30 = 6039
^MP	Returns the prototype number to the host. (00 - 99)
^MR	Returns the revision number to the host. (00 - 99)
^MS	Returns the flash file system information (fonts).
^MV	Returns the version number to the host. (00 - 99)
^PR	Resets the printer. This command takes five seconds to complete and then the printer is ready to receive data. It has the same effect as turning off and then turning on the printer. Note: Command should be used only when the printer is not printing.
^RB	Repeats the last printed batch, printing the same number of labels as specified in the original batch. This command does not work if using batch separators. Note: Printer ignores this command if printing.

Command	Parameter
^RS	Resynchronizes supply when supply roll is changed. Note: Printer ignores this command if printing.
^SD or ^SCd	Disables the status polling feature by turning off the status polling control character. Sets the status polling control character to the ASCII value given by the d parameter. The value of d can be any ASCII character.
^TF	Uploads the print engine memory expansion status as N/A (not installed) or Installed (memory expansion is ready for use).
^TP	Prints a diagnostic label set. Note: Printer ignores this command if printing.
^UD	Uploads the print engine memory expansion's directory. The list of files and their sizes are returned to the host.

The table represents the defined immediate command control character as ^ and the defined status polling control character as d. You may define these characters to suit your needs.

Note: To use the immediate command control character or the status polling character within your data, use the tilde sequence.

Example ^UD

```
File Name: PCL_223.TTF, File Size: 4516
File Name: PCL_160.INI, File Size: 64
File Name: PCL_160.TTF, File Size: 3180584
File Name: PCL_50.INI, File Size: 64
File Name: PCL_50.TTF, File Size: 95840
File Name: PCL_100.INI, File Size: 64
File Name: PCL_100.TTF, File Size: 4516
File Name: PCL_147.INI, File Size: 64
File Name: PCL_147.TTF, File Size: 5669904
File Name: PCL_139.INI, File Size: 0
File Name: PCL_139.TTF, File Size: 252800
File Name: PCL_142.INI, File Size: 64
File Name: PCL_142.TTF, File Size: 6354884
File Name: PCL_131.INI, File Size: 64
File Name: PCL_131.TTF, File Size: 2145892
K bytes Free: 470896
```

The "PCL_" designates a font file, the number is the font number used in the text or constant text field and ".TTF" designated a True Type font file. The size of the file is shown in bytes.

Defining the Communication Settings Packet

Use the communication settings packet (F) to set the baud rate, word length, stop bits, parity, and flow control for serial communications. Do not change the communication settings.

Syntax {I,F,baud,word_length,stop_bits,parity,flow_control | }

F1. F Communication Settings Packet

F2. baud Baud Rate. Enter **7** for 115200.

F3. word_length Word Length. Enter **1** for an 8-bit word length.

F4. stop_bits Stop Bits. Enter **0** for 1-stop bit.

F5. parity Parity. Enter **0** for None.

F6. flow_control Flow Control. Enter **3** for XON/XOFF.

Example {I,F,7,1,0,0,3 | }

Uses 115200 baud, an 8-bit word length, one stop bit, no parity, and XON/XOFF mode.

Defining the Memory Configuration Packet

Use the memory configuration packet (M) to customize the size of your printer's buffers, which gives you greater flexibility in your formats.

Memory must be allocated in 1/2K increments. The memory configuration packet does not accept decimals, so enter whole numbers. Multiply the amount to reallocate (in K) by 10. For example,

To reallocate (in K)	Enter this amount
1	10
1.5	15
2	20
2.5	25
153	1530
229.5	2295

Each buffer's allocated memory remains in effect until that buffer is reallocated. For this reason, you may want to reallocate all the buffers when reallocating any buffer. If you reallocate more memory than you have available, you will receive an error.

Syntax {I,M,buffer,device,buffer_size | }

M1. M Memory Configuration Packet

M2. buffer Buffer type. Options:

- D** Downloadable Fonts
- F** Format
- I** Image
- R** Receive
- T** Transmit
- V** Scalable (vector) fonts

M3. device Storage type. Use **R** (volatile RAM)

Note: You cannot reallocate flash memory.

M4. buffer size Buffer size in 1/10K ranges. Options:

- 5 - 40** Transmit (16 is the default)
- 20 - 160** Receive (64 is the default)
- 160 - 1142** Image (380 is the default)
- 160 - 1280** Format (320 is the default)
- 640 - 1280** Downloadable Fonts (640 is the default)
- 10 - 1280** Scalable Fonts (640 is the default)

Note: For the scalable font buffer, specify 10 if you do not use the buffer. When using the buffer, specify a minimum of 40.

The larger the number you specify for the image buffer, the longer your formats can be. As a rule of thumb, divide the value you select by 100, and round up to the next whole number. That number will be the length in inches.

Example {**I,M,I,R,1530** | }

Stores the image buffer in volatile RAM and allocates 153K for it.

Checking Current Buffer Sizes

Send a configuration upload packet to check the sizes of your current buffers. See “Configuration Packet Header” for more information. After you check your current buffer sizes you can begin reallocating memory.

If you want to increase your image buffer and you will not be using scalable fonts, add that memory into your image buffer.

Example

{ I,M,R,R,20	Receive buffer	2K
M,T,R,10	Transmit buffer	1K
M,D,N,80	Downloadable fonts	8K
M,V,R,160	Scalable fonts buffer	16K
M,I,N,3200 }	Image buffer	320K

Make sure memory is available before adding memory to a buffer. In the above example, if the image buffer (**M,I,N,3200**) was defined before the downloadable fonts and scalable fonts buffers (**M,D,N,80** and **M,V,R,160**) were defined, an error would have occurred.

About Memory Buffers

Transmit Buffer Used to send ENQ, job, and upload responses. This buffer must be allocated as volatile (**R**) RAM.

Receive Buffer Used to save data received from the host before it is processed by the printer. Changing this buffer size affects the amount of data the printer can receive without using flow control. This buffer must be allocated as volatile (**R**) RAM.

Image Buffer Used to image the current format. To use supply lengths greater than 4.0 inches, you must reconfigure memory. An image up to 11.65 inches can be created by increasing the image buffer. You may not be able to use scalable or downloadable fonts if you have allocated memory from these buffers into your image buffer. Use the formula below to calculate the required image buffer size.

$$21K \times Length$$

Length is the length of your label in inches.

Example

$$21\text{K} \times 6.5 = 136.5\text{K}$$

(Multiply by 10 and round up.)

$$136.5\text{K} \times 10 = 1365$$

Enter 1365 for your Image buffer.

Format Buffer

Used to store formats, batch data, and graphics. Use the following formula to calculate the required format buffer size:

$$\text{Linecount} \times 50/1024$$

Linecount is the number of lines in your format packet including the format header and all the options.

The result of the above calculation is in kilobytes.

**Downloadable
Fonts Buffer**

Used to store downloaded soft TrueType fonts. To determine the size of your downloadable fonts, send a font packet. The file size, in bytes, is the minimum amount needed in this buffer. See "Using the Font Packet" for more information.

**Scalable (Vector)
Fonts Buffer**

Used to image the scalable or downloaded TrueType font characters. Increasing this buffer size allows more characters to be saved in cache memory, so the characters do not have to be re-built the next time they are printed. Use **0** if you are not using scalable/TrueType fonts. This buffer must be allocated as volatile (**R**) RAM.

The printer does not print the fonts if there is not enough memory in this buffer to image them.

Buffer Worksheet

Make copies of this page to use as a buffer worksheet.

	HEADER	BUFFER	DEVICE	BUFFER SIZE
DOWN LOADABLE FONTS BUFFER	M	D		
FORMAT BUFFER	M	F		
IMAGE BUFFER	M	I		
RECEIVE BUFFER	M	R	R	
TRANSMIT BUFFER	M	T	R	
SCALABLE FONTS BUFFER	M	V	R	

Buffer Allocation Considerations

Keep these items in mind when allocating memory.

Do not allocate more memory than what is available.

Free memory from one buffer before you add it to another buffer.

Reallocate all the buffers if you need to reallocate any buffer.

Send all buffer (re)allocations in one packet. The printer evaluates each individual buffer allocation separately. If one buffer allocation is invalid, the entire packet is invalid. For example, if you send

```
{I,M,R,N,20 |  
M,T,N,60 |  
...}
```

the printer ignores the entire packet, because the second line allocates 6K for the transmit buffer, and 4K is the maximum for that buffer. If you define a buffer size that exceeds the maximum value, an error occurs. However, no information is lost.

Whenever the printer accepts a memory configuration packet, it takes effect immediately, causing a printer reset. Any information contained in the buffers is lost. Resend your formats, batches, graphics, or fonts to the printer.

If you remap your image buffer, make sure the length and width specified in your format header are not too large for the current image buffer. In other words, if you remap for a 2 x 6 inch label, you cannot print a 2 x 8 inch label without receiving an error, until you change your format header or increase your image buffer.

Memory Considerations with Downloaded TrueType Fonts

The size of the TrueType font file, in bytes, is the minimum amount of memory you must have available in the downloadable fonts buffer.

The scalable (vector) fonts buffer is used to image the downloaded fonts (TrueType). If you are using several downloaded TrueType fonts, you may need 100K or more in this buffer. The printer does not print the fonts if there is not enough memory in the scalable (vector) fonts buffer.

To use large point sizes (greater than 60 point), you must reconfigure memory and increase the size of the scalable (vector) fonts buffer.

Clearing Packets from Memory

You may want to remove packets from the printer to increase memory storage capacity or if the formats/fonts are no longer needed. In some cases, turning the printer off may clear the packets from memory. If not, send a format clear packet.

Syntax {header,packet#,action,device | }

1. *header* Identifies the packet. Options:

A	Check Digit Scheme
F	Format
G	Graphic
W	Font

2. *packet#* Identification number of the packet to clear (**1 - 999**) or font number (**0 - 9999**). **0** is for all fonts.

3. *action* Enter **C** to clear the packet.

4. *device* Storage device. Options:

F	Flash Memory
R	Volatile RAM

Example {F,1,C,R | }

Clears Format #1 from volatile RAM.

Using the Font Packet

You can use a font packet to add or clear downloaded fonts from memory, upload your font buffer, font data, or the cell size information for a particular font. The font packet is useful when you are downloading fonts. If you are using downloaded fonts, the font number and the number of bytes each downloaded font uses is listed.

This packet does not list the number of bytes the standard printer fonts use.

Use the MONARCH® MPCL Toolbox **Font Utility** (available on our Web site) to create the font header and data. Refer to the online help for more information.

Syntax {W,font#,action,device,data_length,data_record | }

W1. W Writable Font Header.

W2. font# The font identifier from **0 - 32000**. Use **0** to specify all fonts.

W3. action Action. Options:

- A** Adds the specified font.
- C** Clears all or specified fonts, except ones in flash.
- H** Uploads font size information.
- M** Uploads font memory usage information.

W4. device Device. Options:

- F** Flash
- M** Print engine memory expansion (must use for International fonts)
- R** Volatile RAM
- Z** All devices (use for upload).

W5. data_length The length of the font data. The range is **68 - 16384**.
(optional)

If you are creating fonts, you need to have font data included with this packet.

W6. data_record Multiple data records define the font. The first character is either an **H** (hex) or an **R** (run-length), referring to the algorithm. The rest of the record is up to 2710 characters of font data in double quotes. Separate the algorithm and the data with a comma, and end the record with |.
(optional)

Example {W,0,M,R | }

Selects all fonts and checks the memory usage in RAM. The printer returns the following to the host:

```
{W,0,M,R |  
Number of bytes free, Number of bytes used | }
```

Example {W,0,H,Z | }

Selects all fonts and uploads the font size information for any downloaded fonts.

The printer returns the following to the host:

```
{W,0,H,Z |
0,1,0,"Standard",0,0,0,14,22,14,22,3 | _____ Spacing
0,2,0,"Reduced",0,0,0,7,14,7,14,1 | _____
0,3,0,"Bold",0,0,0,24,34,24,34,3 | _____ Baseline
0,4,0,"OCRA",0,0,0,13,24,13,24,3 | _____
0,5,0,"HR1",0,0,0,12,20,12,20,2 | _____ Cell Height
0,6,0,"HR2",0,0,0,10,16,10,16,1 | _____
0,10,0,"CGTriBd9",1,0,7,25,31,10,15,0 | _____ Inter-CharacterGap
0,10,1,"CGTriBd9",1,0,7,25,31,10,15,0 | _____ Nominal Width
0,10,437,"CGTriBd9",1,0,7,25,31,10,15,0 | _____
0,10,850,"CGTriBd9",1,0,7,25,31,10,15,0 | _____
0,11,0,"CGTriumv6",1,0,5,17,21,5,10,0 | _____ Nominal Height
0,11,1,"CGTriumv6",1,0,5,17,21,5,10,0 | _____
0,11,437,"CGTriumv6",1,0,5,17,21,5,10,0 | _____ Printhead Density
0,11,850,"CGTriumv6",1,0,5,17,21,5,10,0 | _____
0,1000,0,"CGTriumv6.5",1,0,6,19,23,8,11,0 | _____
0,1001,0,"CGTriumv8",1,0,7,22,28,10,15,0 | _____ Symbol Set
0,1002,0,"CGTriumv10",1,0,8,28,34,12,17,0 | _____
0,1003,0,"CGTriumv12",1,0,9,33,41,15,22,0 | _____ Type
0,1004,0,"CGTriumv18S",1,0,11,46,51,22,33,0 | _____
0,1005,0,"CGTriumv22s",1,0,14,55,63,27,41,0 | _____
0,1006,0,"CGTriBd6.5",1,0,6,18,23,6,11,0 | _____
0,1007,0,"CGTriBd8",1,0,7,22,29,8,14,0 | _____
0,1008,0,"CGTriBd10",1,0,8,28,35,10,17,0 | _____ Font Style
0,1009,0,"CGTriBd12",1,0,9,33,41,11,22,0 | _____
0,1010,0,"CGTriBd18S",1,0,10,42,49,17,34,0 | _____ Cell Width
0,1011,0,"CGTriBd22S",1,0,12,51,60,21,42,0 | _____
0,1012,0,"LGothBd6.5",0,0,5,9,21,6,10,1 | _____
0,1013,0,"LGothBd9",0,0,7,14,31,10,15,2 | _____ Font Name
0,50,0,"Swiss Bold",1,1,95840 | }
```

- Spacing** Monospaced (0) or proportional (1).
- Type** Bitmapped (0) or scalable (1).
- Baseline** Bottom of the font.
- Cell Width** Horizontal number of dots to contain the widest character.
- Cell Height** Vertical number of dots to contain the tallest character.
- Nominal Width** Average width for lower-case letters.
- Nominal Height** Average height for lower-case letters.
- Inter-Character Gap** Default spacing between characters in monospaced fonts.
- Printhead Density** Displays a (0) for the 203 dpi printhead.

Uploading Format Header Information

You can upload format header information from the formats in memory to check the supply length and width for each format.

Syntax {header,format#,action,device | }

F1. header Format Header

F2. format# Format number from **0 - 999**. 0 is for all formats in memory.

F3. action Action. Options:

- A** Adds the specified format
- C** Clears the specified format
- H** Uploads format header information

F4. device Device. Options:

- R** Volatile RAM
- Z** All devices (use for upload)

Example {F,0,H,Z | }

Selects all formats in memory and returns the following:

Example {F,0,H,Z |
Fmt_1,406,406 |
Fmt_10,324,406 |
Fmt_15,812,812 |
Fmt_20,305,609 |
Fmt_25,1218,406 | }

Displays the format number, supply length and supply width (in dots) for each format in memory.

Example {F,1,H,Z | }

Selects format1 and returns the following to the host:

```
{F,1,H,Z |  
Fmt_1,406,406 | }
```

Displays the supply length and supply width (in dots) for format1.

PRINTING

6

This chapter describes how to define the batch header, batch control, and batch data files.

Defining the Batch Header

Batch data is the actual information printed on the supply. Batch data fills in the format's text, bar code, and non-printable text fields.

A batch packet contains the following three parts:

- batch header** identifies the format and how many labels to print.
- batch control** defines the print job.
- batch data (optional)** defines the actual information printed on the label.

A batch header begins the file. It tells which format the batch uses and how many labels to print. To record batch data, make a copy of the worksheet in Appendix D, "Format Design Tools."

- Syntax** {B,format#,N/U,quantity |
- B1. B** Batch Header.
- B2. format#** Format number (**0-999**) to use.
- B3. N/U** Controls how image is generated.
- N** New (default). Erase image and re-image all fields using online data. Any missing fields will be blank.
- U** Update last image with one or more fields. All other fields remain the same as the last queued batch.
- B4. quantity** Quantity to print (**1-999**).
- Note:** Using 0 pre-images the field to reduce the imaging time for labels. See "Batch Quantity Zero Method" for more information.

Example {B,1,N,1 |

Defines a batch header that uses format #1 and reimages all fields using the online data. One label is printed with this batch.

Defining the Batch Control Field

The batch header must precede this field. The batch control field defines the print job and applies only to the batch that immediately follows.

- Syntax** E,feed_mode,batch_sep,print_mult,multi_part |
- E1. E** Batch Control Field.
- E2. feed_mode** Feed Mode. Options:
- 0** Continuous Feed (default)
- 1** On-Demand
- E3. batch_sep** Batch Separator. Use **0**.
- E4. print_mult** Number of tags (**1 - 24**) with the same image. 0 is the default.
- E5. multi_part** Number of identical parts on one tag (**1 - 5**). 0 is the default.

Example E,0,0,1,1 |

Defines a batch control field. Continuous feed mode is used and no separator prints between batches.

Defining Batch Data Fields

Batch data fields should be sent in field number order. Use continuation fields for large amounts of data. If you are using N (New) in the batch header, you must list all fields with your data in sequence. If you are using U, you need to list only those fields and data that changes from the last printed batch.

- Syntax** field#,"data string" |
- C,"continuation" |
- field#** Identifies the text, bar code, or non-printable text field in which to insert the following data. Range: **0 - 999**.

- "data string"* Provides the actual information to appear in fields. Enclose in quotation marks. Length: **0 - 2710** characters.
- C* Optional. Identifies information to be appended to the data string.
- "continuation"* Optional. Provides the actual information to be added to the batch packet. Enclose in quotation marks. Use this option to break up longer fields. Length: **0 - 2710** characters.

Example

```
1, "Size 12" |
2, "" |
3, "Blue" |
C, "and this would be appended." |
```

Defines a batch data field. "Size 12" prints in field #1, a blank line appears in field #2, "Blue and this would be appended" prints in field #3.

Using Special Characters in Batch Data

There are two ways to specify special characters in batch data:

Place a tilde (~) before each character.

Use a tilde with the decimal ASCII equivalent.

For example, you can use "" or ~034 to print the " character in your batch data; otherwise, the tilde characters are ignored. You can also use ~XXX where XXX is the decimal equivalent of an unprintable character.

Sample Batch Data with Special Characters

{B,1,N,1	Decimal Character	What Prints
1, "123~034456789"	~034 is "	123"456789
2, "~094983~'126LG4451"	~094 is ^ ~126 is ~	^983~'LG4451

Merged or Sub-Fields

If a field is completely filled by data copied from other fields, use quotation marks without spaces between them for data string.

Incrementing Fields

In incrementing fields, the first number in the sequence must contain the same number of digits as the highest number to be counted. For example, to increment the numbers in a field from **1 - 999**, enter the starting number in the batch as **001**.

Downloading Methods

You can download the format and batch data using one of three methods: sequential, batch, and batch quantity zero.

Sequential Method

Using the sequential method, you send all your format and batch data at one time. Use this method when your application does not require operator intervention to input data. All data is sent down at one time, and the printer then images each field. As soon as the last field is imaged, your labels begin to print.

Example {Format}
 {Batch Packet}

Batch Method

This is similar to the sequential method, but it is used when you want to send multiple batches. All data for the first batch is sent at one time, and the printer then images each field. As soon as the last field for the first batch is imaged, labels begin to print. This process is repeated for each subsequent batch.

Example {Format}
 {Batch Packet}
 {Batch Packet}

Batch Quantity Zero Method

You may use the batch quantity zero method when your application requires operator intervention to enter data. While the operator is entering data, the previous field is sent with a batch quantity of zero. The printer images the field, but does not print it. After the operator enters the data for the last field, the batch quantity can be specified. The last remaining field is imaged, and the label prints almost immediately.

To use the batch quantity zero method:

1. Send the format and a batch header in one file. The first time you send the batch header, use the parameter **N** (new batch), and the parameter **0** for (zero quantity). This ensures the label is properly positioned.

The printer images constant text, line, and box fields, but does not print them.

2. Input data for each field, and send it with a batch header using the parameter **U** (batch update) and a quantity of zero. When the printer receives the data, it immediately images the field, but does not print it.

At this time, the printer is imaging all associated fields, including fields that copy from other fields.

3. Repeat step 2 for each field except the last one.
4. For the last field, input data and send a batch header with the quantity of labels you want printed. When the printer receives input for the last field, it immediately prints the labels. See "Reducing Imaging Time" in Chapter 8 for an example using the batch quantity zero method.

Modifying Formats

The optional entry method is a quick way to modify your format fields, check digit fields and configuration packets.

Optional Entry Method

This method enables you to reset only the parameters you want to change. Commas act as placeholders for unchanged parameters. The optional entry method reduces file size and increases the speed at which files are sent to the printer.

TROUBLESHOOTING

7

This chapter explains how to

- print diagnostics labels
- reset the printer
- call Technical Support.

This chapter also provides explanations of your printer's errors. The errors are classified by type and are listed in order. If you have trouble loading supplies or performing maintenance, refer to your *Operator's Handbook*.

Follow the directions provided with the error description to correct the problem. If you cannot clear an error, turn off the printer, wait several seconds and then turn on the printer. Call Technical Support if you receive any error message not listed in this chapter.

Printing Diagnostics Labels

1. Select the printer icon from status bar on the display.
2. Select **Printer Diagnostics**.
3. Select Printer from the **Printer Diagnostics** menu.
4. Select **Diagnostic Labels** from the **Printer Tests** menu.
5. Select **Diag Label** from the **Diagnostic Labels** menu.

```
Monarch
MODEL: 6039 S/M: Version 1.0
A, 0, 0, 0, 0, 0; B, 0, 0, 0, 0, 0;
C, 3, 0, 0, 0, 0, 0;
D, 1, 0, 2;
E, {, , , ", , , , , , , , - , Od/Oa;
F, 4, 1, 0, 0, 3;
G, 0, 0, 0;
M, D, R, 640; M, F, R, 320;
M, I, R, 380; M, R, R, 40;
M, T, R, 10; M, V, R, 640;
```

```
Monarch
MODEL: M6039 S/M: Version 1.0
TOTAL INCHES: 0000505
HI ENERGY INCHES: 0000000
VOLTAGE: 07.45
CONTRAST POT: N/A
PH RESISTANCE: (0384) 0319
BAD DOTS: 000
MEMORY: 1024KR/2048KN
OPTIONS: --
SNID: N/A
```

Two diagnostic labels print. The diagnostic labels show the printer's configuration, as well as the model number and software version number. Refer to the System Administrator's Guide to print the checkerboard, grey scale, serial and parallel quality labels. With version 2.0 or greater software, the printer has International font capability.

Reading Diagnostics Labels

The first diagnostic (test) label shows the model number, software version, and the printer's configuration by packet. See Chapter 5, "Configuring the Printer," for more information about the printer's configuration.

The second diagnostic (test) label shows the model number, software version, total number of inches printed, voltage, print contrast, printhead resistance, number of bad dots, and memory. In the example above:

- The printer has printed 505 inches of regular supplies
- The printer has printed no high-energy (synthetic) supplies
- No options are set
- CONTRAST POT does not apply.

If You Receive an Error Message

Any time you receive a message that is not described in this manual, or the recommended action does not solve the problem, call Technical Support.

Calling Technical Support

Technical support representatives are available Monday through Friday during regular business hours. Their number is listed on the back cover of this manual. Follow these steps before you call:

1. Make sure your PC and printer are properly connected.
2. Record any error messages that occurred.
3. Recreate the problem, if you can.

4. Check your port settings. Your problem may be corrected simply by changing the communication settings.
5. List any changes that have recently been made to the system. Try to record what you were doing when the problem occurred.
6. Reboot your computer. Refer to your computer documentation for specific instructions.
7. Print the Diagnostics labels. See "Printing Diagnostics Labels" for more information.

If these steps do not solve the problem, call Technical Support.

Have the following information ready before you call:

computer brand name and type of software or terminal brand name and model

Monarch printer model

printer serial number

support agreement, contract number, or invoice information

customer number

Data Errors

A data error indicates that incorrect data was received from the host, causing the printer to ignore the entire print job. After checking the packet and correcting the problem, transmit the print job again.

The following is a list of data errors. These errors occur because data in the format, batch, check digit, font, or graphic packet is invalid.

Format Errors

Error Code	Description
001	Format ID number must be 1 - 999 .
002	Name must be 1 - 8 characters inside quotes or a printer-assigned name ("").
003	Action must be A (add) or C (clear).
004	Supply length is invalid (maximum is 4). See "Defining the Format Header" in Chapter 2 for valid lengths.
005	Supply width is invalid (maximum is 2). See "Defining the Format Header" in Chapter 2 for valid widths.
006	Storage device must be R (volatile RAM), T (temporary storage), or F (flash memory).
007	Unit of measure must be E (English), M (Metric), or G (Dots). See "Defining the Format Header" in Chapter 2 for more information.
010	Field ID number is outside the range 0 - 999 .
011	Field length exceeds 200 .
012	Row field position is greater than the maximum stock dimension. See "Defining Text Fields" in Chapter 2 for valid row lengths.

- 013 Column field position is greater than the maximum stock dimension. See “Defining Text Fields” in Chapter 2 for valid column widths.
- 014 Font style is invalid. Must be **1, 2, 3, 4, 5, 6, 10, 11, 50, 1000, 1001, 1002, 1003, 1004, 1005, 1006, 1007, 1008, 1009, 1010, 1011, 1012,** or **1013**. See “Defining Text Fields” in Chapter 2 or Appendix B, “Fonts,” for more information.
- 015 Character rotation must be **0** (0 degree), **1** (90 degree), **2** (180 degree), or **3** (270 degree). See “Defining Text Fields” in Chapter 2 for more information.
- 016 Field rotation must be **0** (0 degree), **1** (90 degree), **2** (180 degree), or **3** (270 degree). See “Defining Text Fields” in Chapter 2 for more information.
- 017 Field restriction must be **V** (variable) or **F** (fixed).
- 018 Text field symbol set selection defined in the field must be **0** (Internal), **1** (ANSI), **100** (Macintosh), **101** (Wingdings), **102** (Unicode), **103** (BIG5 for Unicode), **104** (GB2312 for Unicode), **105** (SJIS for Unicode), **106** (GB2312), **107** (BIG5), **437** (DOS Page 437), **850** (DOS Page 850), **852** (Latin 2), **855** (Russian), **857** (Turkish), **860** (Portuguese), **1250** (Latin 2), **1251** (Cyrillic), **1252** (Latin 1), **1253** (Greek), **1254** (Turkish), **1255** (Hebrew), **1256** (Arabic), **1257** (Baltic), or **1258** (Vietnamese). See “Defining Text Fields” in Chapter 2 for more information.
- 020 Vertical magnification must be **1 - 7** or for TrueType/Scalable fonts, use **4 - 250** (the point size).
- 021 Horizontal magnification must be **1 - 7** or for TrueType/Scalable fonts, use **4 - 250** (the point size).
- 022 Color must be **B, D, O, R,** or **W**. See “Defining Text Fields” in Chapter 2 for more information.
- 023 Intercharacter gap must be **0 - 99** dots.
- 024 Field justification must be **B** (balanced), **C** (centered), **E** (end), **L** (left), or **R** (right). See “Defining Text Fields” in Chapter 2 for more information.
- 025 Data length is too long.
- 030 Bar code height must be at least **1** (English), **2** (Metric), **1** (Dots), or is not within the supply dimensions.
- 031 Human readable option must be
1 no CD or NS
5 NS at bottom, no CD
6 CD at bottom, no NS
7 CD and NS at bottom
8 no text
- 032 Bar code type is invalid. See “Defining Bar Code Fields” in Chapter 2 for valid options.
- 033 Bar code density is invalid. See “Defining Bar Code Fields” in Chapter 2 for the bar code density chart.
- 034 GS1 DataBar bar code symbol type is invalid. The range is **1** to **12**. See “Defining Bar Code Fields” in Chapter 2 for more information.

- 035 GS1 DataBar bar code separator height must be **1** or **2**. See “Defining Bar Code Fields” in Chapter 2 for more information.
- 036 GS1 DataBar bar code segment width is invalid. The range is **2** to **22**. See “Defining Bar Code Fields” in Chapter 2 for more information.
- 040 Line thickness must be **0 - 99** dots.
- 041 Line direction must be **0, 90, 180, or 270**.
- 042 End row is invalid. Line segment or box end row is defined outside of printable area.
- 043 End column is invalid. Line segment or box end column is defined outside of printable area.
- 044 Dot pattern for line or box must be “”.
- 045 Line length is defined beyond the maximum length. See “Defining Line Fields” in Chapter 2 for valid lengths.
- 046 Line type must be **S** (segment) or **V** (vector).
- 051 Imaging mode in the graphic header must be **0**.

Batch Errors

Error Code	Description
101	The format referenced by batch is not in memory.
102	Print quantity is outside the range 0 - 999 .
104	Batch mode must be N (new) or U (update).
105	Batch separator in a batch control field must be 0 (off).
106	Print multiple is outside the range 1 - 24 .
108	Multiple part supply is outside the range 1 - 5 .

Option Errors

Error Code	Description
200	Option number must be 1, 4, 30, 31, 42, 50, 51, 52, 60, or 61 .
201	Copy length is outside the range 1 - 2710 .
202	Copy start position must be 1 - 255 .
203	Destination start position must be 1 - 255 .
204	Source field must be 0 - 999 .
205	Copy type must be 1 (copy after rules) or 2 (copy before rules).

- 206 Increment/Decrement selection must be **I** (increment) or **D** (decrement).
- 207 Incrementing start position must be **0 - 2710**.
- 208 Incrementing end position must be **0 - 2710**.
- 209 The incrementing amount must be **0 - 999**.
- 210 Security value for a PDF-417 bar code must be **0 - 8**. Correct the value and resend the format to the printer.
- 211 Narrow element value is less than **1** or greater than **99**. Correct the value and resend the format to the printer.
- 212 Wide element value is less than **1** or greater than **99**. Correct the value and resend the format to the printer.
- 214 Truncation code must be **S** (standard) or **T** (truncated bar code).
- 215 Aspect code must be **C** (columns) or **R** (rows).
- 216 Option definition must be **S** (set) or **T** (template).
- 217 Input device device must be **D** (Default), **H** (Host), **K** (Keyboard), **N** (None), or **S** (Scanner).
- 218 Pad direction must be **L** (from left) or **R** (from right).
- 219 Pad character is outside the range **0 - 255**.
- 220 Check digit selection must be **G** to generate check digit.
- 221 Primary or secondary price format is outside the range **1 - 16**.
- 222 Data type restriction is outside the range of **1 - 6**.
- 223 Option is not valid for the field.
- 224 Bar code intercharacter gap must be **0 - 99** dots. (This is also known as the additional character gap when using Option 50, Defining Bar Code Densities.)

Online Configuration Errors

Error Code	Description
251	Power up mode must be 0 (online).
252	Language selection must be 0 (English).
253	Batch separator code in a system setup packet must be 0 (off).
254	Slash zero selection must be 0 (standard zero) or 1 (slashed zero).
255	Supply type must be 0 (black mark) or 2 (non-indexed).
256	Printhead energy must be 0 (Standard supplies), 1 (Fax paper), or 2 (Synthetic supplies).

- 257 Feed mode must be **0** (continuous) or **1** (on-demand).
- 258 Supply position is outside the range.
- 259 Contrast adjustment must be **28 - 40** dots.
- 260 Print adjustment must be **-99 - 99** dots.
- 261 Margin adjustment must be **-99 - 99** dots.
- 262 Speed adjustment must be **0**.
- 263 Primary monetary symbol is invalid.
- 264 Secondary symbol selection must be **0** (none) or **1** (print secondary sign).
- 265 Monetary decimal places must be **0 - 3**.
- 266 Character string length in the control characters packet must be **5** (MPCL control characters) or **7** (ENQ/IMD command character).
- 267 Baud rate selection must be **7** (115200).
- 268 Word length selection must be **1** (8 bits).
- 269 Stop bits selection must be **0** (1 bits).
- 270 Parity selection must be **0** (none).
- 271 Flow control selection must be **3** (XON/XOFF).
- 272 Symbol set (code page) in the System Setup packet must be **0** (Internal), **1** (ANSI), **2** (DOS 437), **3** (DOS 850), **4** (1250- Latin 2), **5** (1251- Cyrillic), **6** (1252- Latin 1), **7** (1253- Greek), **8** (1254- Turkish), **9** (1255- Hebrew), **10** (1256- Arabic), **11** (1257- Baltic), **12** (1258- Vietnamese), **13** (852- Latin 2), **14** (855- Russian), **15** (857- IBM Turkish), **16** (860- DOS Portuguese), **17** (Wingdings), **18** (Macintosh), **19** (Unicode), **20** (BIG5), **21** (GB), **22** (SJIS to SJIS), **23** (GB to GB), or **24** (BIG5 to BIG5).
- 282 RS232 Trailer string is too long. Use a maximum of **3** characters.
- 283 ENQ Trailer string is too long. Use a maximum of **3** characters.
- 284 The buffer type must be **T** (Transmit), **R** (Receive), **I** (Image), **F** (Format), or **D** (Downloadable Fonts).
- 285 The storage device type in the memory configuration packet must be **R** (volatile RAM).
- 286 The buffer size is invalid.
- 287 The printhead width must be **0**.
- 288 Invalid battery voltage packet. Must be **0** or **1**.
- 289 Invalid printer address in communication settings packet. Use **0** or none.

Check Digit Errors

Error Code	Description
310	Check digit scheme number must be 1 - 10 .
311	Modulus must be 2 - 11 .
314	Check digit algorithm must be D (sum of digits) or P (sum of products).

Graphic Errors

Error Code	Description
325	Duplicating direction must be 0 (insert after) or 1 (insert before) in duplicate fields for graphics.
327	Amount of row adjustment must be 0 - 999 dots in duplicate fields for graphics.
328	Duplicate count must be 0 - 999 .
340	Bitmap line encoding must be H (hex) or R (run length).
350	Font selector must be 1 - 9999 .
351	Font data length must be 68 - 16384 .
352	Insufficient font memory is available for the downloaded font.
380	Job request is outside the range 0 - 4 .
400	The character immediately following { is invalid.
401	Internal software error. Call Technical Support.
402	Field separator not in expected location.
403	Field separator not found.
404	The number or string that is currently being processed is too long.
405	Too many fields exist in the format. You cannot have more than 200 fields in the format. Lines and box fields count as fields.

Communication Errors

Error Code	Description
409	The printer memory is full. Delete unnecessary formats or graphics from memory. If you are using a graphic file that is very large, consider using another mapping method (such as run length encoding) to reduce the required memory.
410	Parity on the printer does not match the parity on the host. Check the parity setting under SETUP options.
411	Framing error. The printer cannot communicate with the host. Make sure the host is turned on, communication cables are connected correctly, port settings are correct, and communications are active. Check the baud rate, word length, and stop bits to make sure they match those at the host. Do not toggle between Microsoft Windows and MS-DOS while using the COPY command, or you will receive a framing error. Exit Windows before using the COPY command. Re-transmit the data.
412	There is a problem with flow control between the printer and the host. Make sure the printer and the host flow control settings match (both are DTR or both are XON/XOFF). If the error persists, call Technical Support.
413	Online receive queue is full. Check your printer's XON/XOFF or DTR SETUP values to be sure there isn't a flow control problem.
414	The internal keyboard buffer is full or you need a new keypad. Call Technical Support.
415	The buffer size you defined exceeds the total available in your machine.
423	Internal software error. Call Technical Support.

Data Formatting Failures

Formatting errors indicate that a field will print incorrectly. After you have checked the data stream and corrected the data, retransmit the format and batch.

Note: For these errors, the batch still prints, but the field, font, bar code, or density may be incomplete, missing or contain incorrect data.

Error Code	Description
571	Invalid bar code length.
572	Invalid copy field, padded field, or incrementing field length.
573	Invalid price length.
574	No CD scheme or room for CD. The CD scheme in the batch does not fit the format or the field contains blanks.
575	The graphic included in your format could not be found.
601	An error occurred while the batch was imaging.
603	The batch was not found for imaging.

- 611 Font, bar code or density is invalid. The font, bar code or density in the batch does not fit the format.
- 612 The data in this line of the batch is either missing or does not match the format.
- 613 Reference point off tag.
- 614 Portion of field off tag. There may be an invalid character in the packet. Make sure you did not enter **O** for **Ø**.
- 615 Bar code width is greater than 16 inches, or number of keywords for PDF 417 exceeds **928**.
- 616 Dot shifting failed. A bad dot falls on a bar code that cannot be shifted. Call Technical Support.
- 618 Magnification must be **1 - 7**.
- 621 An error occurred opening the TrueType font file. Select a different font to download. If the error message persists, call Technical Support.
- 622 Not enough memory to create the downloaded TrueType characters in the scalable (vector) fonts buffer. Reconfigure the printer's memory and increase the scalable (vector) fonts buffer. Resend the font, format, and batch packet after reconfiguring the memory. If the error message persists, call Technical Support.

Machine Faults

These errors occur when there is a problem with the printer.

Error Code	Description
703	The printer sensed a calibration of different-sized black marks. Make sure the correct supply is loaded.
704	Printer has not sensed a supply mark within the specified number of inches or is out of supplies. Check the supply tracking, supply marks, black mark sensor position, and supply roll for binding. Change supply.
706	The motor could not get up to speed within the allotted time. Call Technical Support.
707	The motor reached the desired speed, but was unable to maintain that speed. Call Technical Support.
708	The motor has stalled or is running too slow to measure the speed. Call Technical Support.
750	Printhead is overheated. Turn off the printer to let the printhead cool. If the error persists, call Technical Support.
751	Printer did not sense a black mark when expected. The supply may be jammed.

For these errors, Check the

- supply tracking
- supply marks
- black mark sensor position

supply roll for binding.

If the error continues to appear, change the supply.

- 752 Printer sensed a mark in the wrong place.
- 753 Printer sensed a mark that is too long.
- 756 The printer is out of supplies. Load supplies.
- 757 Load supplies. The calibrated supply length differs by plus or minus .25 inches from the format.
- 758 Check supply. Either the supply is not seen, or the on-demand sensor is broken (purchase optional). Check for a label jam. Clear the supply path or reload supplies. This error may occur if you remove a label too quickly in on-demand mode. The printer does not recalibrate after this error.
- 762 Low battery. Recharge the battery.
- 763 Waiting to dispense label.
- 765 Printhead has less than **3** bad dots.
- 768 Printhead has more than **10** bad dots or is not connected. Make sure the printhead is connected.
- 790 The printer is busy. Turn off the printer. Wait two seconds and turn it back on. Resend the packets. If the problem continues, call Technical Support.
- 791 The printer has an error pending. Turn off the printer. Wait two seconds and turn it back on. Resend the packets. If the problem continues, call Technical Support.
- 792 Printer not initialized.
- 793 Printer job queue full.

Flash Memory Errors

These errors occur when there is a problem with the printer's flash memory.

Error Code	Description
800	A directory in flash memory is full.
801	Flash memory is full.
802	A directory in flash memory cannot be found.
803	There is no directory in flash memory.
810	A file in flash memory is not open.
811	A file in flash memory is already open.
812	The file in flash memory is full.
813	You cannot access flash memory.

- 820 An error occurred in the flash program.
- 821 An error occurred while erasing flash memory.
- 822 There is a flash ID error.

Memory Expansion Errors

These errors occur when there is a problem with the Print Engine memory expansion option.

Error Code	Description
860	There is an error opening a font file on the print engine memory expansion option.
861	There is an error when writing to a file on the print engine memory expansion option.
862	There is an invalid condition for the print engine memory expansion option.

Hard Printer Failure Errors

These errors are hard printer failures. Call Technical Support if you receive these messages.

Error Code	Description
904	No memory for native layer.
907	Low RAM error.
909	RAM corrupted.
911	Version string mismatch.

SYSTEM ERROR VECTOR ##	## can be:
	2 Bus Error
	3 Address Error
	4 Illegal Instruction
	5 Zero Division
	6 CHK, CHK2 Instructions
	7 TRAP Instructions
	8 Privilege Violation
	9 Trace
	10 Line 1010 Emulator
	48 User-defined vectors (48-255)

This error is fatal. If you receive it, reset and/or reflash the printer. If the error persists, call us at the number listed on the back cover of this manual for instructions. If they determine you should send the printer back, use the original packaging (box and packing material) and include the documentation. Use the following address:

Electronic Repair Center
 200 Monarch Lane
 Door 39
 Miamisburg, OH 45342

The warranty does not apply if you do not follow these instructions.

PRINTER OPTIMIZATION

8

This chapter provides information on how to improve your printer's performance by

- adjusting the print quality
- reducing the imaging time for printing
- providing general tips and hints for designing formats.

This printer uses “smart imaging” to image and print fields on supplies. Smart imaging remembers the exact boundaries and locations of each field and places a boundary box (white space) around each field. When a field changes that particular boundary box is cleared and the new field data is imaged. However, the new field data may require a larger boundary box than the previous field did. In some cases, neighboring fields that do not change may be covered with white space from the changing field's boundary box.

Adjusting the Print Quality

Many factors affect print quality: type of supplies, print contrast, and the type of printer's application. The type of supply should match the printer's application.

Using premium supplies reduces smudged images, hard to read labels, and faded print. Supply type, print speed, and print contrast work together to improve the print quality of labels. Contact your Paxar Representative for more information.

If the print quality is too light or too dark, adjust the print contrast. The correct contrast setting is important because it effects how well your bar codes scan and how long the printhead lasts.

Be sure to check the print quality of bar codes with a bar code verifier or scanner. If you do not have a verifier or scanner, check the bar code visually. A bar code that is **IN SPEC** will have complete bars and clear spaces. Small alphanumeric characters will look complete. A bar code that is **IN SPEC** may not look as good as one that is too dark, but it will have the highest scan rate.

Note: For highest scan rates, make sure there is adequate white space before and after the bar code. A darker bar code does not mean it will scan better.



Reducing Imaging Time

Imaging time is the time it takes the printer to image the data for the first label after the printer receives the format and batch packet. There are several ways to reduce the imaging time: send formats and configurations once, use a batch quantity of zero, or update batch fields.

If the formats use the same check digit scheme, you only need to send the check digit scheme once.

Send formats once and use the batch update field to change information on the label. Using a batch update field reduces the imaging time, because only the fields that change are imaged. All other fields remain the same as the last queued batch.

Use the batch quantity zero method when your application requires operator intervention to enter data. While the operator is entering data, the previous field is sent with a batch quantity of zero. The printer images the field, but does not print it. After the operator enters the data for the last field, the batch quantity can be specified. The last remaining field is imaged, and the label prints almost immediately.

To pre-image a label:

1. Send the format and a batch header in one file. The first time you send the batch header, use the parameter **N** (new batch), and the parameter **0** for (zero quantity).

Example {B,1,N,0 | }

The printer images constant text, line, box, and graphic fields, but does not print them.

2. Input data for each field, and send it with a batch header using the parameter **U** (update) and a quantity of zero. When the printer receives the data, it immediately images the field, but does not print it.

Example

```
{B,1,U,0 |  
1,"RODGER DIST CTR" | }  
{B,1,U,0 |  
2,"8292" | }
```

At this time, the printer is imaging all associated fields, including fields that copy from other fields.

3. Repeat step 2 for each field except the last one.

```
{B,1,U,0 |  
3,"BROADWAY" | }  
{B,1,U,0 |  
4,"555 WEST OAK AVE." | }
```

4. For the last field, input data and send it with the quantity of labels you want printed. When the printer receives input for the last field, it immediately prints the labels.

Example

```
{B,1,U,10 |  
5,"DAYTON, OHIO" | }
```

Increasing Throughput

Reducing the imaging time increases throughput. You can also increase the baud rate to increase the transmission time and increase throughput. Make sure the communication settings at the printer match those at the host.

General Format Tips and Hints

The following tips and hints are helpful to keep in mind when designing MPCLII formats.

With Formats

If you want to modify your format fields, check digit fields, and configuration commands, use the optional entry method. This method enables you to reset only the parameters you want to change. Commas act as placeholders for unchanged parameters. The optional entry method reduces file size and increases the speed at which files are sent to the printer.

With Packets

Leave parameters blank that you do not need to change when sending online configuration packets.

You can group fields with similar parameters. For example,

```
T,1,10,V,250,50,1,1,1,1,B,C,0,0 |  
T,2,15,,,75 |  
T,3,,,100 |
```

The first text field sets all the parameters for that field. The second text field's number of characters and column location changes from what was defined in the first field. In the third text field, only the column location is changed. This method can be used on bar code and constant text fields as well.

Note: You should understand the basics of each field before using this method.

After you modify any fields or parameters with the optional entry method, resend the format, batch, or configuration packet to the printer.

With Bar Codes

Be careful when rotating or placing a UPC/EAN bar code with human readable characters, because the bottom reference point is at the bottom of the bars, not at the bottom of the human readable characters.

With Fields

Data that remains the same for each label should be in a constant text field. Data that varies for each label should be in a text field.

Check for trailing spaces in text or constant text fields if you receive a “field off tag” error. An easy way to see trailing spaces is to print the field in the reverse font.


Make sure if you magnify a field, it does not go off the label or cover another field. Magnifying a field increases the distance between the printed character and the edge of the cell.

SAMPLES



This appendix contains sample formats. You can customize any of these formats to meet your needs.

The samples pictured are oriented as if you are looking down at the display, watching labels come out of the front of the printer, as shown below.

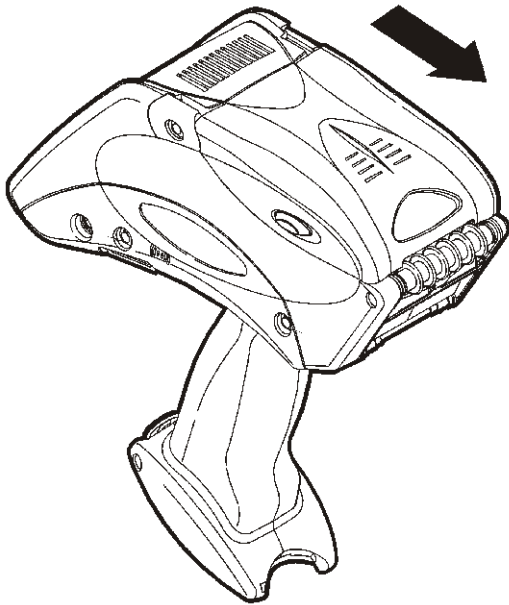


Sample UPCA Format Packet

```
{F,25,A,R,E,200,200,"Fmt 25" |  
C,140,40,0,1,2,1,W,C,0,0,"SAMPLE FORMAT",1 |  
B,1,12,F,85,40,1,2,40,5,L,0 |  
T,2,18,V,50,50,1,3,1,1,B,L,0,0,1 | }
```

Sample Batch Packet

```
{B,25,N,1 |  
1,"02802811111" |  
2,"TEXT FIELD" | }
```

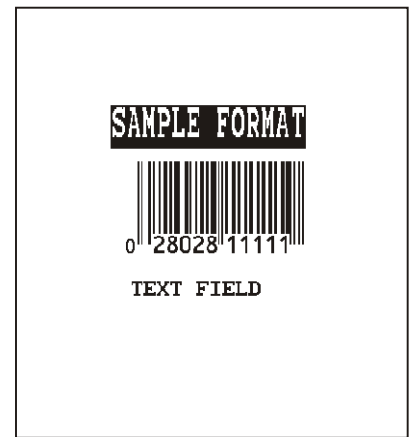


HangTag Example

```
{F,1,A,R,E,275,125,"1TAG01" |  
C,228,20,0,50,8,8,A,L,0,0,"0047896320",1 |  
C,203,20,0,50,8,8,A,L,0,0,"045",1 |  
C,203,55,0,50,8,8,A,L,0,0,"12",1 |  
C,203,85,0,50,8,8,A,L,0,0,"099",1 |  
C,178,20,0,50,8,8,A,L,0,0,"00654113",1 |  
C,178,85,0,50,8,8,A,L,0,0,"1158",1 |  
C,54,37,0,50,14,14,A,L,0,0,"$49.99",1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```

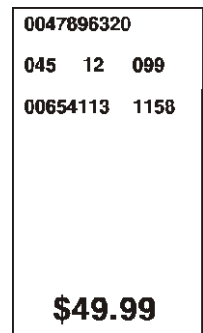

Tag Example

```
{F,1,A,R,E,200,150,"1LAB1520" |  
C,44,40,0,50,9,9,A,L,0,0,"PEANUTS",1 |  
B,1,12,F,125,25,1,2,50,7,L,0 |  
R,1,"028400067362" |  
C,20,34,0,50,8,8,A,L,0,0,"*SALT FREE*",1 |  
C,84,45,0,50,14,14,A,L,0,0,"$1.19",1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```



Label Example

```
{F,1,A,R,E,300,150,"1LAB1530" |  
C,100,90,0,50,10,10,A,L,0,1,"BATTERY PACK",1 |  
C,20,130,0,50,10,10,A,L,0,1,"1452-99311",1 |  
C,230,128,0,50,12,10,A,L,0,1,"$5.99",1 |  
B,1,9,F,75,55,4,7,40,8,L,1 |  
R,1,"031535512" |  
T,2,9,V,125,67,0,50,8,8,A,L,0,1,1 |  
R,4,1,1,9,1,1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```



Receipt Format Example

```
{F,1,A,R,E,300,175,"1Garage" |  
C,277,35,0,50,10,18,A,L,0,0,"SMITH'S",1 |  
C,223,4,0,50,8,8,A,L,0,0,"Can Opener",1 |  
C,202,4,0,50,8,8,A,L,0,0,"Travel Iron",1 |  
C,179,4,0,50,8,8,A,L,0,0,"Total",1 |  
C,163,81,0,50,8,8,A,L,0,0,"Tax",1 |  
C,140,32,0,50,8,8,A,L,0,0,"TOTAL SALE",1 |  
C,86,47,0,50,9,9,A,L,0,0,"* * P A I D * *",1 |  
C,60,45,0,50,9,9,A,L,0,0,"THANK YOU!",1 |  
C,256,35,0,50,10,10,A,L,0,0,"GARAGE SALE",1 |  
C,223,122,0,50,8,8,A,L,0,0,"$2.50",1 |  
C,202,122,0,50,8,8,A,L,0,0,"$1.50",1 |  
C,182,122,0,50,8,8,A,L,0,0,"$4.00",1 |  
C,163,122,0,50,8,8,A,L,0,0,"$0.26",1 |  
C,140,123,0,50,8,8,A,L,0,0,"$4.26",1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```

SMITH'S GARAGE SALE	
Can Opener	\$2.50
Travel Iron	\$1.50
Total	\$4.00
Tax	\$0.26
TOTAL SALE	\$4.26
** P A I D **	
THANK YOU!	

Label Sample 2

```
{F,1,A,R,E,110,200,"1LAB2011" |  
C,92,70,0,50,7,7,A,L,0,0,"PRETZELS",1 |  
B,1,12,F,45,50,1,2,40,7,L,0 |  
R,1,"028400067362" |  
C,18,105,0,50,10,10,A,L,0,0,"$.79",1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```




Label Sample 3

```
{F,1,A,R,E,400,200,"1LAB2040" |  
C,150,21,0,50,14,12,A,L,0,1,"BATTERY PACK",1 |  
C,150,46,0,50,14,12,A,L,0,1,"WAREHOUSE 12",1 |  
C,285,70,0,50,10,10,A,L,0,1,"07/14/00",1 |  
C,110,70,0,50,10,10,A,L,0,1,"4425",1 |  
B,1,13,F,95,165,8,6,90,8,L,1 |  
R,5,N |  
R,1,"0315355110299" |  
T,2,13,V,214,176,0,50,7,9,A,L,0,1,1 |  
R,4,1,1,13,1,1 | }
```

Sample Batch Packet

```
{B,1,N,1 |  
E,0,0,1,1 | }
```

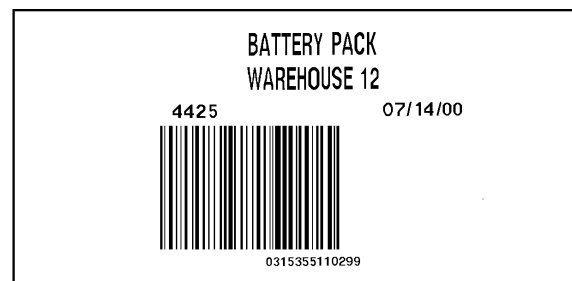

Sample MaxiCode Packets

MaxiCode is a two-dimensional bar code developed by UPS (United Parcel Service, Inc.). Data must be defined in a specific way for UPS. Refer to the Guide to Bar Coding with UPS or the AIM MaxiCode Specification for more details about data requirements.

The printer supports modes 0, 1, 2, and 3. Contact us for information about additional MaxiCode modes.

Mode	Description
0	Obsolete
1	Obsolete
2	Structured Message
3	Structured Message
4	No Known Application
5	No Known Application
6	No Known Application

You can select which mode to use in the bar code field or allow the printer to auto-select the mode (0, 2, or 3) based on your data. See “Defining a Bar Code Field” for more information. MaxiCode automatically pads data with the “!” character.

Note: MaxiCode does not support the NULL character.

Modes 2 and 3 are defined by the way the postal code, class of service, and country code fields are arranged. (The postal code, class of service, and country code are required fields.) Begin with the message header, then the primary data (15 characters), followed by the secondary message (up to 78 characters). Or, begin with the primary data, then the message header, followed by the secondary data. If the postal code data characters are all numeric then the MaxiCode symbol is set to Mode 2. If the characters are alphanumeric, or only contain ASCII characters 65 to 90, then the MaxiCode symbol is set to Mode 3.

If you receive an error 612, check your MaxiCode data. You may have not correctly structured or left out one of the three required fields (postal code, class of service, and country code) or the “~029” character.

Mode 0 (Obsolete) Sample

```
{F,1,A,R,E,0200,0200,"MAXICODE" |  
B,1,93,V,020,20,33,7,0,8,L,0 | }  
{B,1,N,1 |  
1,"450660000" |  
  
C,"001" |  
C,"840" |  
C,"[]~030" |  
C,"01~02996" |  
C,"1Z12345678~029" |  
C,"UPSN~029" |  
C,"12345A~029" |  
C,"070~029" |  
C,"~029" |  
C,"1/1~029" |  
C,"15~029" |  
C,"Y~029" |  
C,"60 SADDLEBROOK CT.~029" |  
C,"DAYTON~029" |  
C,"OH~030" |  
C,"~004" | }
```

MaxiCode bar code (33)
Batch header
Postal code- zip code
(This field determines Mode)
Country code
Class of service
Message header
Transportation header
Tracking number
Origin carrier SCAC
UPS shipper number
Julian day of pickup
Shipment ID (empty)
Package count
Weight (lb.)
Address validation
Street address (empty)
City (empty)
State
EOT



Mode 2 Sample

```
{F,1,A,R,E,200,200,"MAXI_M2" |  
B,1,93,V,020,020,33,7,0,8,L,0 | }  
{B,1,N,1 |  
1,"[]>~030" |  
C,"01~02996" |  
C,"068100000~029" |  
  
C,"840~029" |  
C,"001~029" |  
C,"1Z12345675~029" |  
C,"UPSN~029" |  
C,"12345E~029" |  
C,"089~029" |  
C,"~029" |  
C,"1/1~029" |  
C,"10~029" |  
C,"Y~029" |  
C,"~029" |  
C,"~029" |  
C,"CT~030" |  
C,"~004" | }
```

MaxiCode bar code (33)

Message header
Transportation header
Postal Code
(This field determines Mode)
Country code
Class of service
Tracking number
Origin carrier SCAC
UPS shipper number
Julian day of pickup
Shipment ID (empty)
Package count
Weight (lb.)
Address validation
Street address (empty)
City (empty)
State
EOT



Mode 3 Sample

{F,1,A,R,E,200,200,"MAXI_M3"	MaxiCode bar code (33)
B,1,93,V,020,020,33,7,0,8,L,0 }	
{B,1,N,1	Message header
1,"[]>~030"	Transportation header
C,"01~02996"	Postal Code
C,"M5E1G45~029" 	(This field determines Mode)
C,"124~029"	Country code
C,"066~029"	Class of service
C,"1Z12345679~029"	Tracking number
C,"UPSN~029"	Origin carrier SCAC
C,"12345E~029"	UPS shipper number
C,"089~029"	Julian day of pickup
C,"~029"	Shipment ID (empty)
C,"1/1~029"	Package count
C,"10~029"	Weight (lb.)
C,"Y~029"	Address validation
C,"~029"	Street address (empty)
C,"TORONTO~029"	City (empty)
C,"ON~030"	State
C,"~004" }	EOT



Sample Data Matrix Packets

Data Matrix (ECC-200) is a two-dimensional bar code which is made up of square modules arranged within a perimeter finder pattern. There are 24 square symbol sizes available ranging from 10 rows by 10 columns to 144 rows by 144 columns. There are six rectangular symbol sizes available ranging from 8 rows by 8 columns to 16 rows by 48 columns. The symbol size is data dependent. Data Matrix automatically pads data.

Make sure you do not overlay other fields when designing your Data Matrix symbol. Smart imaging is automatically disabled on formats with a Data Matrix bar code. You should also allow a 3 or 4 dot "quiet zone" (blank space around the bar code's perimeter) for scanning. See "Defining a Bar Code Field" for more information.

Sample Batch Data with Special Characters

To use this character in the bar code	enter these characters in the batch data
null character	~~@
~ (tilde)	~126~126
FNC1	~~1

Square Data Matrix Packet

```
{F,36,A,R,E,400,400,"DTMTRX1" |  
B,1,50,V,50,100,35,0,100,8,L,0 | }
```

```
{B,36,N,1 |  
1,"1234567890ABCDEFGHIJKLMNQRST" | }
```



This example prints a one-inch wide by one-inch tall (**100**) square Data Matrix symbol using the default density (**0**) without any field rotation (**0**).

Rectangular Data Matrix Packet

```
{F,36,A,R,E,400,400,"DTMTRX2" |  
B,1,400,V,100,200,35,29,50,8,L,1 | }
```

```
{B,36,N,1 |  
1,"1234567890ABCDEFGHIJKLMNQRST" | }
```



This example prints a one-inch by a half-inch tall (**50**) rectangular 16 rows by 36 columns (density **29**) Data Matrix symbol rotated 90 (**1**).

Sample Data Matrix with Function 1

```
{F,36,A,R,E,400,400,"DTMTRX1" |  
B,1,50,V,10,50,35,0,50,8,L,0 | }
```

```
{B,36,N,1 |  
1,"~~110012345678902" | }
```



This example prints a 0.50-inch wide by 0.50-inch tall (**50**) square Data Matrix symbol using the default density (**0**) without any field rotation (**0**). FNC1 appears in the batch data as **~~1**.

Sample Quick Response Packets

Quick Response (QR Code) is a two-dimensional bar code, which is made up of square modules arranged in an overall square pattern. A unique finder pattern is located at three corners of the symbol. Four levels of error correction are available, along with a wide range of symbol sizes.

Model 1 is the original specification.

Model 2 is an enhanced form that includes additional features.

The maximum number of characters depends on the type of characters entered for the batch data and differs for the two models of QR Code.

Data Type	Model1	Model2
Numeric data	1167	2710
Alphanumeric data	707	2710
8-Bit data	486	2710
Kanji data	299	1817

QR Code can accommodate Japanese Kana and Kanji characters and has a variety of applications, including marking spark plugs, radiators, printed circuit boards, and test tubes. Refer to the AIM International Symbology Specification for more details about data requirements.

Entering Batch Data for QR Code

QR Code requires certain parameters at the beginning of all batch data.

Syntax "error_cor mask# data_input, char"

error_cor Level of error correction. Some damaged bar codes may still be scannable if the error correction is high enough. Options:
 H Ultra high reliability level
 Q High reliability level
 M Standard level
 L High density level

Note: As you increase the error correction level, the maximum number of characters (in the field) decreases.

mask# Mask number. Undefined. Leave blank or use **0**.

data_input Type of data input. Options:
 A Automatic
 M Manual

char Type of characters. Options:
 A Alphanumeric
 B Binary
 K Kanji
 N Numeric

Note: In binary mode, the number of characters must be represented by the 4-digit number in decimal.

Example 1, "HM,N0123456789012345" | }

Defines the following batch data for the QR Code: The error correction level is **H**, which provides very high reliability. Leave the mask number blank. The data input mode is **Manual**. The type of characters are **Numeric** and the data is **0123456789012345**.

QR Code Packet

```
{F,1,A,R,E,200,200,"QRCODE" |  
B,1,200,V,50,50,36,0,100,2,B,0 |  
{B,1,N,1 |  
1,"HM,N0123456789012345" | }
```



Structured Append Mode

QR Code offers a mode called structured append (or concatenated) that allows you to collect data from multiple QR Code symbols and use that data elsewhere. For example, the components of a sub-assembly can have individual QR Codes and the QR Code for the entire assembly contains all the data from the individual codes. This mode also requires certain parameters at the beginning of all batch data.

Syntax "mode_id code# #of_div parity, error_cor mask# data_input char"

mode_id Mode identifier. Use **D** to indicate the structured append (or concatenated) mode.

code# Code number of the individual symbol in the concatenated set. You must use a two-digit number in decimal.

#of_div Total number of symbols in this concatenated set. You must use a two-digit number in decimal.

parity Parity byte. You must use a two-digit number in hexadecimal. There is no standard parity byte.

error_cor Level of error correction. Some damaged bar codes may still be scannable if the error correction is high enough. Options:

- H** Ultra high reliability level
- Q** High reliability level
- M** Standard level
- L** High density level

Note: As you increase the error correction level, the maximum number of characters (in the field) decreases.

mask# Mask number. Undefined. Leave blank or use **0**.

data_input Type of data input. Options:

- A** Automatic
- M** Manual

char Type of characters. Options:

- A** Alphanumeric
- B** Binary
- K** Kanji
- N** Numeric

Note: In binary mode, the number of characters must be represented by the 4-digit number in decimal.

Example 1,"D0205E9,Q0A," |
C,"B006qrcline," | }

Defines the structured append mode (**D**) for QR Code. This is symbol (**02**) of a concatenated set containing (**05**) symbols. The parity byte is **E9**. The error correction level is **Q**, which provides a high reliability. Use **0** for the mask number. The data input mode is **Automatic**. The type of characters are binary (**B**) and there will be six (**06**) data characters (**qrcline**).

Structured Append QR Code Packet

```
{F,2,A,R,E,200,200,"QRCODE2" |  
B,1,200,V,50,50,36,0,100,2,B,0 | }  
{B,2,N,1 |  
1,"D0202E9,Q0A" |  
C,"0123456789ABCD+_â~129~064~159~252~224~064" | }
```



Sample GS1 DataBar Packets

GS1 DataBar with Function 1

```
{F,1,A,R,E,200,200,"UCCAB" |  
B,1,30,V,5,15,38,2,35,0,L,0,11,2,22 | }  
{B,1,N,1 |  
1,"#10ABC|#Monarch Printers"}
```



GS1 DataBar EAN13 with Composite

```
{F,1,A,R,E,400,200,"GS1EAN13" |  
B,0,39,V,25,10,38,3,60,8,L,0,9,1,22 |  
R,1,"123456789012|#910123456#0112345678901231" | }  
{B,1,N,1 | }
```



GS1 DataBar 14 Stacked Omni Directional

```
{F,17,A,R,E,200,200,"STACKOM" |  
B,1,120,V,20,20,38,2,100,0,L,0,4,2 | }  
{B,17,N,1 |  
1,"1234567890123" | }
```



GS1 DataBar Expanded

```
{F,27,A,R,E,400,200,"EXPANDED" |  
B,1,120,V,10,10,38,2,100,0,L,0,6,,6 | }  
{B,27,N,1 |  
1,"123456789012345678901234567890123456789012345678901234567890123456789012345678901234567890" | }
```



GS1 DataBar Expanded (no composite)

```
{F,1,A,R,E,200,200,"GS1EXPD" |  
B,0,16,V,15,25,38,2,50,8,L,0,6,1,22 |  
R,1,"10123456" | }  
{B,1,N,1 | }
```



FONTS



This appendix shows examples of the fonts loaded in your printer's memory.

Number	Font Size and Appearance	Type of Spacing	# of Dots Between Characters
1	Standard	monospaced	3 (203 dpi)
2	Reduced	monospaced	1 (203 dpi)
3	Bold	monospaced	3 (203 dpi)
4	OCRA-like	monospaced	3 (203 dpi)
5	HR1 - for numeric data	monospaced	2 (203 dpi)
6	HR2 - for numeric data	monospaced	1 (203 dpi)
10	CG Triumvirate™ Typeface Bold	proportional	varies w/ each letter
11	CG Triumvirate™ Typeface 6 pt.	proportional	varies w/ each letter
50	EFF Swiss Bold	scalable	varies w/ each letter
1000	CG Triumvirate™ Typeface Bold 6.5 pt	proportional	varies w/each letter
1001	CG Triumvirate™ Typeface Bold 8 pt	proportional	varies w/each letter
1002	CG Triumvirate™ Typeface Bold 10 pt	proportional	varies w/each letter
1003	CG Triumvirate™ Typeface Bold 12 pt	proportional	varies w/each letter
1004	CG Triumvirate™ Typeface Bold 18 pt	proportional	varies w/each letter
1005	CG Triumvirate™ Typeface Bold 22 pt	proportional	varies w/each letter
1006	CG Triumvirate™ Typeface Bold Condensed 6.5 pt	proportional	varies w/each letter
1007	CG Triumvirate™ Typeface Bold Condensed 8 pt	proportional	varies w/each letter
1008	CG Triumvirate™ Typeface Bold Condensed 10 pt	proportional	varies w/each letter
1009	CG Triumvirate™ Typeface Bold Condensed 12 pt	proportional	varies w/each letter
1010	CG Triumvirate™ Typeface Bold Condensed 18 pt	proportional	varies w/each letter
1011	CG Triumvirate™ Typeface Bold Condensed 22 pt	proportional	varies w/each letter
1012	Letter Gothic Bold 6 pt	monospaced	1
1013	Letter Gothic Bold 9 pt	monospaced	2

These samples were printed using Code Page 437.

CG Triumvirate™ Typeface Bold

CG Triumvirate™ Typeface

ABCDEFGHIJKLM
 NOPQRSTUVWXYZ
 abcdefghijklm
 nopqrstuvwxyz
 0123456789; < = > ?
 @! " # \$ % & ' () * + , - . /
 [\] ^ _ ` { | } ~ Ç ü é
 á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø
 Ù Ú Û Ü Ý Þ ß à á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 ð ∞ φ ε ∩ ≡ ± ≥ ≤ [] ÷ ≈
 ° √ ∩ 2 ■

ABCDEFGHIJKLM
 NOPQRSTUVWXYZ
 abcdefghijklm
 nopqrstuvwxyz
 0123456789; < = > ?
 @! " # \$ % & ' () * + , - . /
 [\] ^ _ ` { | } ~ Ç ü é
 á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø
 Ù Ú Û Ü Ý Þ ß à á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 ð ∞ φ ε ∩ ≡ ± ≥ ≤ [] ÷ ≈
 ° √ ∩ 2 ■

ABCDEFGHIJKLM
 NOPQRSTUVWXYZ
 abcdefghijklm
 nopqrstuvwxyz
 0123456789; < = > ?
 @! " # \$ % & ' () * + , - . /
 [\] ^ _ ` { | } ~ Ç ü é
 á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø
 Ù Ú Û Ü Ý Þ ß à á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 ð ∞ φ ε ∩ ≡ ± ≥ ≤ [] ÷ ≈
 ° √ ∩ 2 ■

ABCDEFGHIJKLM
 NOPQRSTUVWXYZ
 abcdefghijklm
 nopqrstuvwxyz
 0123456789; < = > ?
 @! " # \$ % & ' () * + , - . /
 [\] ^ _ ` { | } ~ Ç ü é
 á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø
 Ù Ú Û Ü Ý Þ ß à á â ã ä å ç è é ê ë ì ï ð ñ ò ã
 ð ∞ φ ε ∩ ≡ ± ≥ ≤ [] ÷ ≈
 ° √ ∩ 2 ■

Bitmap Font Information




Our bitmap fonts are either monospaced (each character occupies the same amount of space) or proportional (each character is a different width). Use monospaced fonts for price fields and data you want to list in a column. With proportionally spaced fonts, you may be able to place more characters on a line. However, you may need to experiment with these fonts and adjust field measurements in your format. The bitmapped fonts (either monospaced or proportional) appear jagged when magnified. The magnification range is **1 - 7**.

Use the MONARCH® MPCL™ Toolbox (Soft Font Utility), available on our Web site, to convert a bitmap font to Hex or Run-Length encoding for the printer. Select the point size and characters to print. Bitmap fonts may image faster than a TrueType font, but you are limited to the point size and characters you downloaded.

Monospaced Font Magnification

Monospaced characters occupy the same amount of space within a magnification. Use monospaced fonts for price fields and data you want to list in a column. Decide how wide and tall you want the characters to appear on the labels. The following two tables show the width and height of each of the monospaced fonts after magnification.


This table includes the default (3 dots for Standard, 1 dot for Reduced, 3 dots for Bold) spacing.


Width Mag.		Standard		Reduced		Bold	
Units		Character Width	Sample	Character Width	Sample	Character Width	Sample
1x	1/100 in.	8.37		3.9		13.3	
	1/10 mm	21.26	A	9.9	A	33.78	A
	Dots	17		8		27	
7x	1/100 in.	49.75		24.63		84.24	
	1/10 mm	126.37		62.56		214	
	Dots	101		50		171	


To calculate other font widths, multiply the font dots (14 dots for Standard, 7 dots for Reduced, 24 dots for Bold) by the magnification and add the default spacing (3 dots for Standard, 1 dot for Reduced, 3 dots for Bold) between characters.

Example

14 (Standard font dots) x 5 (magnification) = 70 + 3 (default spacing between characters).
 There are 73 dots in the Standard font at 5x.

Standard	1x	A	7x	
1/100 in.		10.8		75.9
1/10 mm		27.4		192.8
dots		22		154

Reduced	1x	A	7x	
1/100 in.		6.9		48.28
1/10 mm		17.5		122.6
dots		14		98

Bold	1X	A	7x	
1/100 in.		16.7		117.24
1/10 mm		42.4		297.8
dots		34		238

Proportional Font Magnification

Each character in a proportionally spaced font is a different height and width. You may be able to place more characters on a line using proportionally spaced fonts. You may want to experiment with these fonts and adjust field measurements in your format as needed. The bitmapped fonts (either monospaced or proportional) appear jagged when magnified. The magnification range is **1 - 7**.

The following tables provide height and width magnification of sample characters.

CG Triumvirate™ Typeface Bold (8 pt.)

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.56	5.73	10.94
	1/10 mm	3.97 l	14.55 L	27.78 w
	Dots	3	11	21
7x	1/100 in.	6.9	20.7	41.4
	1/10 mm	17.5 ■	52.6 ■	105.2 ■
	Dots	14	42	84

To calculate other font widths, multiply the font dots (3 dots for Minimum, 13 dots for Average, 22 dots for Maximum) by the magnification.

Example

13 (Average font dots) x 5 (magnification) = 65 dots in an average letter of the CG Triumvirate™ Typeface Bold at 5x.

CG Triumvirate™ Typeface Bold (6.5 pt.)

Font #1000

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.56	4.69	9.90
	1/10 mm	3.97 l	11.91 L	25.14 w
	Dots	3	9	19
7x	1/100 in.	10.94	32.81	69.27
	1/10 mm	27.78 ■	83.34 ■	175.95 ■
	Dots	21	63	133







Height Magnification

	1x	w	7x
1/100 in.		6.77	47.40
1/10 mm		17.20	120.39
dots		13	91




CG Triumvirate™ Typeface Bold (8 pt.)

Font #1001







Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.56	5.73	10.94
	1/10 mm	3.97 	14.55 	27.78 
	Dots	3	11	21
7x	1/100 in.	6.9	20.7	41.4
	1/10 mm	17.5 	52.6 	105.2 
	Dots	14	42	84

Height Magnification


	1x	W	7x	
1/100 in.		8.33		58.33
1/10 mm		21.17		148.17
dots		16		112

CG Triumvirate™ Typeface Bold (10 pt.)

Font #1002




Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.56	6.77	13.02
	1/10 mm	3.97 	17.20 	33.07 
	Dots	3	13	25
7x	1/100 in.	10.94	47.40	91.15
	1/10 mm	27.78 	120.39 	231.51 
	Dots	21	91	175

Height Magnification


	1x	W	7x	
1/100 in.		10.42		72.92
1/10 mm		26.46		185.21
dots		20		140

CG Triumvirate™ Typeface Bold (12 pt.)

Font #1003

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	2.60	8.85	16.15
	1/10 mm	6.61 I	22.49 L	41.01 W
	Dots	5	17	31
7x	1/100 in.	18.23	67.94	113.02
	1/10 mm	46.30 	157.43 	287.07 
	Dots	35	119	217

Height Magnification

Width Mag.	Minimum	Average	Maximum
1x	W		
7x			
1/100 in.	12.50	87.50	
1/10 mm	31.75	222.25	
dots	24	168	


CG Triumvirate™ Typeface Bold (18 pt.)

Font #1004

Point sizes greater than 12 include only the following special characters: 0123456789#\$%&(),./@DFKLMPS\kprö£¥. Since this font does not support the full ANSI character set, some characters above decimal value 127 are substituted. For example, decimal value 191 prints the Yen symbol (¥) instead of the upside-down question mark (¿).

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	7.81	12.50	22.92
	1/10 mm	19.84 1	31.75 8	58.21 %
	Dots	15	24	44
7x	1/100 in.	54.69	87.50	160.42
	1/10 mm	138.91	222.25	407.46
	Dots	105	168	308

Height Magnification

Width Mag.	Minimum	Average	Maximum
1x	8		
7x			
1/100 in.	19.27	134.90	
1/10 mm	48.95	342.64	
dots	37	259	

CG Triumvirate™ Typeface Bold (22 pt.)

Font #1005

Point sizes greater than 12 include only the following special characters: 0123456789#\$\$&(),./@DFKLMPS\kpröç£¥. Since this font does not support the full ANSI character set, some characters above decimal value 127 are substituted. For example, decimal value 191 prints the Yen symbol (¥) instead of the upside-down question mark (¿).

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	9.38	15.63	27.08
	1/10 mm	23.81	39.68	68.79
	Dots	18	30	52
		1	8	%
7x	1/100 in.	65.63	109.38	189.58
	1/10 mm	166.69	277.81	481.54
	Dots	126	210	364

Height Magnification

	1x	7x
1/100 in.	23.44	164.05
1/10 mm	59.53	416.72
dots	54	315

CG Triumvirate™ Typeface Bold Cond (6.5 pt.) Font #1006

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.04	3.65	6.25
	1/10 mm	2.65 ll	9.26 L	15.88 w
	Dots	2	7	12
7x	1/100 in.	7.29	25.52	43.75
	1/10 mm	18.52 ■	64.82 ■	111.13 ~~~~
	Dots	14	49	84

Height Magnification

	1x	w	7x
1/100 in.		6.77	47.40
1/10 mm		17.20	120.39
dots		13	91

CG Triumvirate™ Typeface Bold Cond (8 pt.) Font #1007


Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	1.56	4.69	8.85
	1/10 mm	3.97 l	11.91 L	22.49 w
	Dots	3	9	17
7x	1/100 in.	10.94	32.81	67.94
	1/10 mm	27.78 ■	83.34 ■	157.43 ~~~~
	Dots	21	63	119

Height Magnification

	1x	w	7x
1/100 in.		8.85	61.98
1/10 mm		22.49	157.43
dots		17	119


CG Triumvirate™ Typeface Bold Cond (10 pt.)

Font #1008

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	2.08	5.73	11.98
	1/10 mm	5.29	14.55 L	30.43 W
	Dots	4	11	23
7x	1/100 in.	14.58	40.10	83.85
	1/10 mm	37.04 ■	101.86 ■	212.99 
	Dots	28	77	161


Height Magnification

	1x	W	7x
1/100 in.		10.94	76.56
1/10 mm		27.78	194.47
dots		21	147




CG Triumvirate™ Typeface Bold Cond (12 pt.)

Font #1009

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	2.60	7.29	14.58
	1/10 mm	6.61	18.52 L	38.04 W
	Dots	5	14	28
7x	1/100 in.	18.23	51.04	96.88
	1/10 mm	46.30 ■	129.65 ■	246.06 
	Dots	35	98	186

Height Magnification

	1x	W	7x
1/100 in.		13.02	91.15
1/10 mm		33.07	231.51
dots		25	175



CG Triumvirate™ Typeface Bold Cond (18 pt.) Font #1010

Point sizes greater than 12 include only the following special characters: 0123456789#\$\$%&(),./@DFKLMPS\kpröø£¥. Since this font does not support the full ANSI character set, some characters above decimal value 127 are substituted. For example, decimal value 191 prints the Yen symbol (¥) instead of the upside-down question mark (¿).

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	7.81	10.94	21.88
	1/10 mm	19.84	27.78	55.56
	Dots	15	21	42
7x	1/100 in.	54.69	76.56	153.12
	1/10 mm	138.91	194.47	388.94
	Dots	105	147	294

Height Magnification

	1x	7x
1/100 in.	20.31	142.19
1/10 mm	51.59	361.16
dots	39	273



CG Triumvirate™ Typeface Bold Cond (22 pt.) Font #1011

Point sizes greater than 12 include only the following special characters: 0123456789#\$\$&(),./@DFKLMPS\kpröç£¥. Since this font does not support the full ANSI character set, some characters above decimal value 127 are substituted. For example, decimal value 191 prints the Yen symbol (¥) instead of the upside-down question mark (¿).

Width Mag.		Minimum	Average	Maximum
1x	1/100 in.	9.38	13.02	26.56
	1/10 mm	23.81	33.07	67.47
	Dots	18	25	51
7x	1/100 in.	65.63	91.15	185.94
	1/10 mm	166.69	231.51	472.28
	Dots	126	175	357

Height Magnification

	1x	7x
1/100 in.	24.48	171.35
1/10 mm	62.18	435.24
dots	47	329



Scalable Font Information

The scalable font is smooth at any point size. There are no jagged edges because the font is created from an equation every time it is used. The field width varies with each letter.

When you define formats using scalable fonts, remember to set the character rotation to **0**, because it is not supported. However, field rotation is supported for text or constant text fields using the scalable font. **The scalable font does not print a slashed zero.**

The height and width magnification are defined in point size.
72 points = one inch. One inch = cell size. The cell size is the built-in space around the individual characters of the scalable font. The point size range is **4 - 250**. If the height and width are not set to the same point size, the printed characters look tall and thin or short and thick, which allows for greater flexibility in the appearance of the font.

Scalable fonts perform better in constant text fields, because those fields are imaged only once per batch, not once per label as in text fields. The transparent overlay allows closer field placement when using scalable fonts.

The 72 point EFF Swiss Bold sample shows the one inch cell size.

6pt Sample
10pt Sample

24pt Sample

48pt Sample

72pt Sample | 1"

TrueType Font Information

TrueType fonts follow the TrueType outline font standard. These fonts are smooth at any point size. There are no jagged edges, because the font is created from an equation every time it is used. The height and width magnification are defined in point size. 72 points = one inch. One inch = cell size. The cell size is the built-in space around the individual characters of the scalable font. The point size range is **4 - 250**. The field width varies with each letter. The printer can accept downloaded TrueType fonts.

Downloading TrueType Fonts

The MONARCH® MPCL™ Toolbox (Font Utility) is available on our Web site and converts TrueType fonts to Hex or Run-Length encoding for the printer.

When downloading a TrueType font, you download the entire font, not particular characters or one point size. You can print a variety of symbol sets with International (Turkish, Latin, Spanish, etc.) characters. TrueType fonts are designed to be regionally specific; therefore, all symbol sets may not be supported in a given font.

These font files are large and may image slower than bitmap fonts. The size of the font file, in bytes, is the minimum amount of memory you must have available for fonts in the printer's downloadable fonts buffer.

You may need to reallocate memory to use downloaded TrueType fonts. After reallocating memory, resend the font, format, and batch packets. See "Defining the Memory Configuration Packet" in Chapter 5 for more information. Also, Chapter 5 lists some special considerations when defining memory for downloaded TrueType fonts.

Using International Fonts

International fonts are available as bitmap or TrueType fonts. See "Bitmap Font Information" or "TrueType Font Information" for more details. To use these fonts, you must purchase the print engine memory expansion option and download the font to the printer.

To use International fonts, consider the following information:

All fonts contain an internal character mapping. The mapping is organized by one or more standards, such as BIG5. These mapping standards can provide over 65,000 characters, which are not represented in this manual.

The printer supports several mapping standards:

Unicode (UCS-2)

BIG5

GB2312

SJIS

Specify a symbol set based on the characters to print and one that is compatible with the font's character mapping. For example, to print Japanese characters, select symbol set 932 (Japanese Shift JIS) and a font compatible with that symbol set. See "Selecting a Symbol Set" for more information.

To enter batch data, use the method specified by the font's character mapping and a compatible symbol set.

Selecting a Symbol Set

Specify a symbol set based on the characters to print and one that is compatible with the font's character mapping. The symbol set parameter identifies the character mapping used in the text field or constant text field, for example, Unicode, BIG5, etc. If no symbol set is selected, the default symbol set (Internal Symbol Set) is used.

The printer automatically translates some character mappings to others. For example, if you need a BIG5 font, it is possible to use Unicode text data. Use Unicode in the symbol set parameter to indicate the text mapping and select the BIG5 font needed in the font parameter (T8 or C5). The printer automatically translates the Unicode character values into BIG5 values before printing the character.

The following table lists the compatible mappings and symbol sets.

Font Character Mapping		Symbol Set Parameter (T15, C13, or A6)
Batch Data*	TrueType Font Character Mapping	use in text or constant text fields
Unicode	BIG5	102 - Unicode If you are unsure which character mapping to select, use this symbol set, because the printer automatically translates the character mappings.
Unicode	SJIS	
Unicode	KSC5601	
Unicode	GB2312	
Unicode	Unicode	
BIG5	Unicode	103 - BIG5
GB2312	Unicode	104 - GB2312
SJIS	SJIS	105 - SJIS (Code Page 932 - Japanese Shift-JIS)
GB2312	GB2312	106 - GB2312 (Code Page 936 - Simplified Chinese)
BIG5	BIG5	107 - BIG5 (Code Page 950 - Traditional Chinese)

* Characters in batch data must be entered based on their mapping (Unicode, BIG5, etc.).

Note: Symbol sets 102-107 require the print engine memory expansion option and a downloaded International TrueType font.

International Font Sample

```
{F,3,A,R,E,150,200,"SIMPLE" |  
T,1,5,V,10,10,0,100,30,30,B,L,0,0,102 | }  
{B,3,U,1 |  
1,"~125~000~125~002~125~004~125~005" | }  
Font Number  
Symbol Set Parameter
```

This example prints these four characters with Unicode batch data of ~125~000, ~125~002, ~125~004 and ~125~005.

紀 紂 約 紕

Refer to the Internet for a listing of the characters in each code page. Search on a particular code page, such as "codepage 936" to view the characters in that code page.

Licensing Your Fonts

We provide you with tools to create and download TrueType fonts. However, it is your responsibility to purchase and license any fonts you download to your printer. Contact your font supplier for licensing information. Additional fonts that are compatible with the printer can be purchased from:

The Electronic Font Foundry
11 Silwood Road; Ascot; SL5 OPY; England
(0)1344 875 201
www.eff.co.uk

Korean, Chinese, and Japanese fonts can be purchased from:
Dynamlab Inc.
2055 Gateway Place; Suite 400; San Jose, CA 95110
408-490-4224
www.dynamlab.com

Locating the Font Number in a Font Packet

If you are creating font packets, the font number is the second parameter in the packet. Software is available to create the font data and packet. Call Technical Support for more information.

```
Example {W,200,A,M,68 |  
font data |  
font data | }  
Font Number
```

Use this number in **T8** or in **C5**. See "Defining Text Fields" or "Defining Constant Text Fields" in Chapter 2 for more information.

```
Example T,1,10,V,30,10,0,200,1,1,B,L,0,0,0 |  
C,50,30,0,200,1,1,B,L,0,0,"MONARCH",0 |  
Font Number  
Font Number
```

Defines a text and constant text field using the downloaded (#200) font.

SYMBOL SETS/CODE PAGES



This appendix contains a listing of the symbol sets, code pages, and extended character sets the printer supports.

Use the charts in this appendix to convert dot sequences from the image dot pattern to codes you can use in the fields. Use the Binary to Hex Conversion Chart to convert Binary dot sequences to Hexadecimal numbers for bitmap files. Use the Dot to Run Length Encoding Chart to convert dot sequences to alphabetic characters for bitmap files.

Supported Symbol Sets and Code Pages

The printer supports these symbol sets and code pages: Internal, ANSI, Bold, OCRA Character Set, DOS Code Page 437 and 850. Additional Code Pages are supported with downloaded TrueType or Unicode (double-byte) fonts.

The printer defaults to the internal symbol set.

Note: Fonts 1004, 1005, 1010, and 1011 are limited to the following special characters: 0123456789#\$\$%&(),./@DFKLMPS\kpröç£¥. These fonts do not support the full ANSI character set and some characters above decimal value 127 are substituted.

Selecting a Symbol Set or Code Page

The CG Triumvirate™ typefaces support only the ANSI and DOS Code Page 437 and 850 Symbol Sets. These fonts print a slashed zero when using the ANSI symbol set.

Internal Use this symbol set to print international monetary symbols, the trademark (™) symbol, and for formats that may be used on other MPCLII printers.

ANSI Use this symbol set with proportionally spaced fonts.

DOS Code Pages 437 or 850 Use this symbol set for extended and international characters with proportionally spaced fonts.

Using Code 128 Function Codes

This table lists the characters for Bar Code 128 function codes. These functions are used with scanners.

Code	Function Code
~201	F1
~202	F2
~203	F3
~204	F4

Entering Extended Characters

When using extended characters in your batch data file, type a tilde in front of the three-digit code. For example, if you want to include the character Å in a text field using the Internal Symbol Set, type:

1, "~142" |

Using International Character Sets/Code Pages

Symbol sets 100, 101, 852-860, and 1250-1258 may only be used with the scalable font (font#50) or downloaded TrueType fonts. TrueType fonts are designed to be regionally specific; therefore, all symbol sets may not be supported in a given font. For example, to print Hebrew characters, you need to find a font (such as Arial) that supports Hebrew characters; convert, and then download the font to your printer. Make sure the correct symbol set for Hebrew characters is selected.

Font 50 does not print the slashed zero or support Code Pages 101 (Wingdings) and 1256 (Arabic). The Euro symbol at position ~192 is only available in the Standard, Reduced, and Bold fonts.

Code pages 102-107 contain thousands of characters, which are not represented in this manual. These code pages require the print engine memory expansion option and a downloaded International TrueType font.

The Code Pages (100 and greater) on the following pages were printed using Arial or a similar downloaded TrueType font. To determine the character code, add the column number and row number for the character. For example, to produce the # character with the ANSI character set, you would press Alt 255 (column 15 + row 240).

Internal Symbol Set

240																			™
224	α	β																	
208		Ø				ø													
192	€																		
176	\$	£	¥	₪	₹	₺	₱	₲	₳	₴	₵	₶	₷	₸	₹	₺	₱	₲	₳
160	á	í	ó	ú	ñ	Ñ	º	º	¿	¬	½	¼	ı	«	»				
144	É	æ	Æ	ô	ö	ò	û	ù	ÿ	ö	ü	ç	£	¥	₹	f			
128	Ç	ü	é	á	ä	à	â	ç	ê	ë	è	ı	ı	ı	Ä	Å			
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~				
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o			
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_			
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O			
48	□	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?			
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/				
16																			
0																			
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15			

ANSI Symbol Set

240	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ
224	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
208	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ÿ
192	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
176	°	±	²	³	´	µ	¶	·	¸	¹	º	»	¼	½	¾	¿
160	¡	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	®	¯		
144	‘	’														
128																
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	⌘
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Bold Character Set

240																
224																
208																
192	€															
176	\$	£	¥	₹	₠	₡	₢	₣	₤	₥	₦	₧	₨	₩	₪	€
160										½						
144										¢						
128																
112																
96																
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

OCRA Character Set

240																
224																
208																
192																
176	¢	£	¥	¤	ƒ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	
160																
144										◊						
128																
112																
96																
80	P	Q	R	S	T	U	V	W	X	Y	Z					
64	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	
48	0	1	2	3	4	5	6	7	8	9	<	>				
32	"	¢	∕							+	,	-	.	/		
16																
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 100 (Macintosh)

240	Ò	Ú	Û	Ù	ı	ˆ	˜	-	˘	˙	˚	˛	˜	˘		
224	‡	·	,	„	%	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	ˆ	
208	—	—	”	”	’	’	÷	◊	ÿ	ÿ	/	€	<	>	fi	fl
192	¿	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
176	∞	±	≤	≥	¥	μ	∂	Σ	Π	π	∫	∞	∞	∞	∞	∞
160	†	°	¢	£	§	•	¶	β	®	©	™	’	”	≠	Æ	Ø
144	ê	ë	í	ï	î	ï	ñ	ó	ò	ô	ö	õ	ú	ù	û	ü
128	Ä	Å	Ç	É	Ñ	Ö	Ü	á	à	â	ã	ä	å	ç	é	è
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 101 (Wingdings)

240	⇄	⇅	⇆	⇇	⇈	⇉	⇊	⇋	⇌	⇍	⇎	✕	✓	☒	☑	☒	☑
224	→	↑	↓	↖	↗	↘	↙	←	→	↗	↘	↙	↘	↙	↘	↙	↘
208	☒	☑	☒	☑	☒	☑	☒	☑	☒	☑	☒	☑	☒	☑	☒	☑	☒
192	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚	⌚
176	⊕	⊖	⊗	⊘	⊙	⊚	⊛	⊜	⊝	⊞	⊟	⊠	⊡	⊢	⊣	⊤	⊥
160	•	○	◉	◐	◑	◒	◓	◔	◕	◖	◗	◘	◙	◚	◛	◜	◝
144	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑
128	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰
112	□	□	□	◆	◆	◆	◆	◆	◆	◆	◆	◆	◆	◆	◆	◆	◆
96	Ⅱ	Ⅲ	Ⅳ	Ⅴ	Ⅵ	Ⅶ	Ⅷ	Ⅷ	Ⅸ	Ⅹ	Ⅹ	Ⅺ	Ⅻ	Ⅻ	Ⅼ	Ⅽ	Ⅾ
80	☾	☽	☼	☹	☺	☻	☼	☽	☾	☽	☾	☽	☾	☽	☾	☽	☾
64	☾	☽	☼	☹	☺	☻	☼	☽	☾	☽	☾	☽	☾	☽	☾	☽	☾
48	☾	☽	☼	☹	☺	☻	☼	☽	☾	☽	☾	☽	☾	☽	☾	☽	☾
32	☾	☽	☼	☹	☺	☻	☼	☽	☾	☽	☾	☽	☾	☽	☾	☽	☾
16																	
0																	
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	

Code Page 437 (Latin U.S.)

240	≡	±	≥	≤			÷	≈	°	·	·	√	n	²	■		
224	α	β	Γ	Π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	ε	φ	ε	∩	
208	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
192	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
176	⋮	⋮	⋮														
160	á	í	ó	ú	ñ	Ñ	ª	º	¿	¡	½	¼	¡	«	»		
144	É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	¢	£	¥	Pts	f	
128	Ç	ü	é	â	ä	à	á	ç	ê	ë	è	ï	î	í	Ä	Å	
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~		
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_	
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?	
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/		
16																	
0																	
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	

Code Page 850 (Latin 1)

240	-	±	=	¼	¶	§	+	,	°	¨	·	¹	³	²	■
224	Ó	ß	Ô	Ö	ø	Õ	µ	þ	Þ	Ú	Û	Ü	ý	Ý	´
208	ð	Ð	Ê	Ë	È	Í	Î	Ï							
192											¡	¢	£	¤	¥
176	¦	§	¨	©											
160							¡	¢	£	¤	¥	¦	§	¨	©
144															
128			¡	¢	£	¤	¥	¦	§	¨	©				
112								{		}	~				
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
16															
0															
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14

Code Page 852 (Latin 2)

240	-	¨										¡	¢	£	¤
224	Ó	ß	Ô	Ñ	ñ	Š	š	Ŕ	Ú	Ů	ý	Ý			
208	đ	Ð	Ď	Ě	ď	Ň	í	î	ě						
192											¡	¢	£	¤	¥
176	¦	§	¨	©											
160							¡	¢	£	¤	¥	¦	§	¨	©
144															
128			¡	¢	£	¤	¥	¦	§	¨	©				
112								{		}	~				
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
16															
0															
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14

Code Page 855 (Russian)

240	-	ы	Ы	э	Э	ш	Ш	щ	Щ	ч	Ч	§	■			
224	Я	р	Р	с	С	т	Т	у	У	ж	Ж	в	В	ь	Ь	№
208	л	Л	м	М	н	Н	о	О	п	П	■	■	■	■	■	■
192	Л	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
176	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
160	а	А	б	Б	ц	Ц	д	Д	е	Е	ф	Ф	г	Г	«	»
144	ль	ЛЬ	нь	НЬ	һ	Һ	к	К	й	Й	ц	Ц	ю	Ю	ъ	Ъ
128	ђ	Ђ	ѓ	Ѓ	ё	Ё	є	Є	ѕ	Ѕ	і	І	ї	Ї	ј	Ј
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 857 (IBM Turkish)

240	-	±	¼	¶	§	÷	,	.	1	2	3	4	5	6	7	8
224	Ó	ß	Ô	Ò	ö	Õ	µ	x	Ú	Û	Ü	ı	ÿ	ı	ı	ı
208	°	ª	Ê	Ë	È	İ	Î	Ï	┘	┘	┘	┘	┘	┘	┘	┘
192	Л	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
176	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
160	á	í	ó	ú	ñ	Ñ	Ğ	ğ	ı	®	¼	½	¾	ı	ı	ı
144	É	æ	Æ	ô	ö	ò	ù	ü	ı	Ö	Ü	ø	£	Ø	§	§
128	Ç	ü	é	â	ä	à	â	ç	ê	ë	è	ı	ı	ı	ı	ı
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 860 (MS-DOS Portuguese))

240	≡	±	≥	≤		∕	≈	°	·	√	n	²	■			
224	α	β	γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	∞	φ	ε	∩
208	⊥	⊢	⊣	⊤	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
192	L	⊥	T	⊥	-	+	⊥	⊥	⊥	⊥	⊥	⊥	=	⊥	⊥	
176	⊥	⊥	⊥		⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
160	á	í	ó	ú	ñ	Ñ	ª	º	¿	Ò	¬	½	¼	;	«	»
144	É	À	È	ô	õ	ò	Ú	ù	ì	Õ	Ü	φ	£	Ù	Ps	Ó
128	Ç	ü	é	â	ã	à	Á	ç	ê	Ê	è	í	Ô	ì	Ã	Â
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 1250 (Latin 2)

240	đ	ń	ň	ó	ô	õ	÷	ř	ů	ú	ů	ü	ý	ţ	·	
224	í	á	â	ă	ä	á	ć	ç	č	é	ę	ë	ě	í	î	đ
208	Đ	Ń	Ň	Ó	Ô	Õ	×	Ř	Ů	Ú	Ů	Ü	Ý	Ț	β	
192	Ř	Á	Â	Ă	Ä	Á	Ć	Ç	Č	É	Ę	Ë	Ě	Í	Î	Đ
176	°	±	·	†	'	μ	¶	·	·	ª	§	»	Ł	"	ı	ż
160	˘	˘	ł	×	Å	ı	§	·	©	§	«	¬	-	®	Ž	
144	`	´	"	"	•	-	-	™	š	>	ś	ť	ž	ż		
128	€	,	„	„	...	†	‡	‰	Š	<	Ś	Ť	Ž	Ż		
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 1251 (Cyrillic)

240	р	с	т	у	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	ю	я
224	а	б	в	г	д	е	ж	з	и	й	к	л	м	н	о	п
208	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	Ю	Я
192	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П
176	°	±	І	і	Г	μ	¶	·	ё	№	€	»	ј	Ѕ	ѕ	ї
160	Ў	ў	Ј	ѣ	Г	І	Ѕ	Ё	©	€	«	¬	-	®	İ	
144	ђ	‘	’	”	”	•	-	-	™	љ	>	њ	ќ	ћ	џ	
128	Ђ	Ѓ	,	ѓ	„	...	†	‡	€	‰	Љ	<	Њ	Ќ	Џ	
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	16

Code Page 1252 (Latin 1)

240	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ
224	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
208	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ÿ
192	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
176	°	±	²	³	´	μ	¶	·	¸	¹	º	»	¼	½	¾	¿
160	ı	ç	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯	
144	`	‘	’	”	”	•	-	-	™	š	>	œ	ž	ÿ		
128	€	,	ƒ	„	...	†	‡	^	‰	Š	<	Œ	Ž			
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	16

Code Page 1253 (Greek)

240	π ρ ς σ τ υ φ χ ψ ω ï ü ó ú ó
224	Û α β γ δ ε ζ η θ ι κ λ μ ν ξ ο
208	Π Ρ Σ Τ Υ Φ Χ Ψ Ω Ï ÿ á é ĥ í
192	Î Α Β Γ Δ Ε Ζ Η Θ Ι Κ Λ Μ Ν Ξ Ο
176	° ± ² ³ ´ μ ¶ · ¸ ¹ º » ¼ ½ ¾ γ ω
160	ˆ ˘ ˙ ˚ ˛ ˜ ˝ ˞ ˠ ˡ ˢ ˣ ˤ ˥ ˦ ˧ ˨ ˩
144	ˆ ˘ ˙ ˚ ˛ ˜ ˝ ˞ ˠ ˡ ˢ ˣ ˤ ˥ ˦ ˧ ˨ ˩
128	€ , f „ ... † ‡ ‰ ‹
112	p q r s t u v w x y z { } ~
96	` a b c d e f g h i j k l m n o
80	P Q R S T U V W X Y Z [\] ^ _
64	@ A B C D E F G H I J K L M N O
48	0 1 2 3 4 5 6 7 8 9 : ; < = > ?
32	! " # \$ % & ' () * + , - . /
16	
0	
	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Code Page 1254 (Turkish)

240	ğ ñ ò ó ô õ ö ÷ ø ù ú û ü ı ş ŷ
224	à á â ã ä å æ ç è é ê ë ì í î ï
208	Ğ Ñ Ò Ó Ô Õ Ö × Ø Ù Ú Û Ü İ Ş ß
192	À Á Â Ã Ä Å Æ Ç È É Ê Ë Ì Í Î Ï
176	° ± ² ³ ´ μ ¶ · ¸ ¹ º » ¼ ½ ¾ ¿
160	ˆ ˘ ˙ ˚ ˛ ˜ ˝ ˞ ˠ ˡ ˢ ˣ ˤ ˥ ˦ ˧ ˨ ˩
144	ˆ ˘ ˙ ˚ ˛ ˜ ˝ ˞ ˠ ˡ ˢ ˣ ˤ ˥ ˦ ˧ ˨ ˩
128	€ , f „ ... † ‡ ‰ ‹
112	p q r s t u v w x y z { } ~
96	` a b c d e f g h i j k l m n o
80	P Q R S T U V W X Y Z [\] ^ _
64	@ A B C D E F G H I J K L M N O
48	0 1 2 3 4 5 6 7 8 9 : ; < = > ?
32	! " # \$ % & ' () * + , - . /
16	
0	
	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Code Page 1255 (Hebrew)

240	ן	ס	ע	ך	פ	ץ	צ	ק	ר	ש	ת				
224	א	ב	ג	ד	ה	ו	ז	ח	ט	י	ך	כ	ל	ם	ן
208					:	ן	י	"	'	"					
192															
176	°	±	²	³	´	µ	¶	·	¸	¹	÷	»	¼	½	¾
160	ı	¢	£	¤	¥	¦	§	"	©	×	«	¬	-	®	¯
144	\	'	"	"	•	-	-	~	™	>					
128	€	,	f	"	...	†	‡	^	%	‰	<				
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
16															
0															
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
	15														

Code Page 1256 (Arabic)

240															
224	à	Ā	â	م	ن	ه	و	ç	è	é	ê	ë	ی	آ	İ
208	ذ	ر	ز	س	ش	ص	ض	ط	ظ	ع	غ	ف	ق	ك	ڤ
192	ء	أ	ؤ	إ	ئ	ب	ة	ت	ث	ج	ح	خ	د	ڤ	ڤ
176	°	±	²	³	´	µ	¶	·	¸	¹	؛	»	¼	½	¾
160	ı	¢	£	¤	¥	¦	§	"	©	×	«	¬	-	®	¯
144	گ	\	'	"	"	•	-	-	ک	™	>	œ		ı	
128	€	پ	,	f	"	...	†	‡	^	%	‰	<	Œ	ج	ز
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/
16															
0															
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
	15														

Code Page 1257 (Baltic)

240	š	ń	ņ	ó	ō	õ	ö	÷	ų	ł	ś	ū	ü	ž	ž	·
224	ą	į	ā	ć	ä	â	ę	ē	č	é	ž	è	ğ	ķ	ī	ļ
208	Š	Ń	Ņ	Ó	Ō	Õ	Ö	×	Ų	Ł	Ś	Ū	Ü	Ž	Ž	β
192	Ą	Į	Ā	Ć	Ä	Â	Ę	Ē	Č	É	Ž	È	Ğ	Ķ	Ī	Ļ
176	°	±	²	³	´	µ	¶	·	ø	¹	²	»	¼	½	¾	æ
160		¢	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯	Æ
144	`	'	"	"	•	-	-	™	>							
128	€	,	,	„	…	†	‡	‰	<							
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Code Page 1258 (Vietnamese)

240	đ	ñ	.	ó	ô	ơ	ö	÷	ø	ù	ú	û	ü	ư	đ	ÿ
224	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	í	î	ï	
208	Đ	Ñ	.	Ó	Ô	Ơ	Ö	×	Ø	Ù	Ú	Û	Ü	Ư	~	β
192	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Î	Ï	
176	°	±	²	³	´	µ	¶	·	ø	¹	º	»	¼	½	¾	¿
160		¢	£	¤	¥	¦	§	¨	©	ª	«	¬	-	®	¯	—
144	`	'	"	"	•	-	-	™	>	œ						ÿ
128	€	,	f	„	…	†	‡	‰	<	Œ						
112	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
96	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
64	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
48	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
32	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
16																
0																
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

ASCII to Hexadecimal Conversion Chart

Use the chart below to translate the characters printed on your test label. The chart lists ASCII characters and their hexadecimal and decimal equivalents.

Char.	Hex	Decimal	Char.	Hex	Decimal
NUL	00	0	DC2	12	18
SOH	01	1	DC3	13	19
STX	02	2	DC4	14	20
ETX	03	3	NAK	15	21
EOT	04	4	SYN	16	22
ENQ	05	5	ETB	17	23
ACK	06	6	CAN	18	24
BEL	07	7	EM	19	25
Backspace	08	8	SUB	1A	26
Tab	09	9	Escape	1B	27
linefeed	0A	10	file separator	1C	28
vertical tab	0B	11	group separator	1D	29
form feed	0C	12	record separator	1E	30
carriage return	0D	13	unit separator	1F	31
SO	0E	14	space	20	32
SI	0F	15	!	21	33
DLE	10	16	"	22	34
DC1	11	17	#	23	35

ASCII to Hexadecimal Conversion Chart (continued)

Char.	Hex	Decimal	Char.	Hex	Decimal
\$	24	36	;	3B	59
%	25	37	<	3C	60
&	26	38	=	3D	61
'	27	39	>	3E	62
(28	40	?	3F	63
)	29	41	@	40	64
*	2A	42	A	41	65
+	2B	43	B	42	66
,	2C	44	C	43	67
-	2D	45	D	44	68
.	2E	46	E	45	69
/	2F	47	F	46	70
0	30	48	G	47	71
1	31	49	H	48	72
2	32	50	I	49	73
3	33	51	J	4A	74
4	34	52	K	4B	75
5	35	53	L	4C	76
6	36	54	M	4D	77
7	37	55	N	4E	78
8	38	56	O	4F	79
9	39	57	P	50	80
:	3A	58	Q	51	81

ASCII to Hexadecimal Conversion Chart (continued)

Char.	Hex	Decimal	Char.	Hex	Decimal
R	52	82	i	69	105
S	53	83	j	6A	106
T	54	84	k	6B	107
U	55	85	l	6C	108
V	56	86	m	6D	109
W	57	87	n	6E	110
X	58	88	o	6F	111
Y	59	89	p	70	112
Z	5A	90	q	71	113
[5B	91	r	72	114
\	5C	92	s	73	115
]	5D	93	t	74	116
^	5E	94	u	75	117
_	5F	95	v	76	118
`	60	96	w	77	119
a	61	97	x	78	120
b	62	98	y	79	121
c	63	99	z	7A	122
d	64	100	{	7B	123
e	65	101		7C	124
f	66	102	}	7D	125
g	67	103	~	7E	126
h	68	104	delete	7F	127

Binary to Hex Conversion Chart

Binary	Hex	Binary	Hex
00000000	00	00100000	20
00000001	01	00100001	21
00000010	02	00100010	22
00000011	03	00100011	23
00000100	04	00100100	24
00000101	05	00100101	25
00000110	06	00100110	26
00000111	07	00100111	27
00001000	08	00101000	28
00001001	09	00101001	29
00001010	0A	00101010	2A
00001011	0B	00101011	2B
00001100	0C	00101100	2C
00001101	0D	00101101	2D
00001110	0E	00101110	2E
00001111	0F	00101111	2F
00010000	10	00110000	30
00010001	11	00110001	31
00010010	12	00110010	32
00010011	13	00110011	33
00010100	14	00110100	34
00010101	15	00110101	35
00010110	16	00110110	36
00010111	17	00110111	37
00011000	18	00111000	38
00011001	19	00111001	39
00011010	1A	00111010	3A
00011011	1B	00111011	3B
00011100	1C	00111100	3C
00011101	1D	00111101	3D
00011110	1E	00111110	3E
00011111	1F	00111111	3F

Binary to Hexadecimal Conversion Chart (continued)

Binary	Hex	Binary	Hex
01000000	40	01100000	60
01000001	41	01100001	61
01000010	42	01100010	62
01000011	43	01100011	63
01000100	44	01100100	64
01000101	45	01100101	65
01000110	46	01100110	66
01000111	47	01100111	67
01001000	48	01101000	68
01001001	49	01101001	69
01001010	4A	01101010	6A
01001011	4B	01101011	6B
01001100	4C	01101100	6C
01001101	4D	01101101	6D
01001110	4E	01101110	6E
01001111	4F	01101111	6F
01010000	50	01110000	70
01010001	51	01110001	71
01010010	52	01110010	72
01010011	53	01110011	73
01010100	54	01110100	74
01010101	55	01110101	75
01010110	56	01110110	76
01010111	57	01110111	77
01011000	58	01111000	78
01011001	59	01111001	79
01011010	5A	01111010	7A
01011011	5B	01111011	7B
01011100	5C	01111100	7C
01011101	5D	01111101	7D
01011110	5E	01111110	7E
01011111	5F	01111111	7F

Binary to Hexadecimal Conversion Chart (continued)

Binary	Hex	Binary	Hex
1000000	80	1010000	A0
1000001	81	1010001	A1
1000010	82	1010010	A2
1000011	83	1010011	A3
1000100	84	10100100	A4
1000101	85	10100101	A5
1000110	86	10100110	A6
1000111	87	10100111	A7
10001000	88	10101000	A8
10001001	89	10101001	A9
10001010	8A	10101010	AA
10001011	8B	10101011	AB
10001100	8C	10101100	AC
10001101	8D	10101101	AD
10001110	8E	10101110	AE
10001111	8F	10101111	AF
10010000	90	10110000	B0
10010001	91	10110001	B1
10010010	92	10110010	B2
10010011	93	10110011	B3
10010100	94	10110100	B4
10010101	95	10110101	B5
10010110	96	10110110	B6
10010111	97	10110111	B7
10011000	98	10111000	B8
10011001	99	10111001	B9
10011010	9A	10111010	BA
10011011	9B	10111011	BB
10011100	9C	10111100	BC
10011101	9D	10111101	BD
10011110	9E	10111110	BC
10011111	9F	10111111	BF

Binary to Hexadecimal Conversion Chart (continued)

Binary	Hex	Binary	Hex
11000000	C0	11100000	E0
11000001	C1	11100001	E1
11000010	C2	11100010	E2
11000011	C3	11100011	E3
11000100	C4	11100100	E4
11000101	C5	11100101	E5
11000110	C6	11100110	E6
11000111	C7	11100111	E7
11001000	C8	11101000	E8
11001001	C9	11101001	E9
11001010	CA	11101010	EA
11001011	CB	11101011	EB
11001100	CC	11101100	EC
11001101	CD	11101101	ED
11001110	CE	11101110	EE
11001111	CF	11101111	EF
11010000	D0	11110000	F0
11010001	D1	11110001	F1
11010010	D2	11110010	F2
11010011	D3	11110011	F3
11010100	D4	11110100	F4
11010101	D5	11110101	F5
11010110	D6	11110110	F6
11010111	D7	11110111	F7
11011000	D8	11111000	F8
11011001	D9	11111001	F9
11011010	DA	11111010	FA
11011011	DB	11111011	FB
11011100	DC	11111100	FC
11011101	DD	11111101	FD
11011110	DE	11111110	FE
11011111	DF	11111111	FF

Dot to Run Length Encoding Chart

ON (Black) Dots

# of Dots	Code	# of Dots	Code
1	A	14	N
2	B	15	O
3	C	16	P
4	D	17	Q
5	E	18	R
6	F	19	S
7	G	20	T
8	H	21	U
9	I	22	V
10	J	23	W
11	K	24	X
12	L	25	Y
13	M	26	Z

OFF (White Dots)

# of Dots	Code	# of Dots	Code
1	a	14	n
2	b	15	o
3	c	16	p
4	d	17	q
5	e	18	r
6	f	19	s
7	g	20	t
8	h	21	u
9	i	22	v
10	j	23	w
11	k	24	x
12	l	25	y
13	m	26	z

FORMAT DESIGN TOOLS



Use copies of these worksheets and grids to create formats, batch data, and check digit schemes. You may want to keep copies of the completed forms for your records:

Batch Worksheet

Check Digit Worksheet

Supply Layout Grids (English, Metric, Dots)

Format Worksheet

Batch Worksheet

BATCH HEADER

B	B1 HEADER
	B2 FORMAT #
	B3 NEW / UPDATE
	B4 QUANTITY

BATCH CONTROL

M	E1 HEADER
	E2 FEED-MODE
	E3 BATCH-SEP
	E4 PRINT-MULT
	E5 MULT-PART
O	E6 CUT-TYPE
O	E7 CUT-MULT

BATCH DATA

FIELD #	DATA
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	

BATCH CONTINUATION

C	DATA
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	
C	

PRINT CONTROL

C	HEADER
	CONTRAST
	PRINT ADJUST
	MARGIN ADJUST
	SPEED ADJUST
O	PRINTHD WIDTH


Check Digit Worksheet

A1 HEADER	A2 SELECTOR #	A3 ACTION	A4 DEVICE	A5 MODULUS	A6 LENGTH	A7 ALGORITHM	WEIGHTS A8
A			R				


A1 HEADER	A2 SELECTOR #	A3 ACTION	A4 DEVICE	A5 MODULUS	A6 LENGTH	A7 ALGORITHM	WEIGHTS A8
A			R				

A1 HEADER	A2 SELECTOR #	A3 ACTION	A4 DEVICE	A5 MODULUS	A6 LENGTH	A7 ALGORITHM	WEIGHTS A8
A			R				


Supply Layout Grid - English

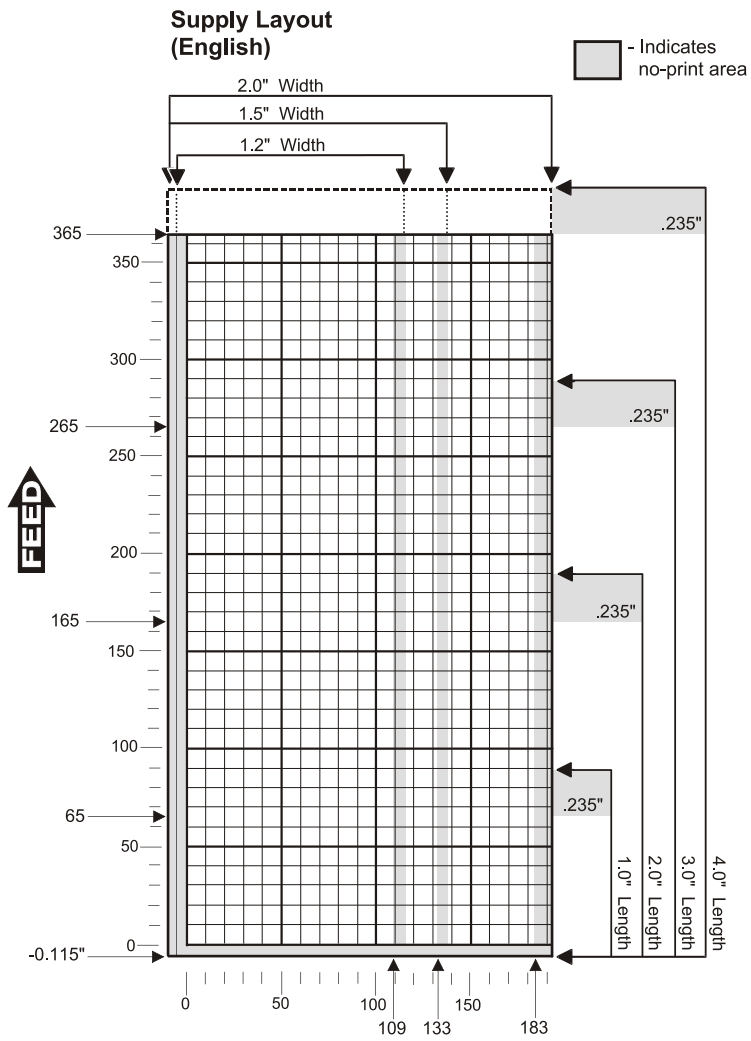

Supply Layout Grid - Metric

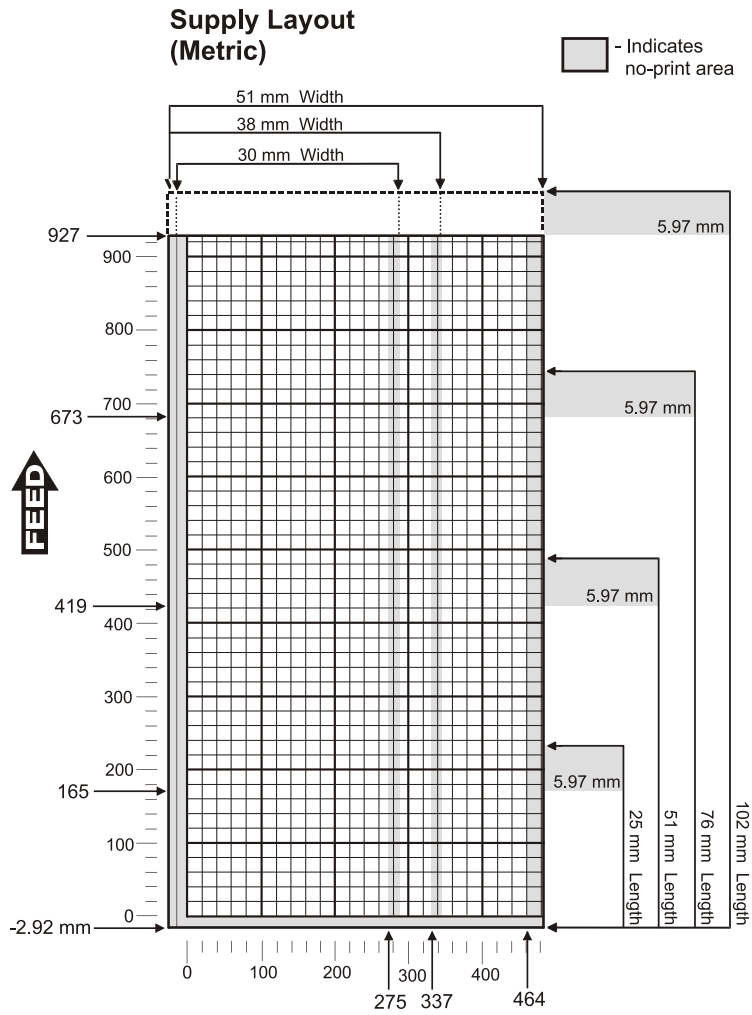

Supply Layout Grid - Graphic (Dots)

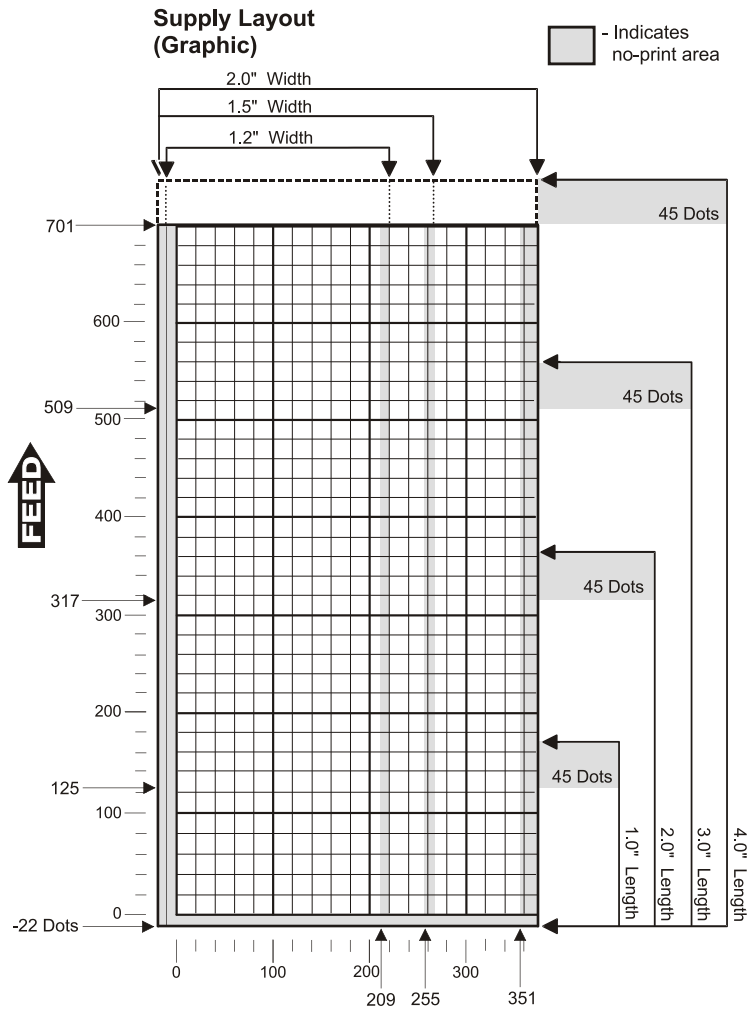

CONSTANT TEXT FIELDS

C1	HEADER
C2	ROW
C3	COLUMN
C4	GAP
C5	FONT
C6	HGT. MAG.
C7	WID. MAG.
C8	COLOR
C9	ALIGNMENT
C10	CHAR. ROT.
C11	FIELD ROT.
C12	FIXED CHAR. ("IN QUOTES")
C13	SYM. SET

NON-PRINTABLE TEXT FIELDS

D1	HEADER
D2	FIELD #
D3	# OF CHAR.
R1	HEADER
R2	CODE #
R3	FIXED CHAR. ("IN QUOTES")

BAR CODE FIELDS

B1	HEADER
B2	FIELD #
B3	# OF CHAR.
B4	FIX/VAR
B5	ROW
B6	COLUMN
B7	FONT
B8	DENSITY
B9	HEIGHT
B10	TEXT
B11	ALIGNMENT
B12	FIELD ROT.
R1	HEADER
R2	CODE #
R3	FIXED CHAR. ("IN QUOTES")
R1	HEADER
R2	CODE #
R3	SRC FIELD
R4	SRC START
R5	# TO COPY
R6	DEST. START
R7	COPY CODE
R1	HEADER
R2	CODE #
R3	GEN/VER
R4	CHECK DIGIT #
R1	HEADER
R2	CODE #
R3	DOT WIDTH NAR. ELEMENT
R4	DOT WIDTH WIDE ELEMENT
R5	ADDITIONAL CHAR. GAP
R6	ADDITIONAL NAR. SPACE
R7	ADDITIONAL WIDE SPACE
R1	HEADER
R2	CODE #
R3	SECURITY LEVEL
R4	STANDARD /DEFAULT
R1	HEADER
R2	CODE #
R3	ROW /COLUMN
R4	DIMENSION NUMBER
R1	HEADER
R2	CODE #
R3	INPUT (↵)

LINES

L1	HEADER
L2	TYPE
L3	ROW
L4	COLUMN
L5	ANGLE/END ROW
L6	LENGTH/END COL.
L7	THICKNESS
L8	PATTERN

FORMAT HEADER

F1	HEADER
F2	FORMAT #
F3	ACTION
F4	DEVICE
F5	MEASURE
F6	LENGTH
F7	WIDTH
R8	NAME. ("IN QUOTES")

OPTION #1 Fixed Characters

R1	HEADER
R2	CODE #
R3	FIXED CHAR. ("IN QUOTES")

GRAPHICS FIELDS

G1	HEADER
G2	GRAPH ID
G3	ROW
G4	COLUMN
G5	MODE
G6	ROTATION

BOXES

Q1	HEADER
Q2	ROW
Q3	COLUMN
Q4	END ROW
Q5	END COLUMN
Q6	THICKNESS
Q7	PATTERN

TEXT FIELDS

T1	HEADER
T2	FIELD #
T3	# OF CHAR.
T4	FIX/VAR
T5	ROW
T6	COLUMN
T7	GAP
T8	FONT
T9	HGT. MAG.
T10	WID. MAG.
T11	COLOR
T12	ALIGNMENT
T13	CHAR. ROT.
T14	FIELD ROT.
T15	SYM. SET
R1	HEADER
R2	CODE #
R3	FIXED CHAR. ("IN QUOTES")
R1	HEADER
R2	CODE #
R3	SRC FIELD
R4	SRC START
R5	# TO COPY
R6	DEST. START
R7	COPY CODE
R1	HEADER
R2	CODE #
R3	INPUT (↵)

OPTION #1 Fixed Characters **OPTION #4 Copy Data from Previous Field** **OPTION #31 Define Check Digit** **OPTION #50 Bar Code Densities** **OPTION #51 PDF417 Security / Truncation** **OPTION #52 PDF417 Aspect Ratio** **OPTION #61 Reimage Field**

R1	HEADER
R2	CODE #
R3	SECURITY LEVEL
R4	STANDARD /DEFAULT
R1	HEADER
R2	CODE #
R3	ROW /COLUMN
R4	DIMENSION NUMBER
R1	HEADER
R2	CODE #
R3	INPUT (↵)

FORMAT WORKSHEET

Format Name _____

Format # _____

Date _____

Supply Size _____

Supply Type _____

Customer Name _____

Software Version _____

GLOSSARY

Batch Data 2,"Monarch"	Defines the actual information (as fields within { }) printed on the label.
Batch Control E,0,0,1,1	Defines the print job (as a field).
Batch Header {B,1,N,1 }	First line of a batch, immediately following ({}). Identifies the format and batch quantity.
Batch Packet {B,1,N,1 2,"Monarch" }	Contains a batch header and the batch data. Enclosed within { }.
Bitmapped Fonts	Reside in the printer's memory. If you change the point size, you have changed the font. Magnifying these fonts causes some jaggedness to occur.
Buffer	Storage area in the printer's memory that holds specific data (images, formats, etc).
Field	Can be text, bar codes, lines, boxes, constant, or non-printable text. It is the result of a field definition.
Field Definition	Any string of parameters that pertain to one field. A field definition begins with a field identifier (such as T, B, D, C, etc.). T,1,10,V,250,50,0,1,1,1,B,C,0
Field Parameters	Parameters that apply to a field and are separated by commas. (In the above example, B is a field element for black print on a white background.)
Flash Memory	Contains information that is SAVED when the printer is turned off.
Format	Layout or design for your printed label.
Format Header	First line of a format, immediately following the start of packet ({}). A format header must begin with F, followed by various header elements. {F,1,A,R,E,600,400,"Fmt-1"
Monospaced Fonts	All characters have the same width and are easy to center justify. (Standard, bold, and reduced are monospaced.)
Option R,4,6,1,3,1	Any line within a format that applies special formatting to a field. This line always begins with R and must immediately follow the field it applies to.
Packet {B,1,N,1 2,"Monarch" }	Any string of characters within ({}).
Pre-image	A way to optimize the printer, because it images the fields while data is collected. After the last field is imaged, the label prints almost immediately.

Proportionally Spaced Fonts	All characters have different widths and are difficult to center justify (CG Triumvirate™ Typefaces).
Scalable Fonts	All characters are scalable and smooth at any point size. There are no jagged edges at any point size because the font is created from an equation every time it is used.
Soft (Downloaded) Fonts	Reside in the printer's RAM. They can be erased or overwritten.
TrueType Fonts	All characters follow the TrueType outline font standard. All characters are scalable and smooth at any point size.
Volatile RAM	Contains information that is LOST when the printer is turned off.

INDEX

A

adding custom fonts	5-15
algorithm,in sum of digits	3-10
algorithm,in sum of products	3-9
alignment,bar code	2-13
allocating memory	5-10

B

bar code alignment	2-13
bar codes	
alignment	2-13
character lengths	2-8
customizing density	3-5
Data Matrix	2-8, A-7
defining	2-7
defining aspect ratios	3-6
defining densities	3-5
density, syntax	3-5
determining distance	2-9
generating check digits	3-4
GS1 DataBar	2-7, A-10
justification	2-13
list of types	2-9
MaxiCode	2-8, A-4
PDF417 options	3-6
placing human readables	8-4
QR Code	2-7 - A-8
rotating	2-13
selecting a density	2-9
selecting human readables	2-13
batch	
canceling printing	5-8
clearing data from memory	5-14
overview of packet	6-1
batch control	
definition of term	G-1
batch control field	
defining	6-2
syntax	6-2
sample	6-2
batch data	
definition of term	G-1
sample w/special chars	6-3
batch data field	
defining	6-2
syntax	6-2
sample	6-2
using entered/copied data	6-3
batch header	
defining	6-1
definition of term	G-1
sample	6-2
syntax	6-2
using zero quantities	8-2
batch method of downloading explained	6-4

batch packet	
definition of term	G-1
batch quantity zero	
downloading explained	6-4
batch quantity, defined	6-1
baud rate selection	5-10
bitmap	
defining fields	4-9
defining next fields	4-9
defining the header	4-8
hexadecimal chart	C-16
hexadecimal method	4-2 - 4-3
overview	4-2
run length chart	C-20
run length method	4-2, 4-5
storing the image	4-6
bitmapped fonts	
definition of term	G-1
black to white print ratio	4-3
boxes	
defining	2-19
determining distances	2-19
buffer	
definition of term	G-1
scalable font	5-12
buffer size selection	5-10

C

calling technical support	7-2
changing	
bar code density	3-5
communication settings	5-10
control characters	5-7
memory configuration	5-10
security level of PDF417	3-6
character rotation	
in constant text field	2-15
in text field	2-5
characters	
magnifying font size	B-4
number of in bar code	2-7
number of in text	2-3
padding	3-4
placement of human readables	8-4
chart	
hexadecimal conversion	C-16
run length conversion	C-20
check digit option	
syntax	3-4
check digit schemes	
clearing from memory	5-14
customizing	3-9
syntax	3-9
using sum of digits	3-10
using sum of products	3-9
check digit worksheet	D-2
check digits	
generating	3-4

		<u>D</u>		
clearing packets	5-14			
code pages	C-1			
100 table	C-4			
101 table	C-5			
1250 table	C-8			
1251 table	C-9			
1252 table	C-9			
1253 table	C-10			
1254 table	C-10			
1255 table	C-11			
1256 table	C-11			
1257 table	C-12			
1258 table	C-12			
437 and 850	C-1			
437 table	C-5			
850 table	C-6			
852 table	C-6			
855 table	C-7			
857 table	C-7			
860 table	C-8			
ANSI table	C-3			
Bold table	C-3			
entering	C-2			
International characters	5-3			
OCRA table	C-4			
selecting	C-1			
color options of text	2-4, 2-15			
communication				
packet syntax	5-10			
configuration				
uploaded from printer	5-2			
configuration packets				
communication settings packet F	5-10			
control characters packet E	5-7			
guidelines	5-3			
header	5-2			
memory configuration packet M	5-10			
monetary formatting packet D	5-6			
overview	5-2			
print control packet C	5-5			
sample	5-2			
supply setup packet B	5-4			
system setup packet A	5-3			
constant text fields				
character rotation	2-15			
defining	2-14			
determining distances	2-14			
justification	2-15			
modifying character height	2-14			
modifying character width	2-14			
rotating	2-16			
sample	2-14, 2-16			
control characters				
factory defaults	1-3			
selecting	5-7			
selecting new	5-7			
copy data				
in partial form	3-4			
merging fields	3-3			
source field	3-3			
syntax	3-2 - 3-3			
copying data, using option 4	3-3			
Cyrillic characters	C-9			
		data		
		copy option 4	3-3	
		deciding on a field type	1-6	
		for batch	6-2	
		list of errors	7-3	
		padding option 30	3-4	
		picking a font	1-6	
		data stream		
		Data Matrix	A-7	
		examples	A-4	
		GS1 DataBar	A-10	
		Maxicode	A-4	
		QR Code	A-9	
		QR Code - structured	A-10	
		decimal point selection	5-6	
		decrementing fields		
		fixing the first number	3-7	
		syntax	3-7	
		using option 60	3-7	
		defining		
		bar code type	2-9	
		bar codes	2-7	
		batch control field	6-2	
		batch data field	6-2	
		batch header	6-1	
		bitmap fields	4-9	
		boxes	2-19	
		check digit scheme w/sod	3-10	
		check digit scheme w/sop	3-9	
		communication settings packet F	5-10	
		configuration header	5-2	
		constant text fields	2-14	
		control characters packet E	5-7	
		duplicate fields	4-10	
		font upload packet	5-15	
		graphic header	4-8	
		lines	2-17	
		memory configuration packet M	5-10	
		monetary formatting packet D	5-6	
		next-bitmap fields	4-9	
		print control packet C	5-5	
		supply setup packet B	5-4	
		system setup packet A	5-3	
		text fields	2-3	
		definition of terms	G-1	
		density		
		using option 50 to customize	3-5	
		design tools		
		about the grid	1-5	
		check digit worksheet	D-2	
		format worksheet	D-1	
		online configuration worksheet	D-2	
		worksheet overview	1-6	
		designing a format	1-4	
		drawing a sketch	1-5	
		field type considerations	1-6	
		filling in worksheets	1-6	
		font considerations	1-6	
		print area	1-4	
		using grids	1-5	
		worksheet overview	1-6	
		determining format content	1-4	
		device selection	5-10	

diagnostics			
list of data errors	7-3		
list of data format errors	7-9		
list of flash memory errors	7-11		
list of machine fault errors	7-10		
list of memory card errors	7-12		
direction of			
bar code field	2-13		
constant text character	2-15		
constant text field	2-16		
of lines	2-17		
text character	2-5		
text field	2-5		
double-byte fonts	B-15		
downloadable fonts			
buffer	5-12		
downloading			
batch method	6-4		
batch quantity zero method	6-4		
methods	6-3		
overview	6-1		
sequential method	6-3		
			E
enabling immediate commands	5-7		
erasing packets	5-14		
errors			
data, description of	7-3		
flash memory	7-11		
format	7-9		
hard printer failures	7-12		
machine faults	7-10		
memory card	7-12		
			F
features			
printer	1-1		
feed mode selection	6-2		
field			
bitmap, defining	4-9		
definition of term	G-1		
duplicate, defining	4-10		
next-bitmap, defining	4-9		
options	3-6		
field definition			
definition of term	G-1		
field elements			
definition of term	G-1		
field options			
brief list of	3-2		
calculating check digits	3-4		
copy data	3-3		
customized bar code density	3-5		
inc/dec fields	3-7		
ordering	3-2		
overview	3-2		
padding data	3-4		
price field	3-5		
restrictions	3-2		
security/truncation for PDF417	3-6		
using multiple	3-2		
width/length for PDF417	3-6		
fields			
bar code rotation	2-13		
batch control syntax	6-2		
batch data syntax	6-2		
constant text rotation	2-16		
deciding a type	1-6		
finding trailing spaces	8-4		
font considerations	1-6		
padding	3-4		
picking a font	1-6		
repeating parameters	8-3		
text field rotation	2-5		
types briefly described	1-6		
using a worksheet	1-6		
using data entry/copied fields	6-3		
fixed data			
in constant text field	2-16		
in text field	2-3		
flash memory			
definition of term	G-1		
list of errors	7-11		
storing images	4-6		
flow control selection	5-10		
font			
legal information	B-17		
overview	1-6		
scalable	B-14		
TrueType	B-1, B-15, B-17, C-2		
font packets			
clearing from memory	5-14		
font upload packet			
defining	5-15		
fonts			
double-byte	B-15		
monospaced magnification	B-4		
optimizing	8-3		
proportional magnification	B-5		
format header			
definition of term	G-1		
format worksheet	D-1		
overview	1-6		
formats			
buffer	5-12		
clearing from memory	5-14		
decisions to make	1-4		
defining bar codes	2-7		
defining boxes	2-19		
defining constant text fields	2-14		
defining lines	2-17		
defining text fields	2-3		
defining the header	2-2		
definition of term	G-1		
designing	1-4 - 1-5		
determining content	1-4		
field types described briefly	1-6		
filling in worksheets	1-6		
font considerations	1-6		
modifying	6-4		
print area	1-4		
referenced in batch packet	6-1		
sample	1-2		
using grids	1-5		
formatting errors			
list of	7-9		

G

generating check digits with option 31	3-4
graphic	
defining bitmap fields	4-9
defining duplicate fields	4-10
defining next-bitmap fields	4-9
defining the header	4-8
hexadecimal chart	C-16
hexadecimal method	4-2 - 4-3
including in a format	4-12
overview of bitmap	4-2
run length chart	C-20
run length method	4-2, 4-5
storing the image	4-6
graphic packets	
clearing from memory	5-14
grid	
overview	1-5

H

help, getting	7-2
hex graphic packet	
sample	4-10
human readable characters	
placement considerations	8-4
selecting for a bar code	2-13

I

image buffer	5-11
imaging	
repeating parameters	8-3
using zero batch headers	8-2
imaging time	
when to use scalable fonts	8-3
immediate commands	
enabling	5-7
sending	5-8
table	5-8
when to use	5-7
incrementing fields	
fixing the first number	3-7
restrictions	3-2
syntax	3-7
using option 60	3-7
International code pages	5-3

J

justification	
of bar code	2-13
of constant text fields	2-15
of text field	2-5

L

language, printer	5-3
Latin characters	C-5 - C-6, C-9
layout	
decisions to make	1-4
designing a label	1-4
grid	1-5
print area	1-4

rough sketches	1-5
length	
of a bar code field	2-7
of a text field	2-3
lines	
defining	2-17
defining as segment	2-17
defining as vectors	2-17
determining distances	2-17
thickness	2-18

M

machine errors	
list of	7-10
magnification	
considerations	8-4
of monospaced fonts	B-4
of proportional fonts	B-5
mapping	
method, hexadecimal	4-2 - 4-3
method, run length	4-2, 4-5
margin adjustment selection	5-5
MaxiCode	
data stream	A-4
information	A-4
measurement	
on a grid	1-5
memory	
allocating	5-10
clearing packets	5-14
packet syntax	5-10
storing images in flash	4-6
storing images in RAM	4-6
memory buffer	
downloadable fonts	5-12
format	5-12
image	5-11
receive	5-11
scalable font	5-12
transmit	5-11
memory card	
list of errors	7-12
merging	
copied data	3-3
fields with option 4	3-3
modifying formats	6-4
modulus	
description of check digit calc	3-9
in sum of digits	3-10
in sum of products	3-9
monetary	
decimal selection	5-6
formatting syntax	5-6
list of options	5-6
symbol selection	5-6
symbol setting	5-6
using price formatting	3-5
monospaced fonts	
definition of term	G-1
magnification of	B-4

O

online configuration worksheet	D-2
online mode selection	5-3
opaque overlay	
explanation	2-5
optimizing	
print quality	8-2
print speed	8-2
repeating field parameters	8-3
using zero batch quantities	8-2
option	
definition of term	G-1
optional entry method	6-4
options,field	3-5
brief list of	3-2
calculating check digits	3-4
copy data	3-3
customized bar code density	3-5
general overview	3-2
incrementing/decrementing	3-7
ordering	3-2
padding data	3-4
price formatting	3-5
restrictions	3-2
security/truncation for PDF417	3-6
using multiple	3-2
width/length for PDF417	3-6

P

packet	
definition of term	G-1
packet A	
syntax	5-3
packet B	
syntax	5-4
packet C	
syntax	5-5
packet control characters	
factory defaults	1-3
syntax	5-7
packet D	
syntax	5-6
packet E	
syntax	5-7
packet F	
syntax	5-10
packet M	
syntax	5-10
packets	
batch	6-1
check digit scheme	3-9
clearing from memory	5-14
configuration	5-2
configuration upload	5-2
guidelines	1-3
padding data	3-4
syntax	3-4
parameters	
definition of term	G-1
for batch control field	6-2
for batch data field	6-2
for batch header	6-2
repeating	8-3

parity selection	5-10
PDF417 bar codes	
security/truncation	3-6
width/length	3-6
placing	
human readables	8-4
point size	B-14
positioning	
graphic image in a field	4-7
graphic image in a format	4-8
graphic image in a packet	4-7
pre-image	
definition of term	G-1
price fields	
formatting option	3-5
monetary formatting	5-6
restrictions with check digits	3-5
restrictions with incrementing	3-2
syntax	3-5
print area	1-4
maximum size	1-4
print contrast	
setting	5-5
print control	
in batch control field	6-2
syntax	5-5
printer	
features	1-1
printer configuration	
communication settings packet F	5-10
control characters packet E	5-7
header	5-2
memory configuration packet M	5-10
monetary formatting packet D	5-6
packet C	5-5
packet guidelines	5-3
packet overview	5-2
packet sample	5-2
supply setup packet B	5-4
system setup packet A	5-3
upload syntax	5-2
printers	
data errors	7-3
data formatting errors	7-9
hard printer failure errors	7-12
machine fault errors	7-10 - 7-12
printing	
black to white ratio	4-3
canceling	5-8
overview	6-1
problems	
check digit miscalculated	3-5
getting technical support	7-2
human readables cut off	8-4
image time and changing data	8-3
image time and unchanging data	8-2
imaging time and repeating field parameters	8-3
invalid packet syntax	1-3
list of data errors	7-3
list of flash memory errors	7-11
list of format errors	7-9
list of hard printer failure errors	7-12
list of machine fault errors	7-10
list of memory card errors	7-12
missing/overlapping due to magnification	8-4

no check digit generated	3-4	sequential method downloading	6-4
off tag errors	8-4	supply setup packet B	5-4
poor print quality	8-2	system setup packet A	5-3
running out of printer memory	5-14	text field	2-3
programming conventions	1-3	scalable font	B-14
proportional fonts, magnification of	B-5	buffer	5-12
proportionally spaced fonts		definition of term	G-2
definition of term	G-2	information about	B-14
		schemes	
		customizing check digits	3-9
		security/truncation	
		using option 51	3-6
		segments	
		defining	2-17
		selecting bar code type	2-9
		selector, check digit	
		description of	3-9
		sending immediate commands	5-8
		sequential downloading	
		explained	6-3
		setting	
		battery voltage	5-5
		baud rate	5-10
		feed mode	5-4
		flow control	5-10
		format number	2-2
		language	5-3
		margin position	5-5
		monetary symbol	5-6
		number of decimal places	5-6
		online mode	5-3
		parity	5-10
		print contrast	5-5
		print position	5-5
		print speed	5-5
		printhead width	5-5
		ribbon	5-4
		stop bits	5-10
		supply size	2-2
		supply type/position	5-4
		unit of measure	2-2
		word length	5-10
		size of	
		monospaced fonts	B-4
		proportional fonts	B-5
		smart imaging	8-1
		soft fonts	
		definition of term	G-2
		source field, of copy data	3-3
		special chars	
		with batch data	6-3
		speed adjustment selection	5-5
		standard features	1-1
		standard fonts, list of	B-1
		stop bits selection	5-10
		storage device	4-6
		storing	
		images	4-6
		images in flash	4-6
		images in RAM	4-6
		sum of digits calculation	3-10
		sum of products calculation	3-9
		supply	
		about the layout grid	1-5
		measurement on a grid	1-5

R

RAM	
storing images	4-6
receive buffer	5-11
ribbon selection	5-4
rotating	
bar codes	2-13
constant text characters	2-15
constant text fields	2-16
text characters	2-5
text fields	2-5
rough sketches	1-5
run length graphic packet	
sample	4-11

S

sample	
bar code density option	3-5
batch control field	6-2
batch data field	6-2
batch header	6-2
batch method downloading	6-4
calculate check digit option	3-4
check digit scheme packet	3-9
communication settings packet F	5-10
configuration packet	5-2
control characters packet E	5-7
copy field	3-3
Data Matrix	A-7
Data Matrix with Function 1	A-7
font packet	5-16
font, bold style	B-5
format	A-2
format header	2-2
GS1 DataBar	A-10
GS1 DataBar - EAN13	A-10
GS1 DataBar - Expanded	A-10
GS1 DataBar - no composite	A-10
GS1 DataBar - Stacked Omni	A-10
hex graphic packet	4-10
immediate command	5-8
inc/dec field option	3-7
MaxiCode - Mode 0	A-5
MaxiCode - Mode 2	A-5
MaxiCode - Mode 3	A-6
memory configuration packet F	5-10
monetary formatting packet D	5-6
monospaced font magnification	B-4
padding data	3-4
price field option	3-5
print control packet C	5-5
printer configuration uploaded	5-2
proportional font magnification	B-5
run length graphic packet	4-11

type/position selection	5-4			<u>U</u>	
supply position					
setting	5-5	unit of measure			
supply setup		setting	2-2		
syntax	5-4	uploading			
supply type		configuration	5-2		
setting	5-5	font packet	5-15		
symbol set	C-1			<u>V</u>	
ANSI	C-1				
entering	C-2	variable length			
Internal table	C-2	padding for	3-4		
options	2-6	vector fonts buffer	5-12		
selecting	C-1	vectors			
symbols		defining	2-17		
monetary	3-5	Vietnamese characters	C-12		
syntax		volatile RAM			
communication settings packet F	5-10	definition of term	G-2		
constant text field	2-14, 2-16	voltage selection	5-5		
font upload packet	5-15			<u>W</u>	
format header	2-2	width/length			
memory configuration packet M	5-10	using option 52	3-6		
monetary formatting packet D	5-6	word length selection	5-10		
packet control characters packet E	5-7	worksheet			
print control packet C	5-5	check digit	D-2		
printer configuration upload	5-2	filling in	1-6		
supply setup packet B	5-4	format	D-1		
system setup packet A	5-3	online configuration	D-2		
system setup		overview	1-6		
syntax	5-3				
				<u>T</u>	
table					
bar code lengths	2-8				
fixed/variable bar codes	2-8				
hexadecimal conversion	C-16				
immediate commands	5-8				
run length conversion	C-20				
special chars w/batch data	6-3				
technical support	7-2				
terms defined	G-1				
text fields					
character rotation	2-5				
color attributes	2-4, 2-15				
defining	2-3				
determining distances	2-3				
justification	2-5				
modifying character height	2-4				
modifying character spacing	2-4, 2-14				
modifying character width	2-4				
placing proportionally spaced characters	2-3				
rotating	2-5				
syntax	2-3				
thickness					
line	2-18				
trailing spaces					
finding	8-4				
transmit buffer	5-11				
transparent overlay					
explanation	2-5				
TrueType font	B-1, B-15, B-17, C-2				
types of fields					
brief description	1-6				



028028

Avery Dennison Printer Systems Division
170 Monarch Lane
Miamisburg, OH 45342

1-800-543-6650 (In the U.S.A.)
1-800-387-4740 (In Canada)
www.monarch.com

